


Electric Standing Desk


Perledeign-Series

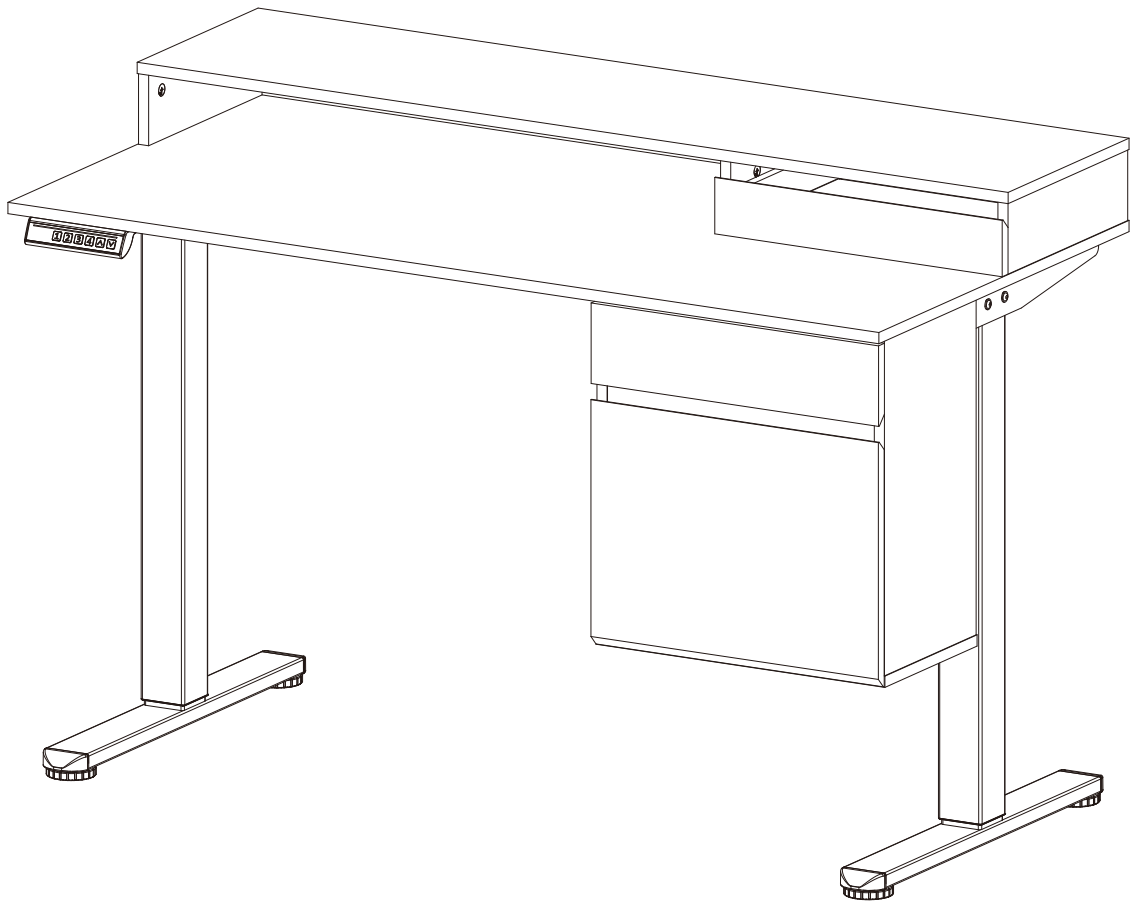



HNESD213-120A

Note


The product is packed into two separate parcels. Please make sure both parcels are received before assembly. To assemble, follow the instruction manual for HNESD213-120A.

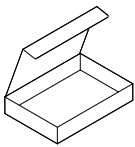

Box for HNESD217
Frame + Other Parts

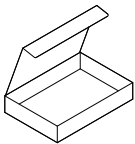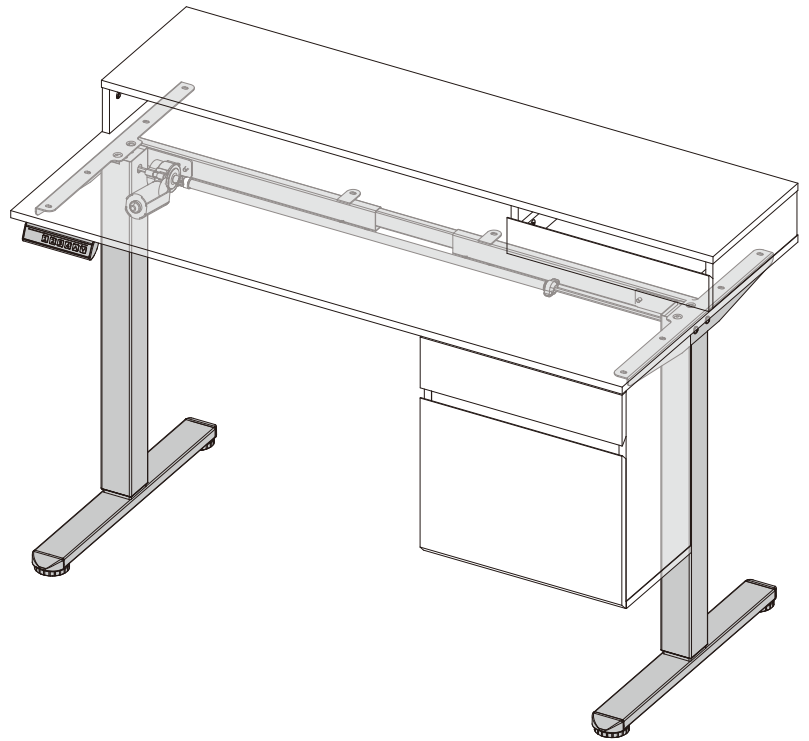

Box for HNESD213-120A
Desktop + Cabinet

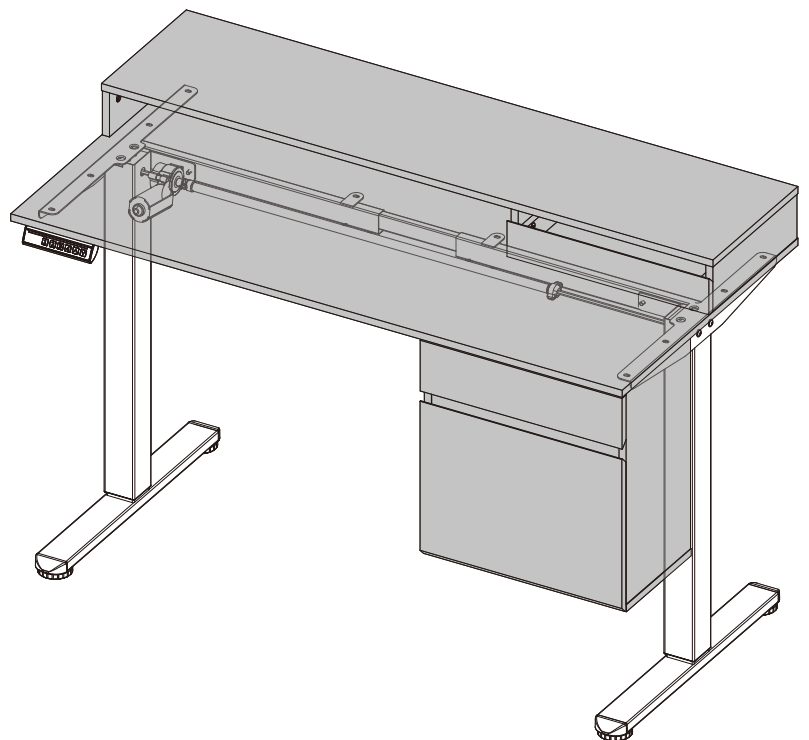






Height Adjustment Range
28.3–46.5" (72–118cm)



Power Input
100V–240V



Max. Speed
20mm/s

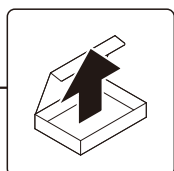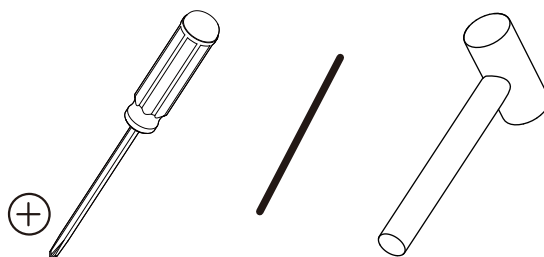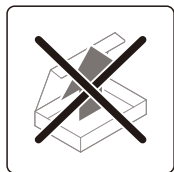

Accessories contained in box for HNESD217



M6 x 11mm
A x 22



 
M8 x 12mm
B x 4



M6 x 12mm
C x 2



M5 x 12mm
D x 2



M6 x 35mm
E x 8



3/16" (5mm)
F x 1

 


5/64" (2mm)
G x 1



H x 2

Accessories contained in box for HNESD213–120A




Ø6 x 35mm
I x 34




Ø15 x 11mm
J1 x 22



 
Ø15 x 9mm
J2 x 12




Ø8 x 30mm
K1 x 36

 

Ø6 x 30mm
K2 x 8

 


Ø6 x 50mm
L x 14

 

Ø4 x 38mm
M x 12






N x 1






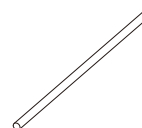


O x 2








support@bsqworld.com

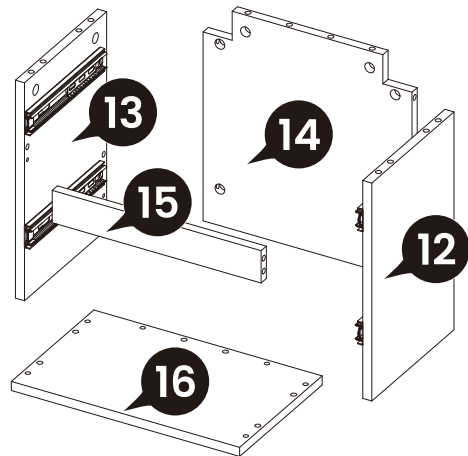
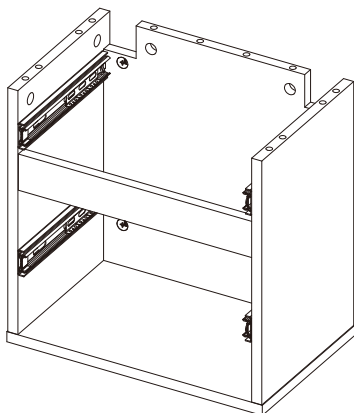
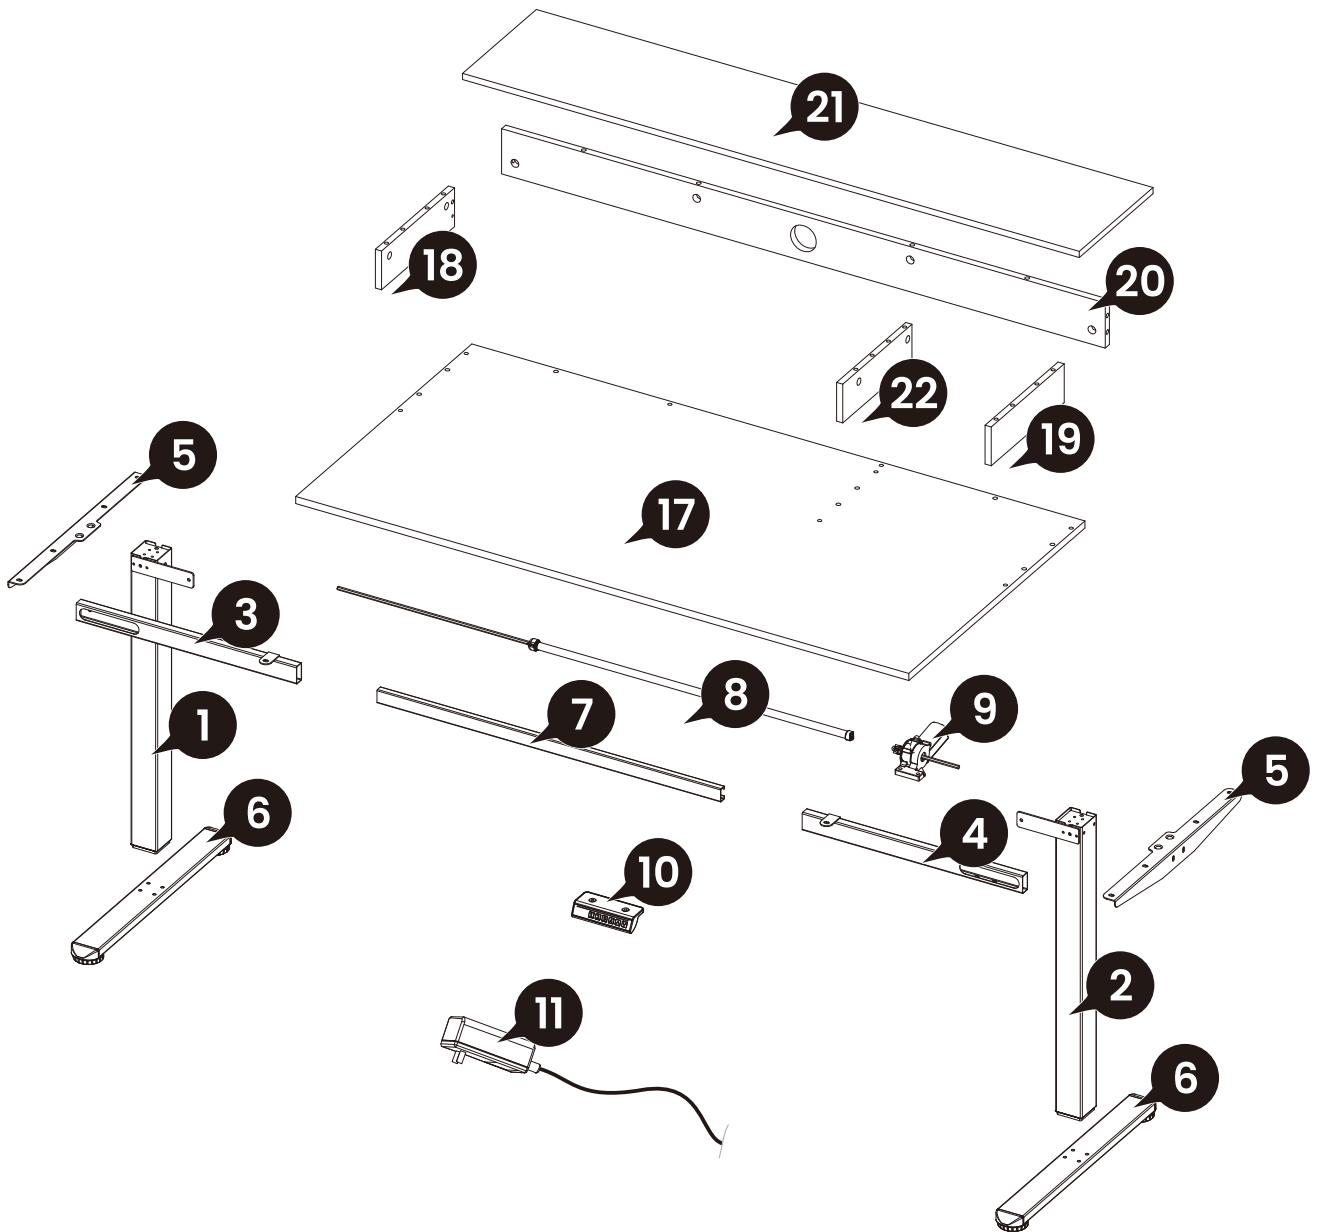


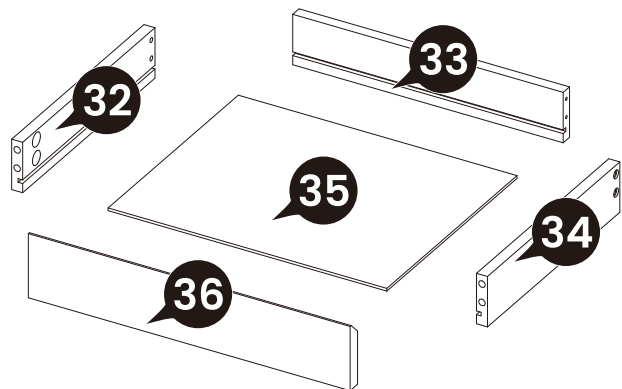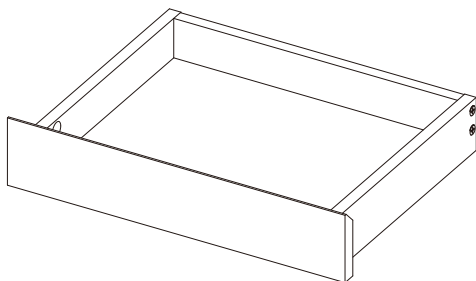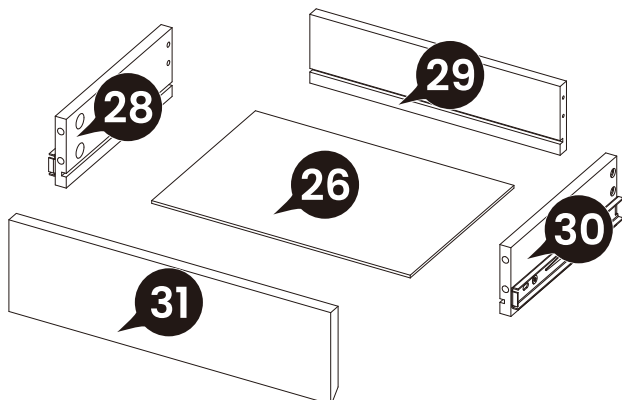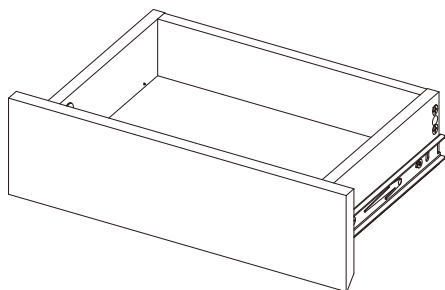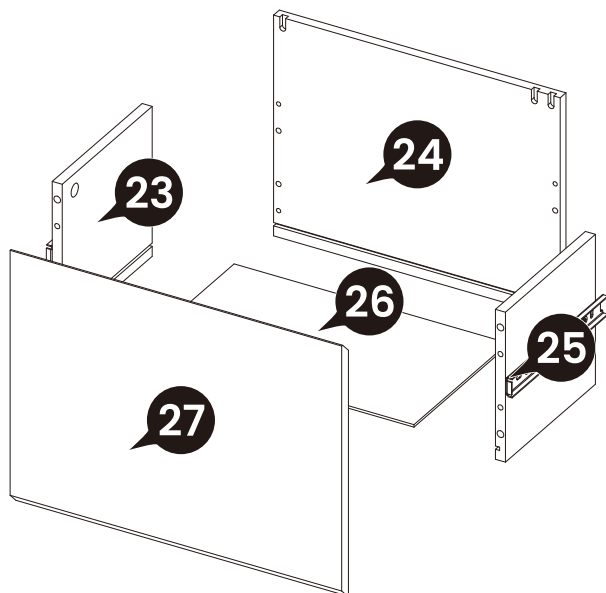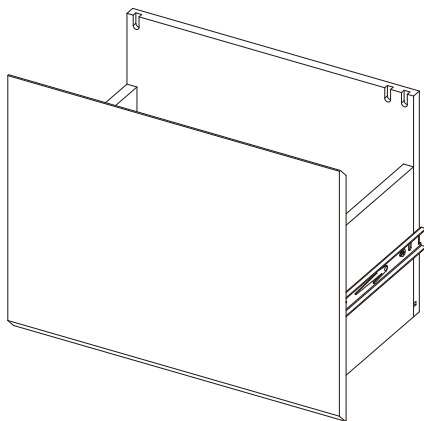


1

Assembling the Frame

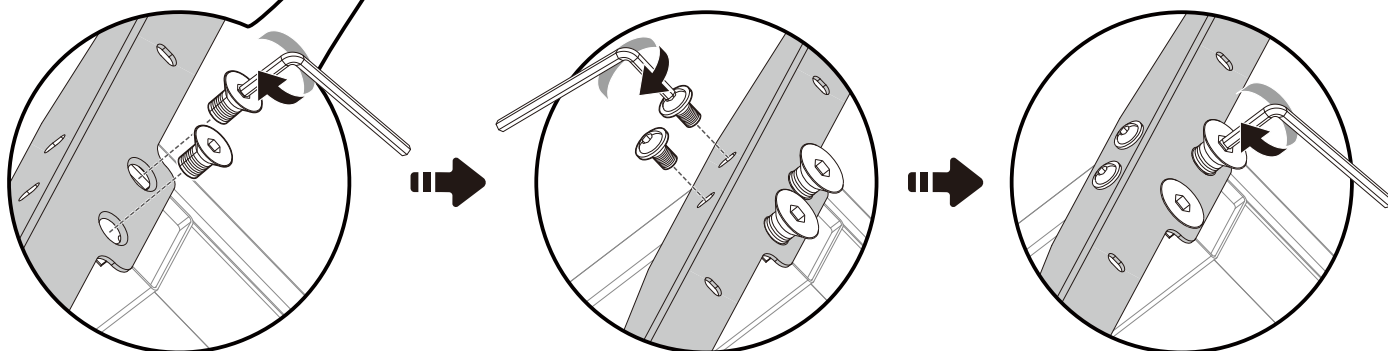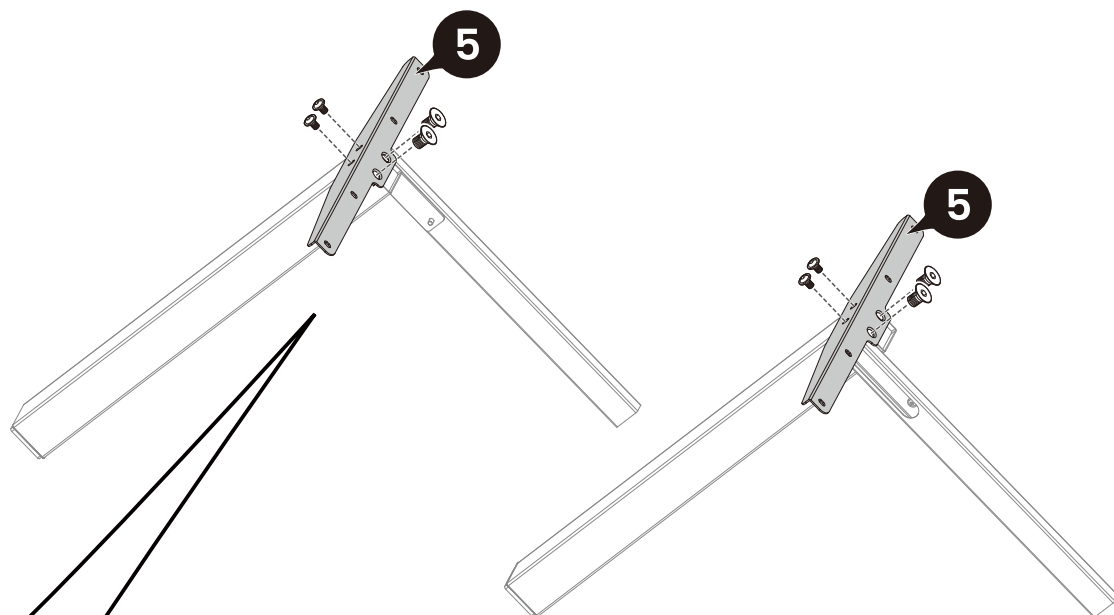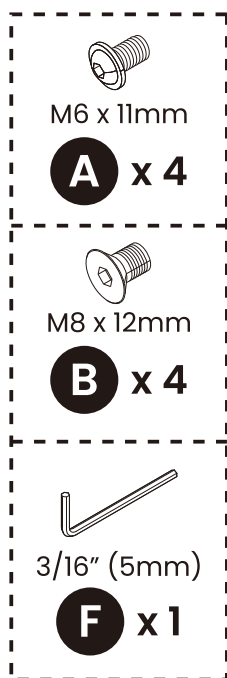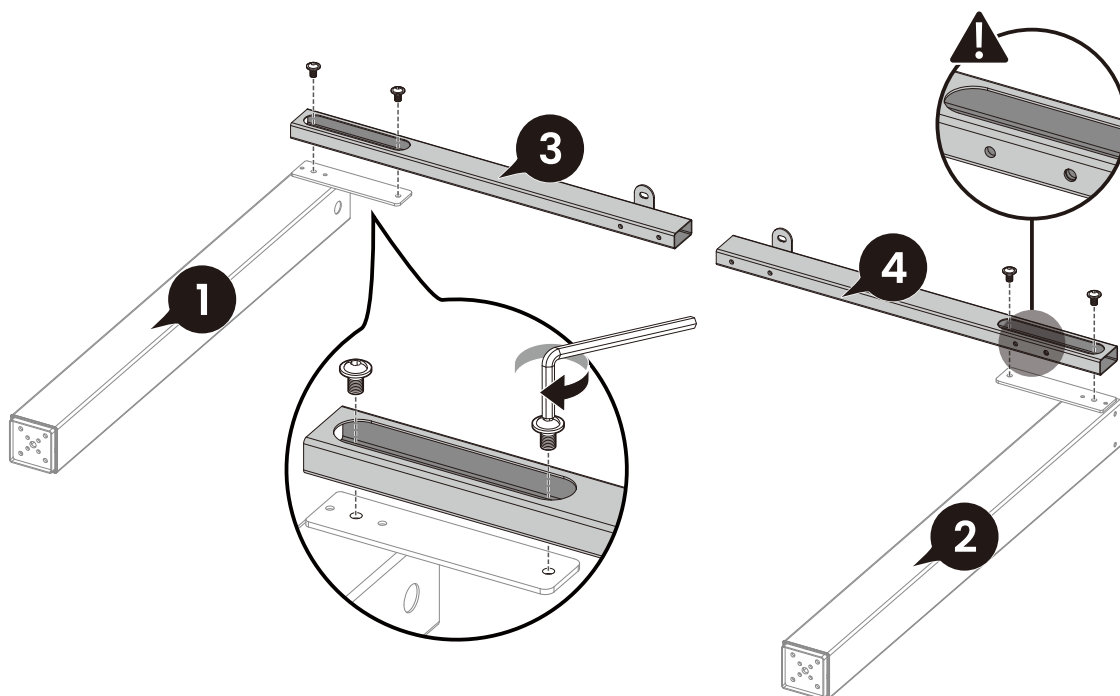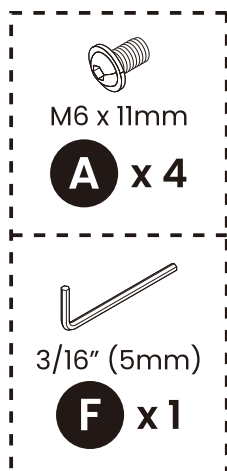

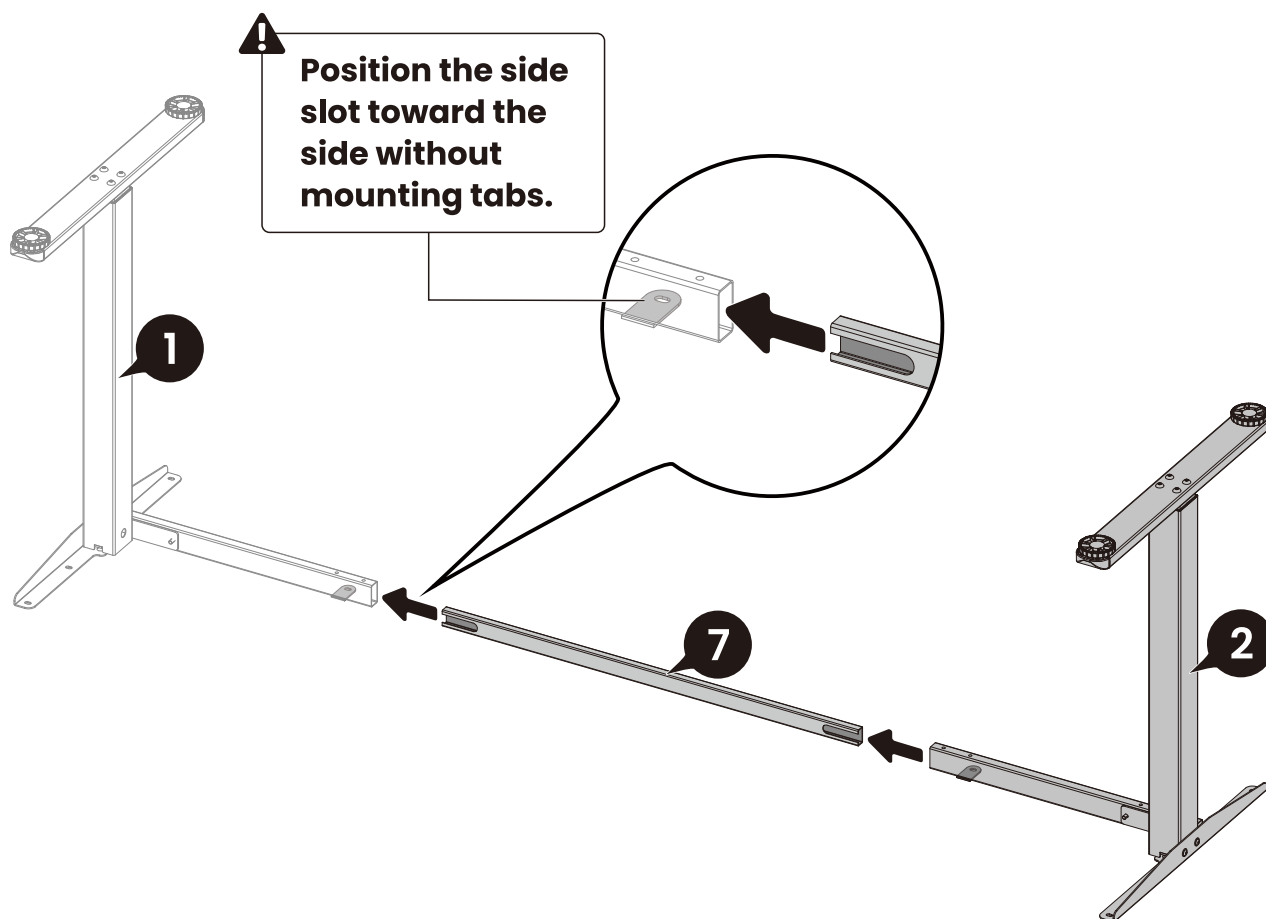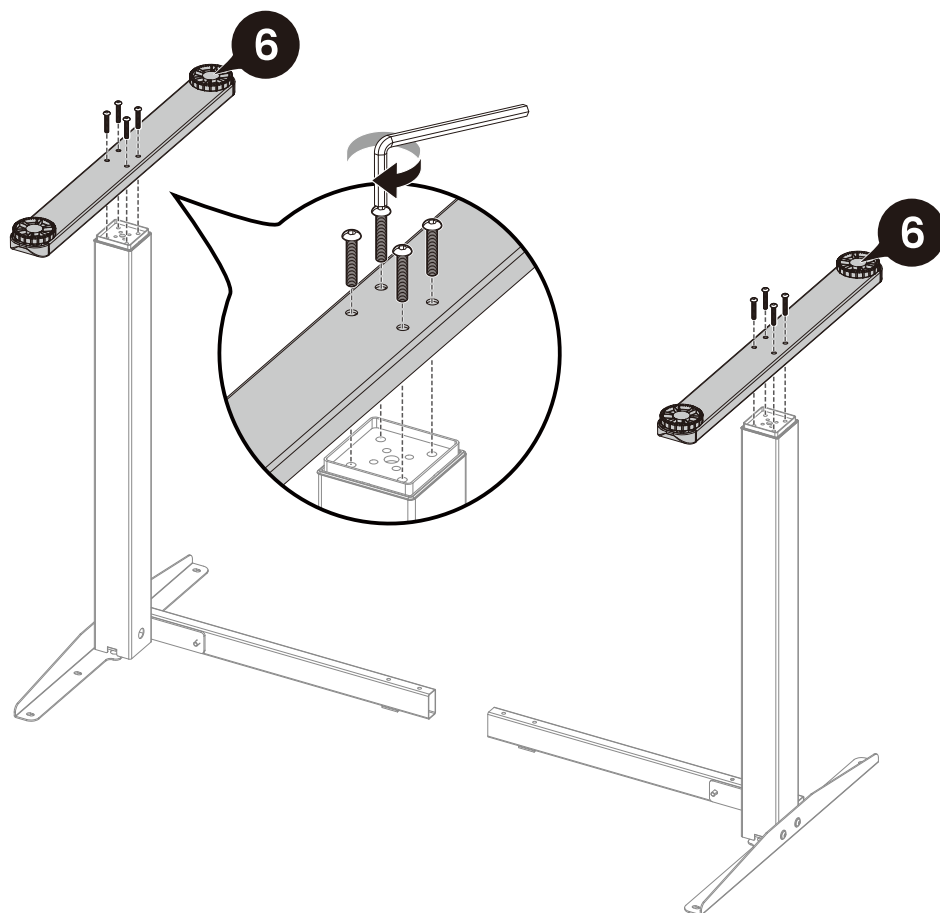
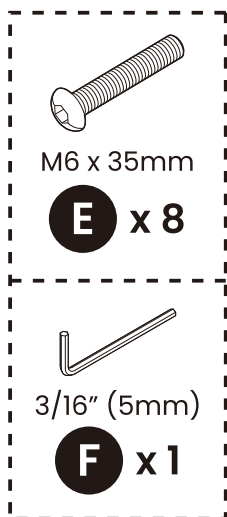






Installation Guide




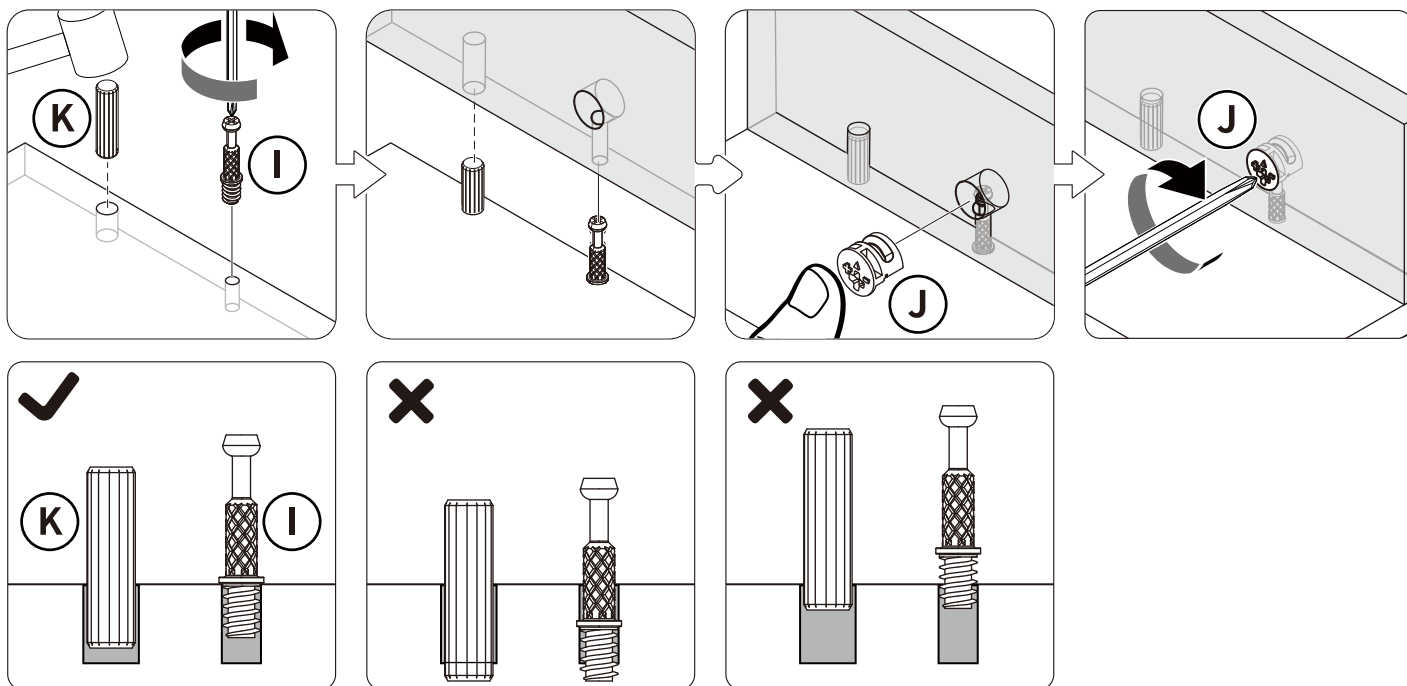







2




Attaching the Desktop and Other Parts



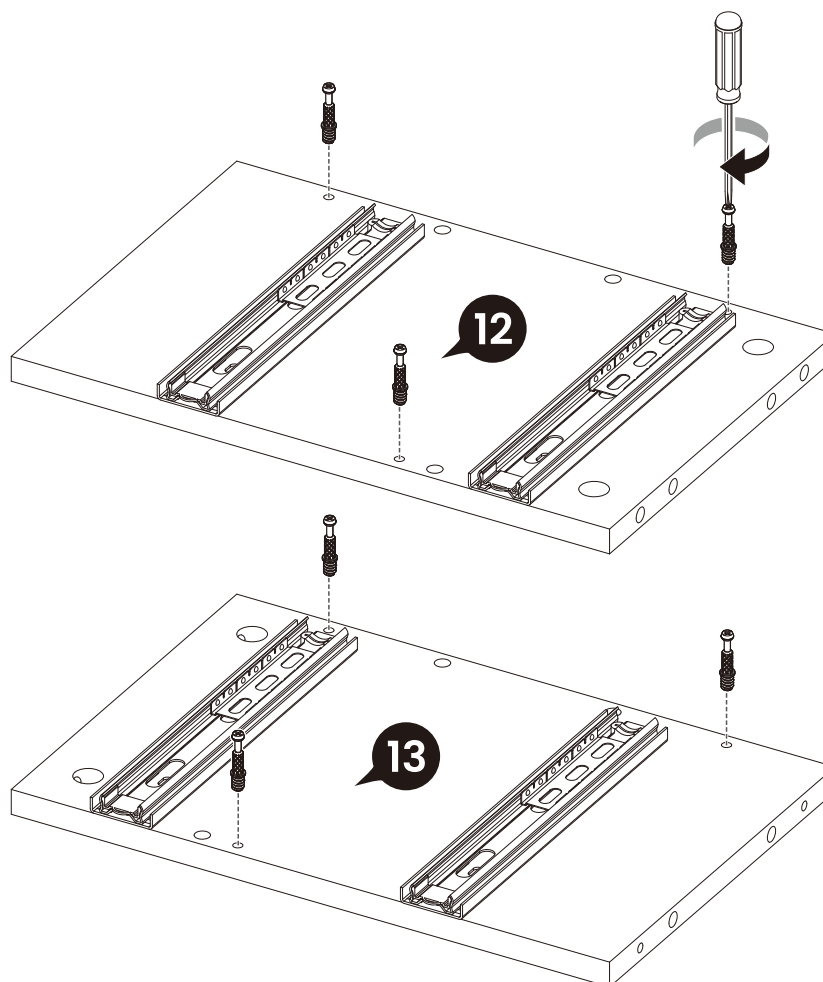
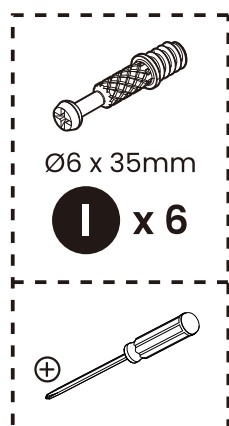


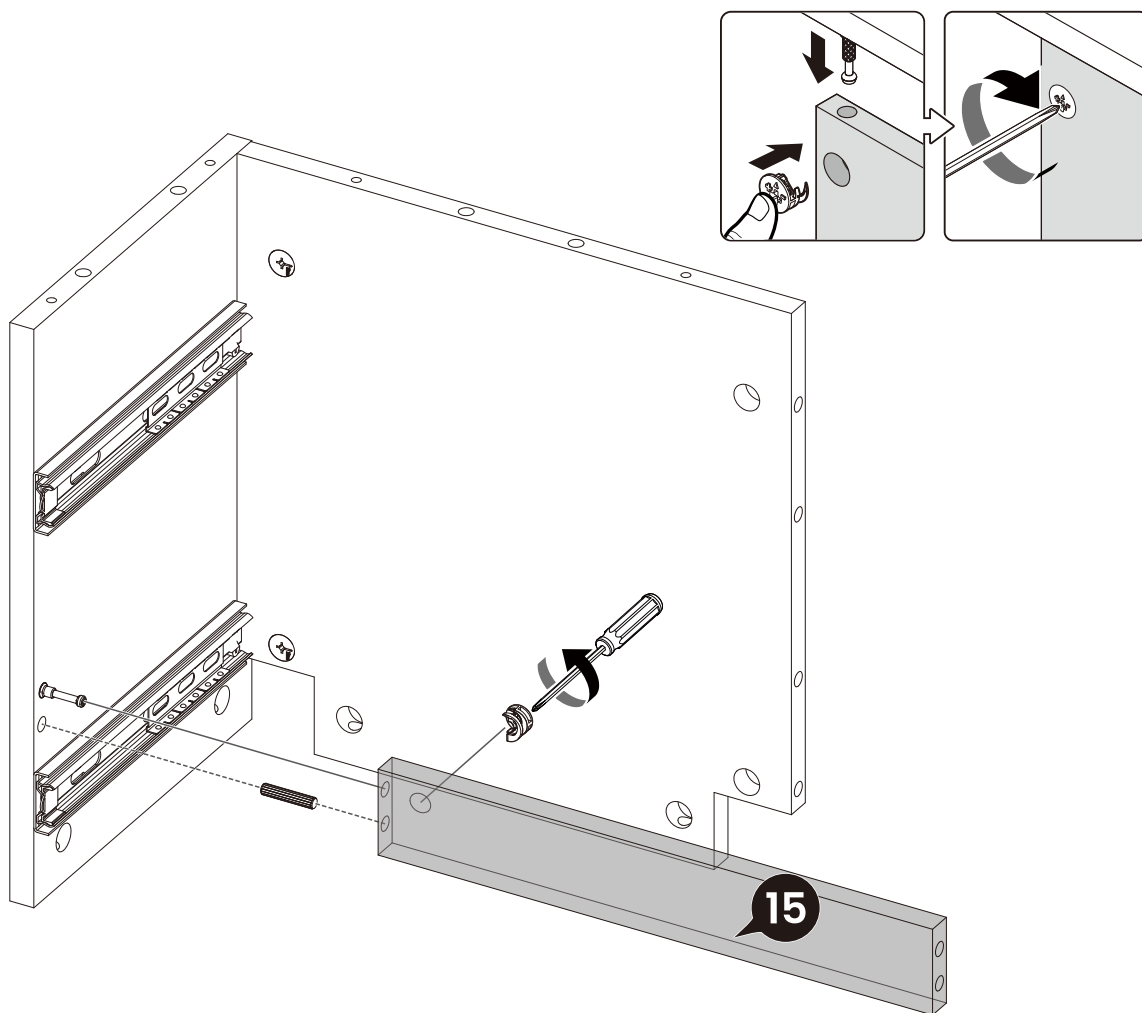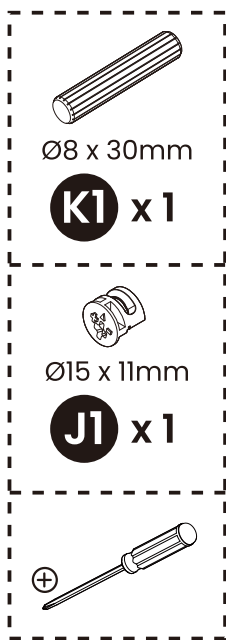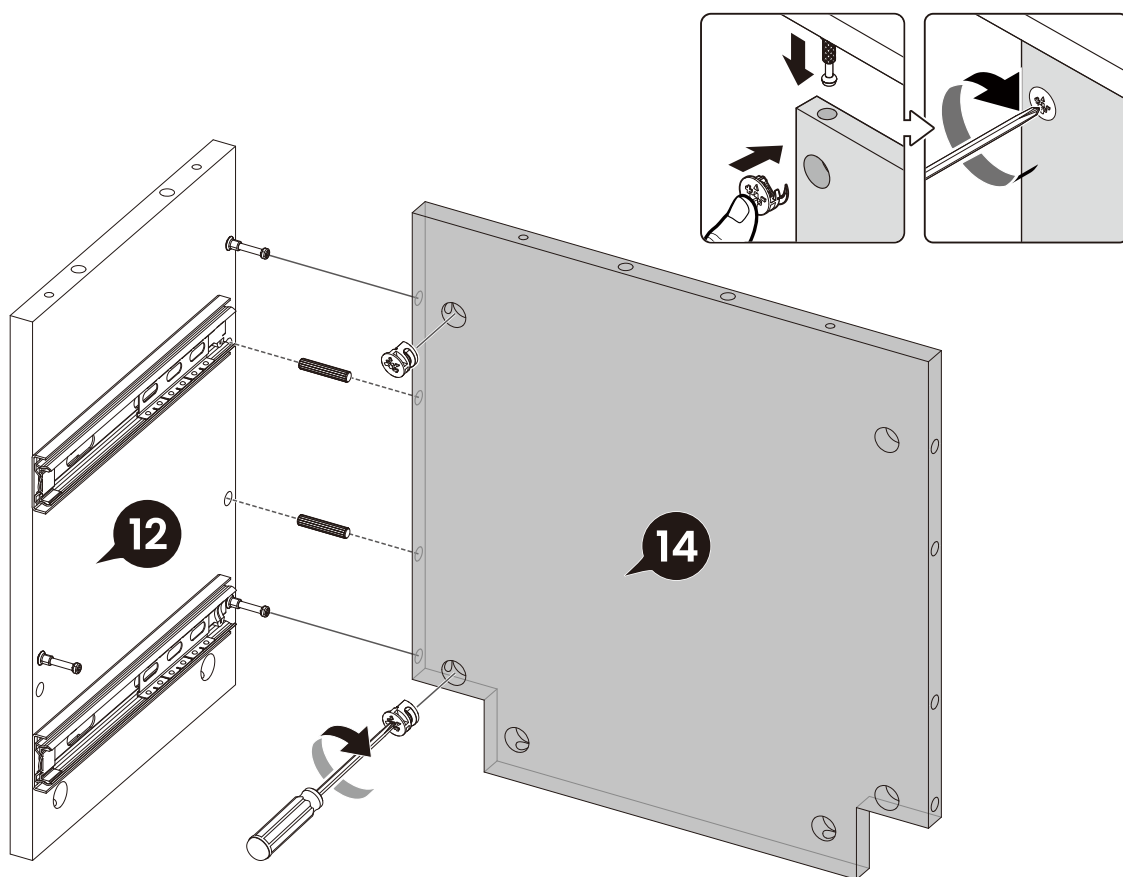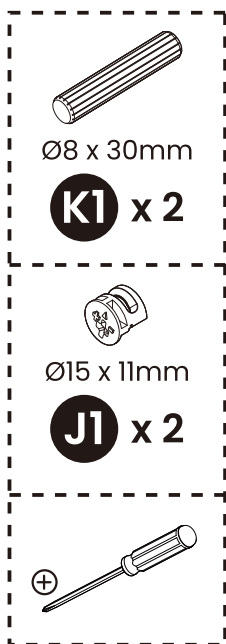

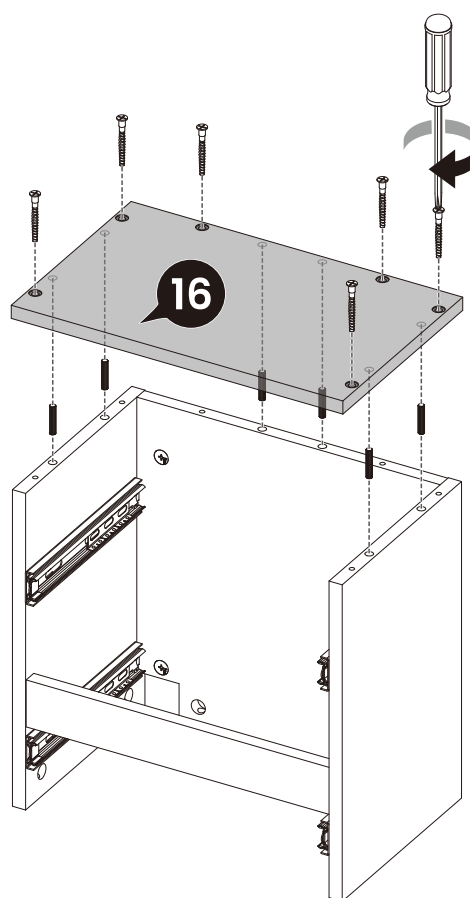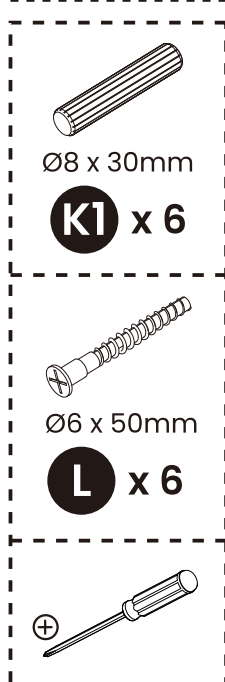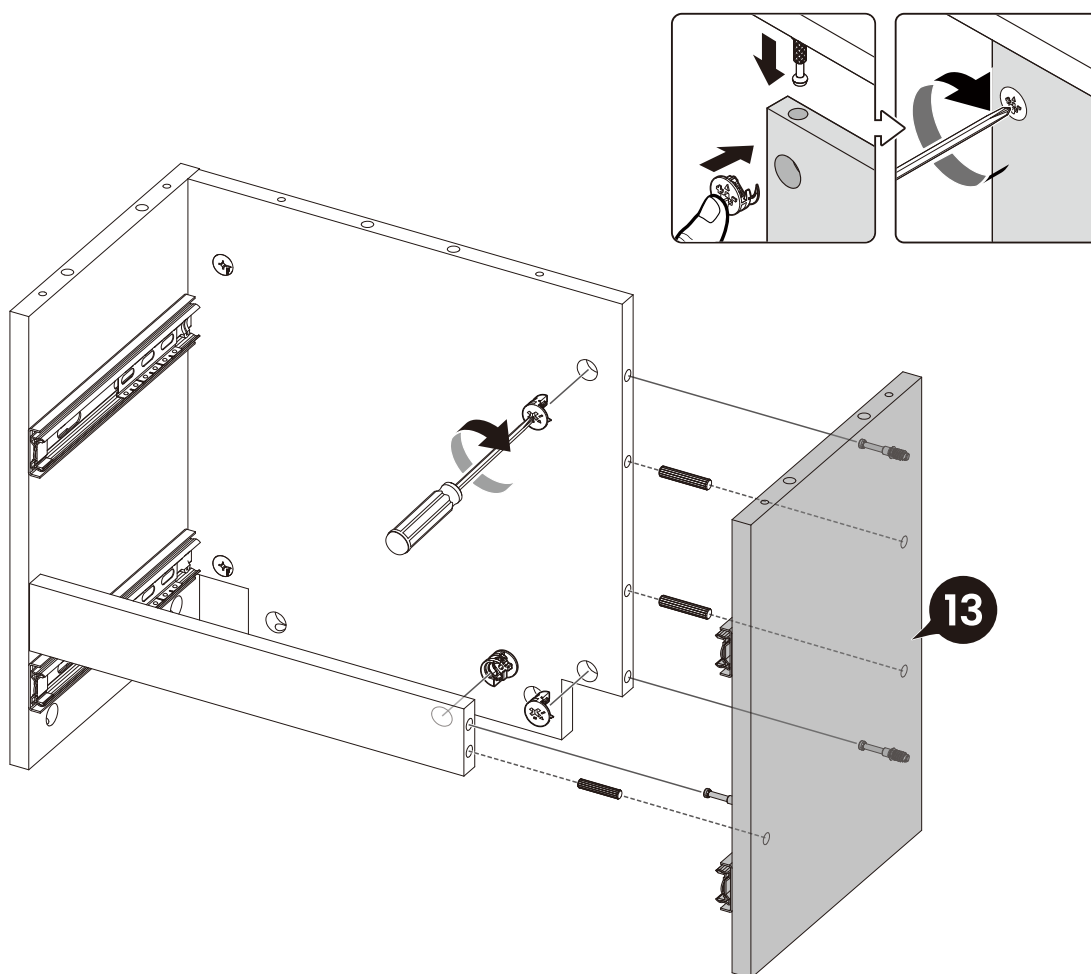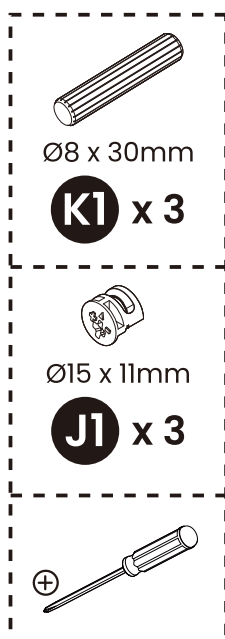

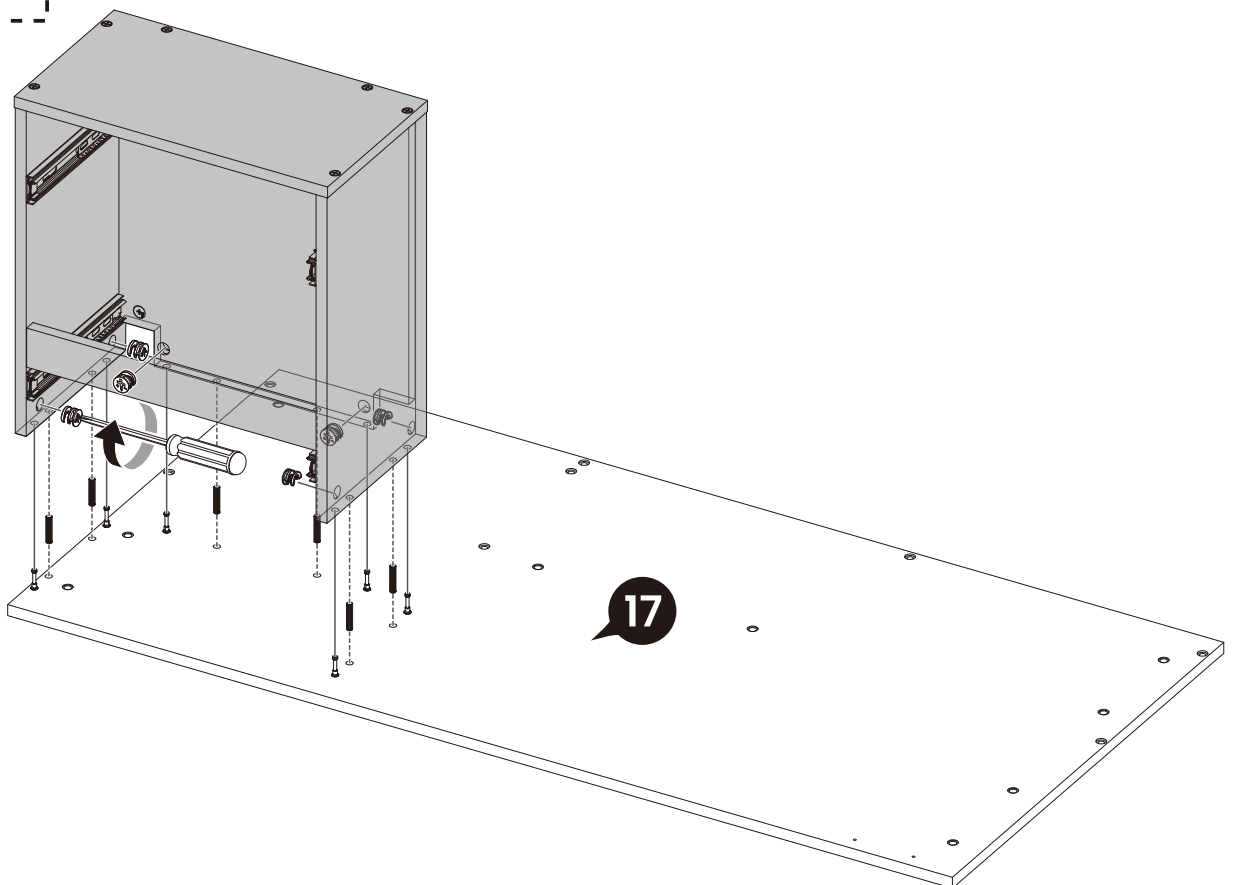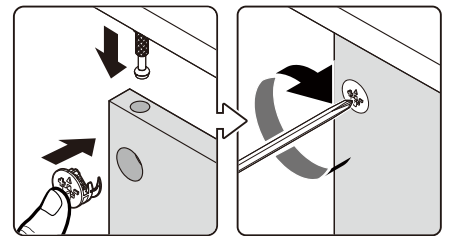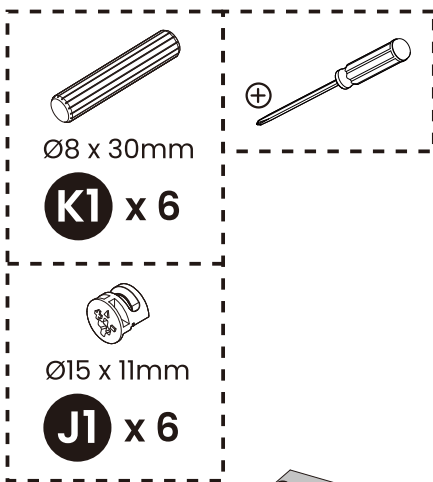
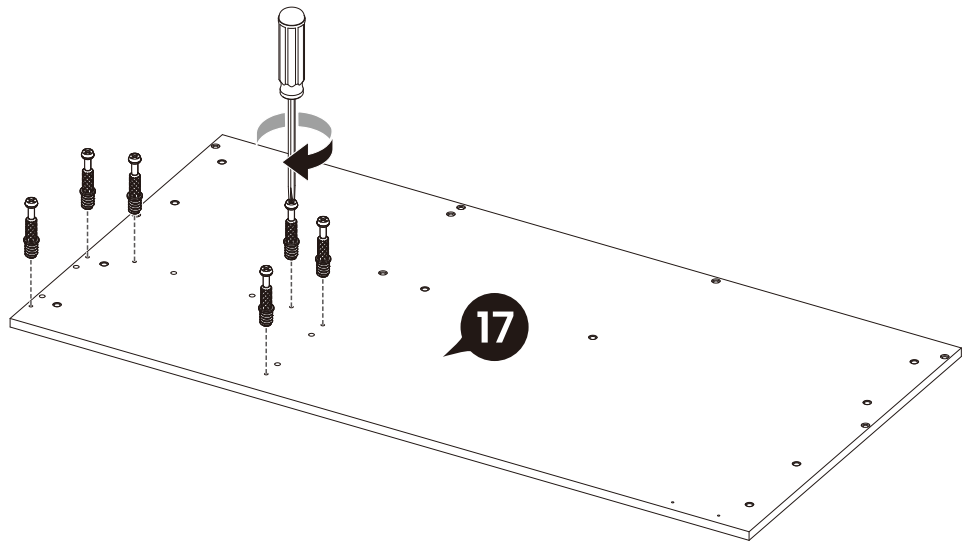
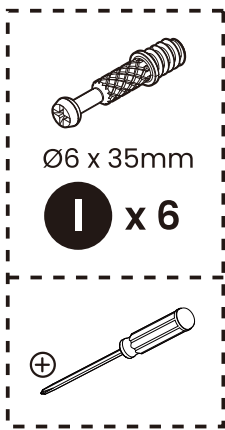


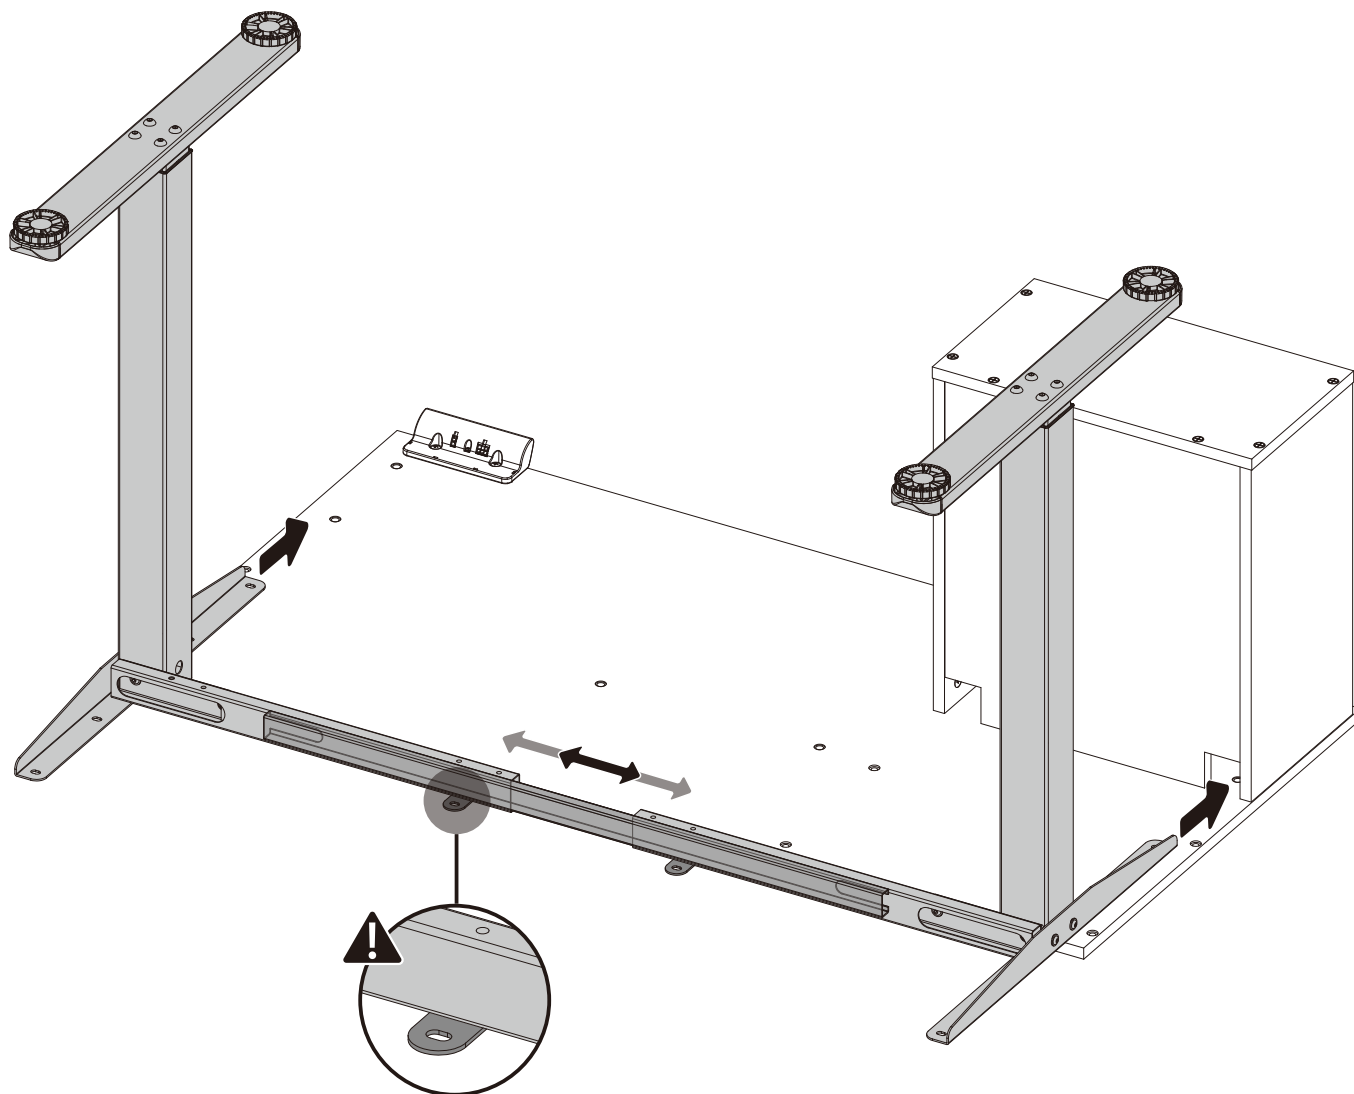
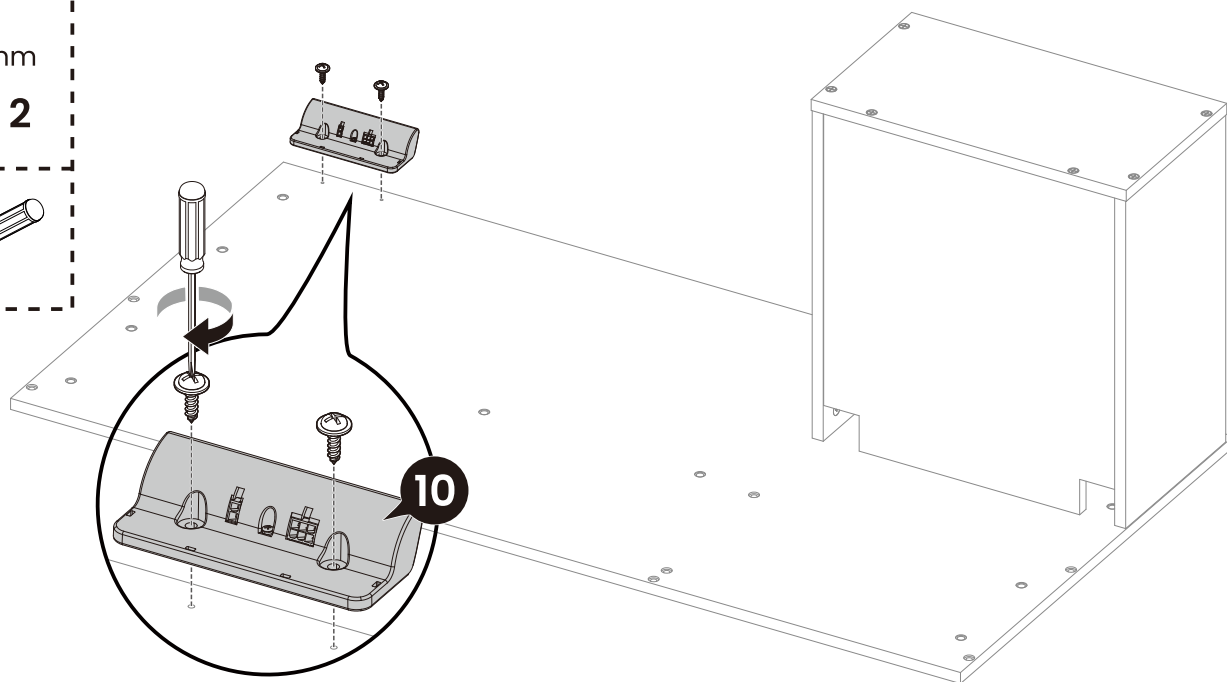
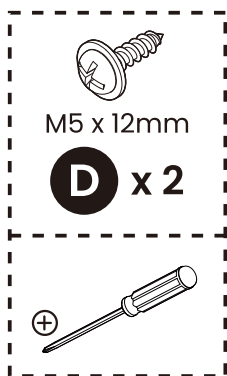


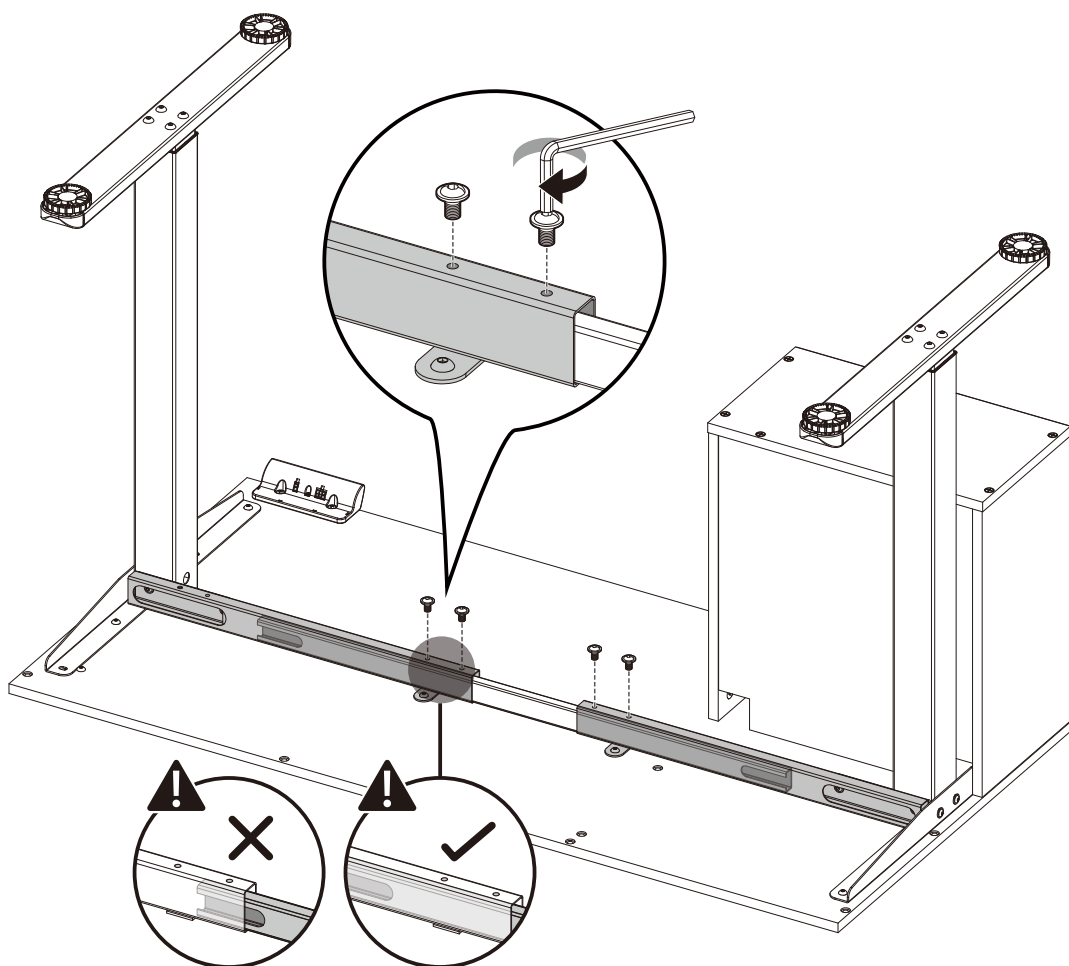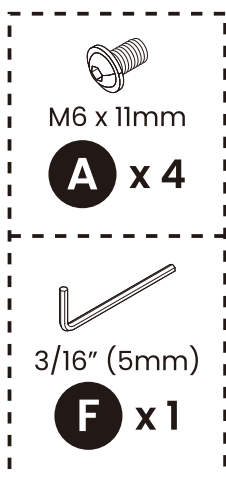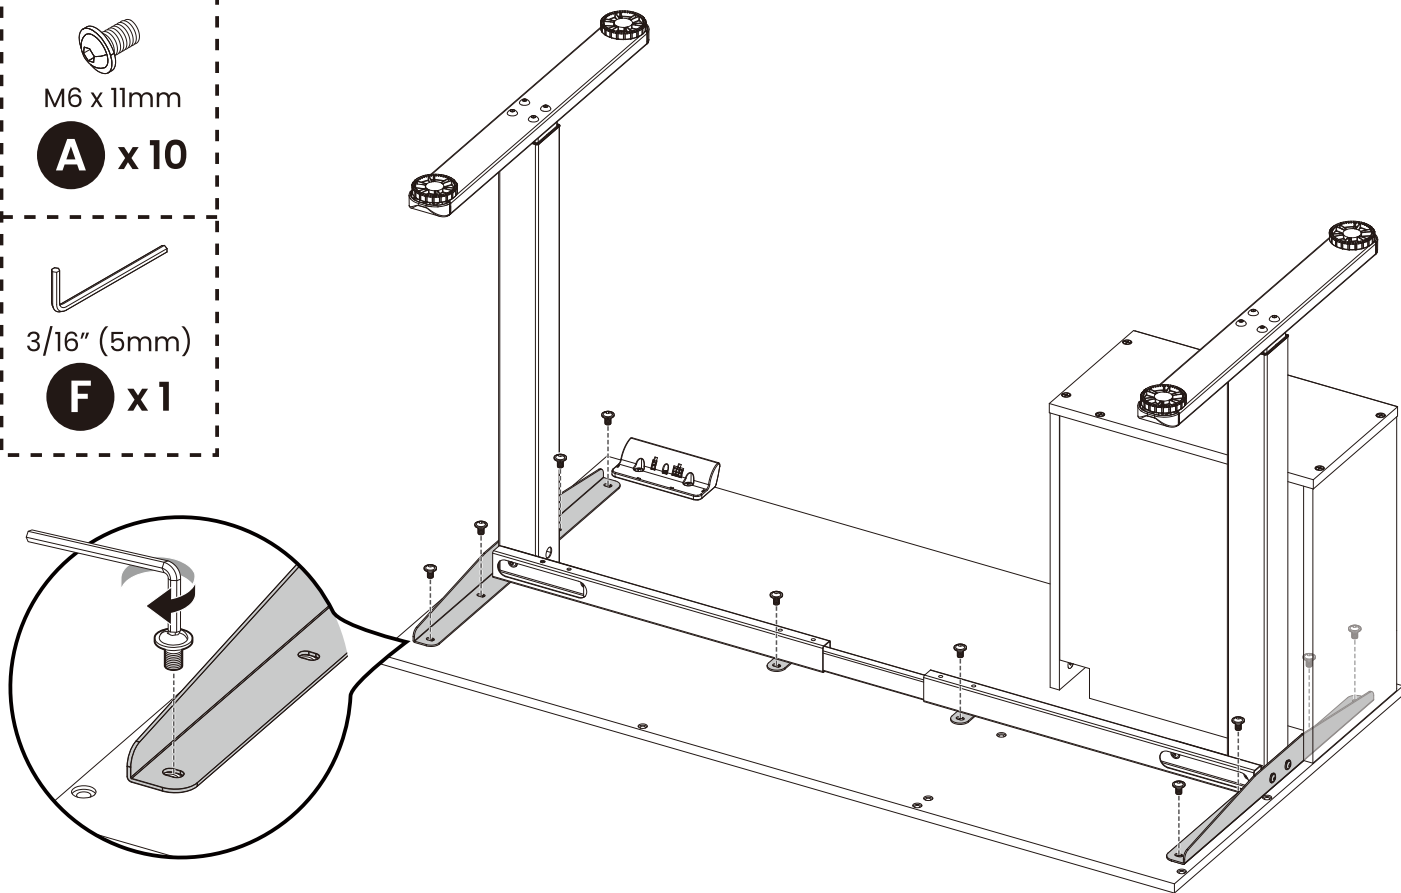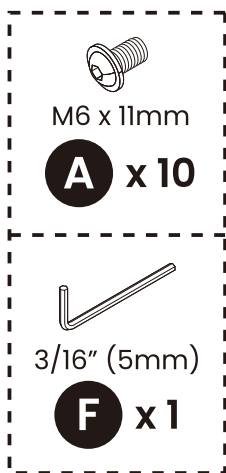

3


Attaching the Transmission Rod

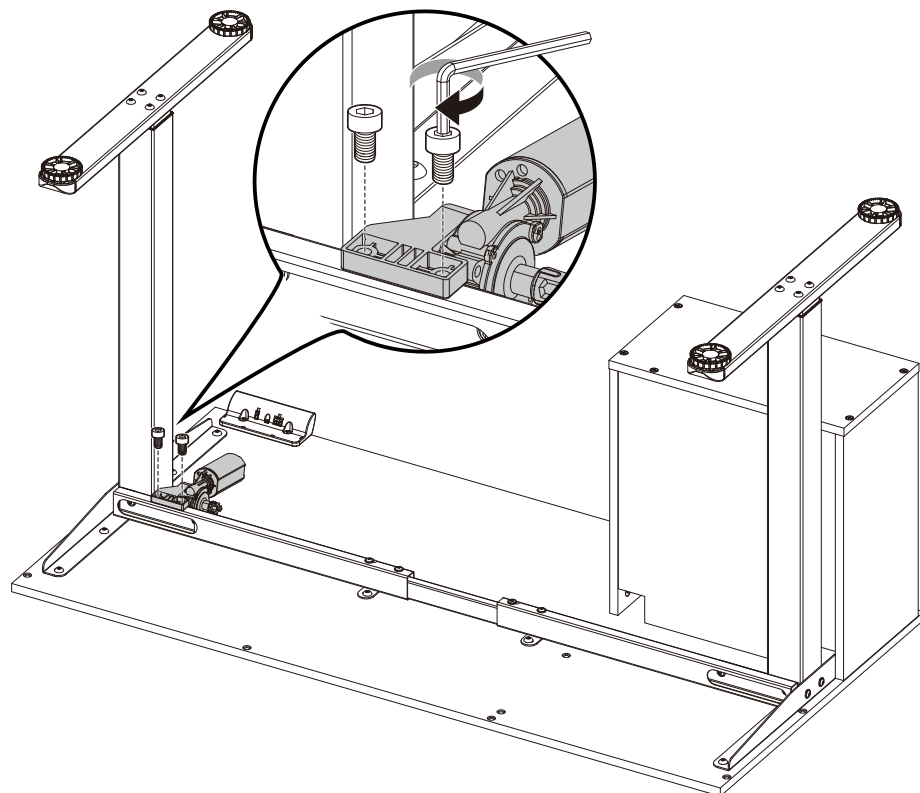
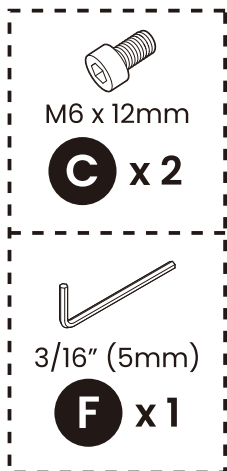
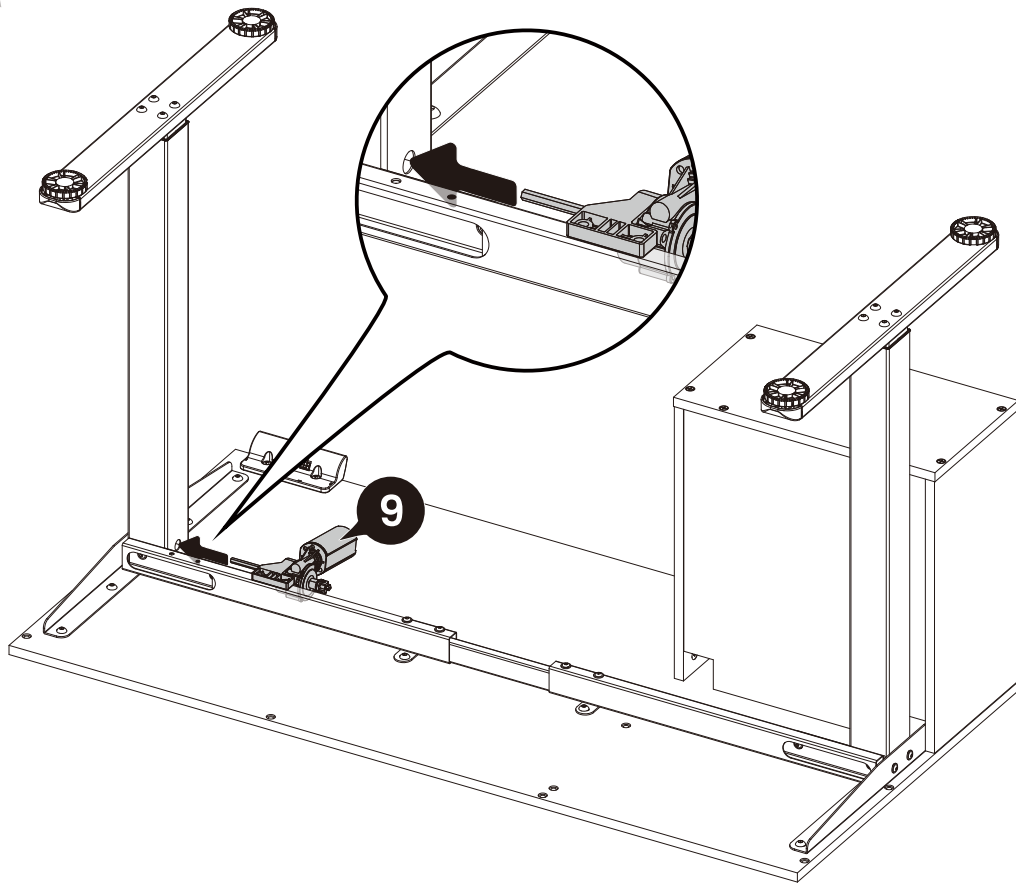


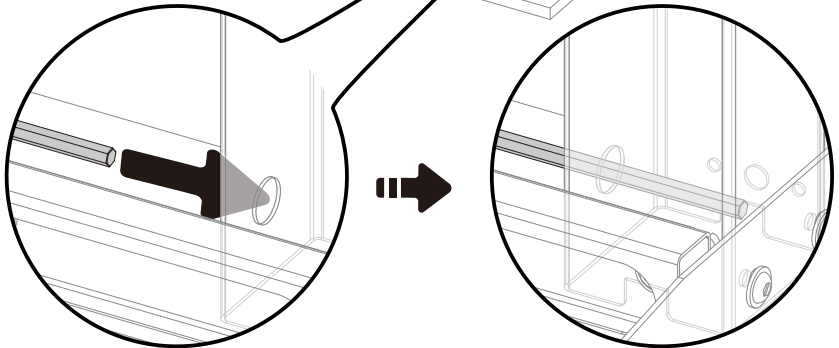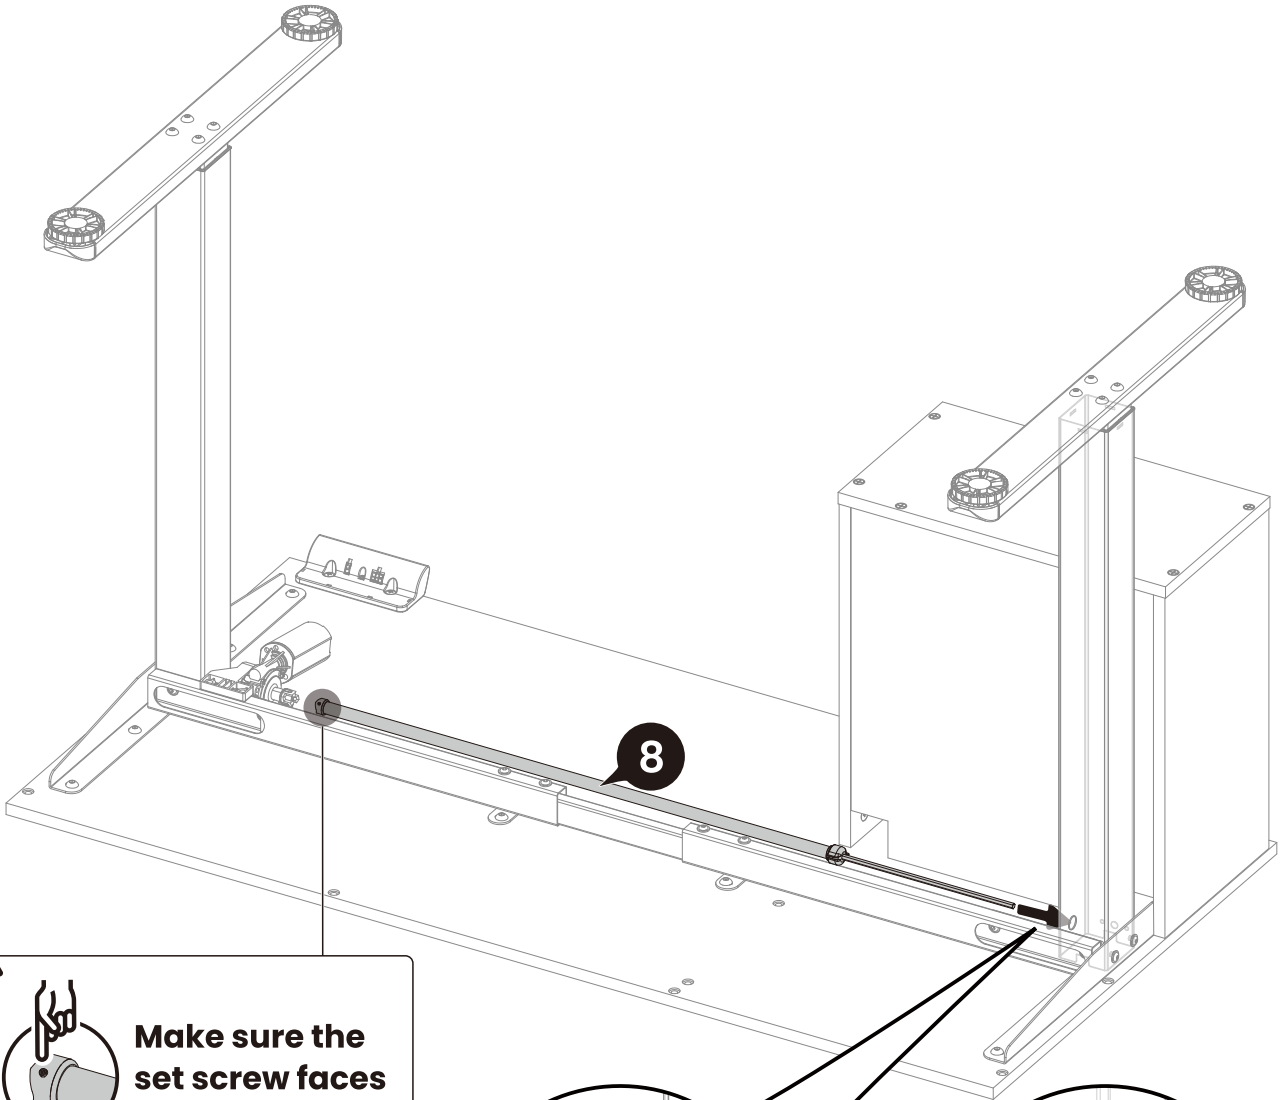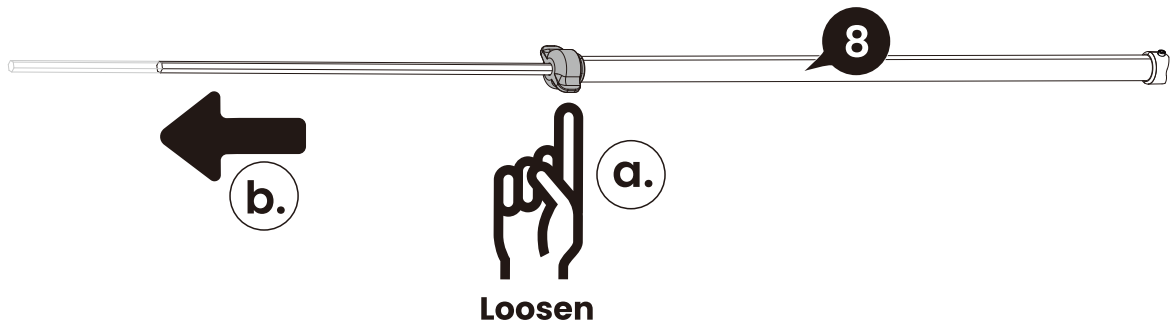





Adjust uneven desk legs if needed:

Measure the heights of each leg to see if they are set at the same level. If not, turn the rod to raise or lower the leg until it's level with the leg with motor.

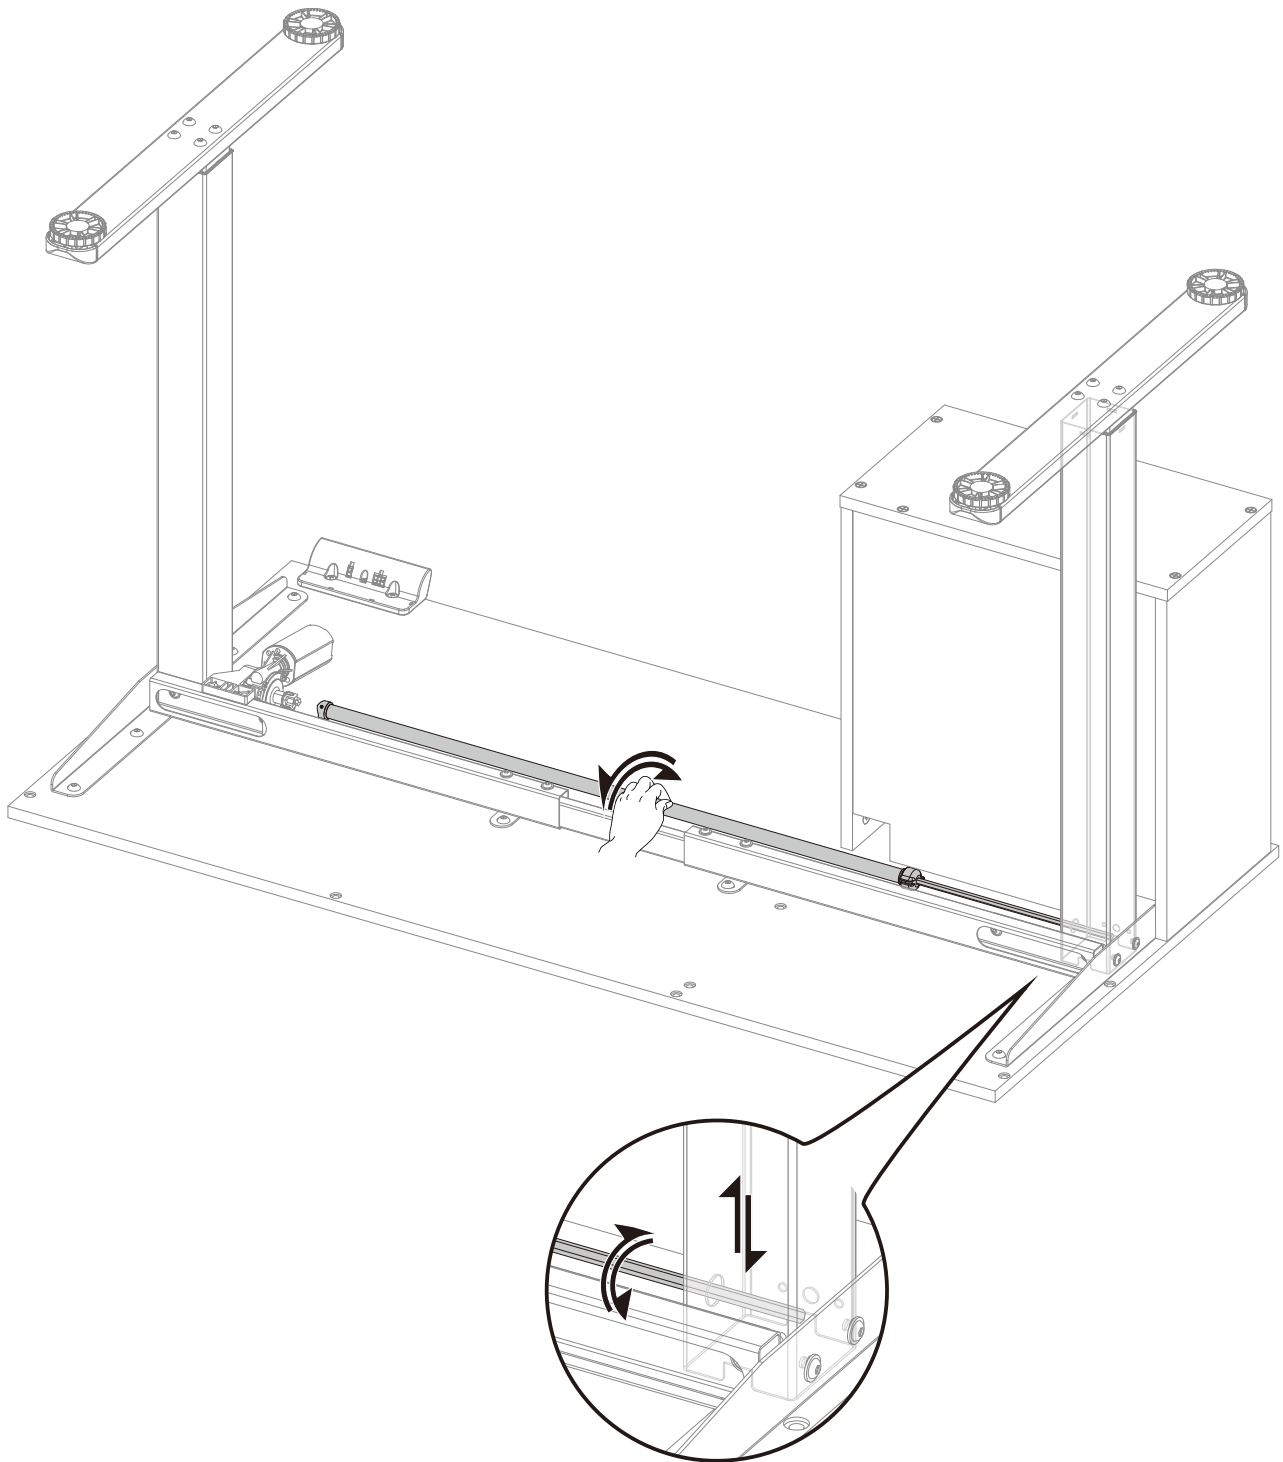

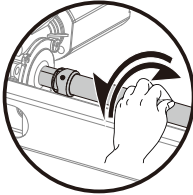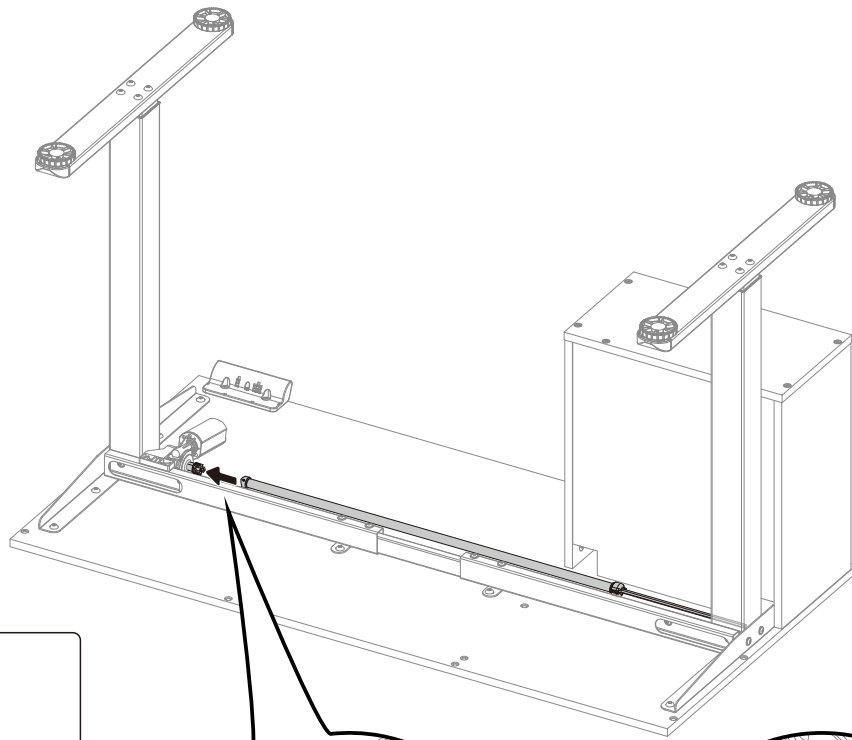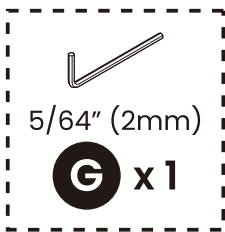

If the rod's other end cannot be connected properly, fine-tune the rod.

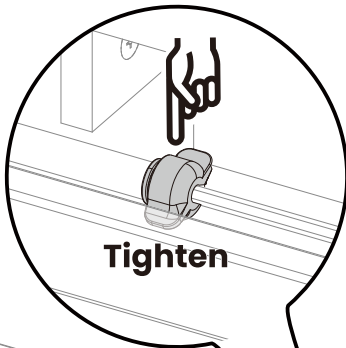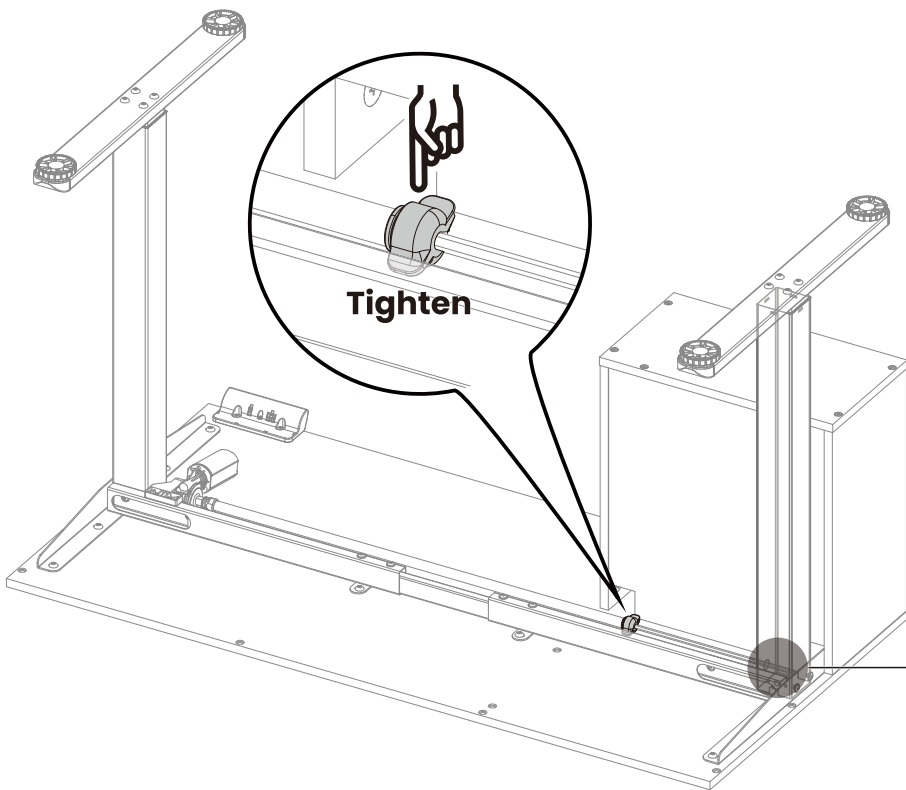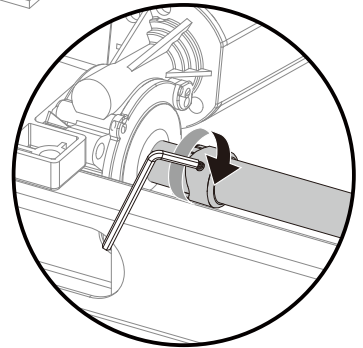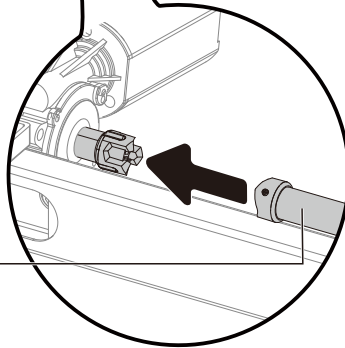

Tighten



Before tightening the coupling nut, ensure the end of the rod is still fully inserted into the leg.

4







Connecting the Cables



An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.








When flipping the desk over, make sure the controller does not hit the ground, which could cause damage.

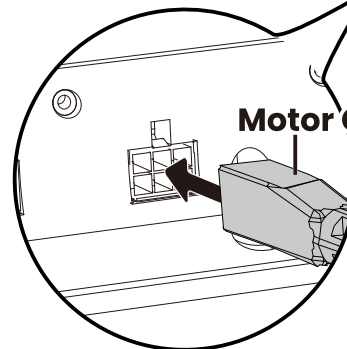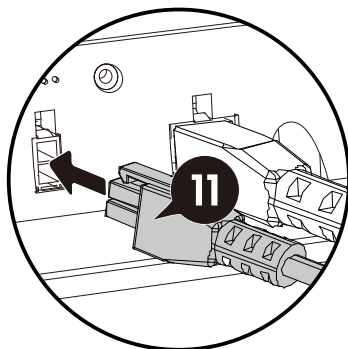
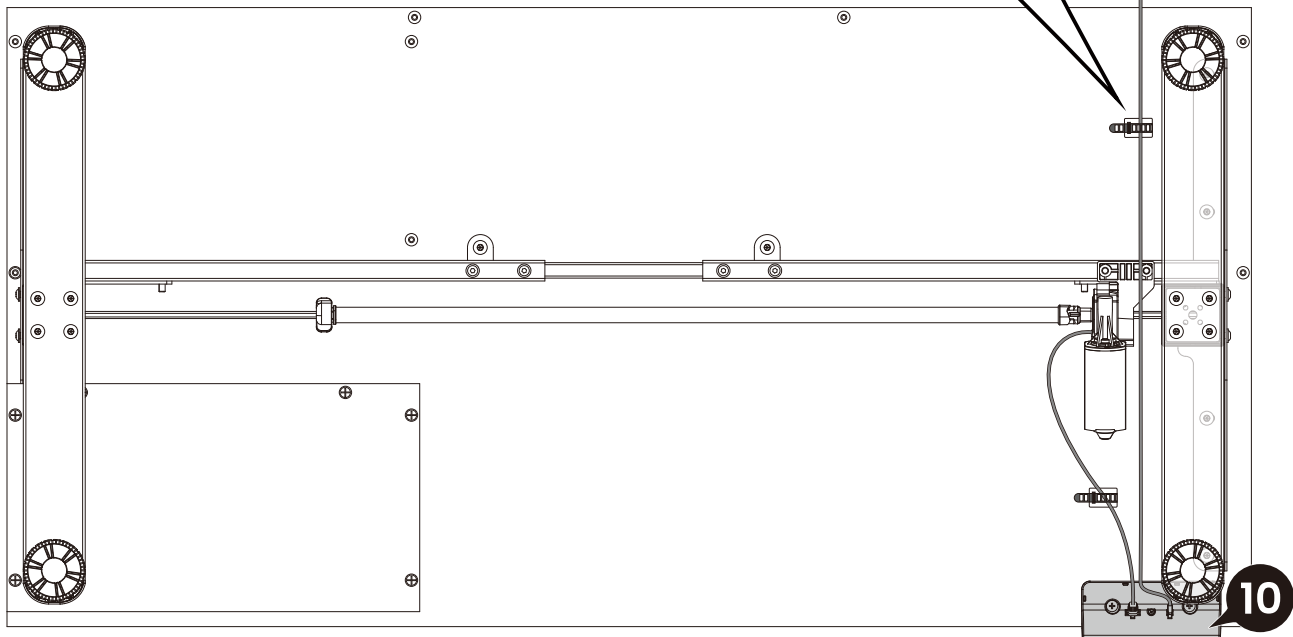
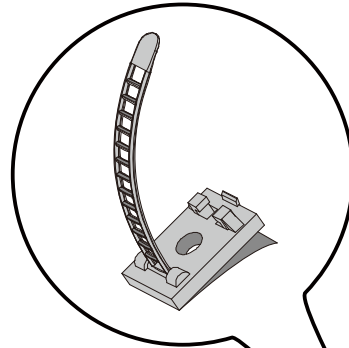
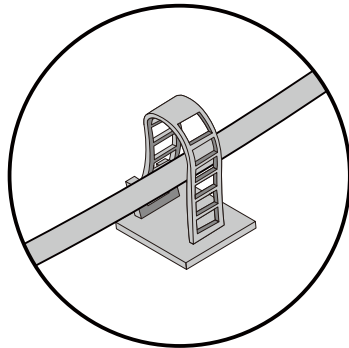
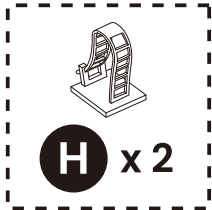







Motor Cable





5

Attaching the Top Stand

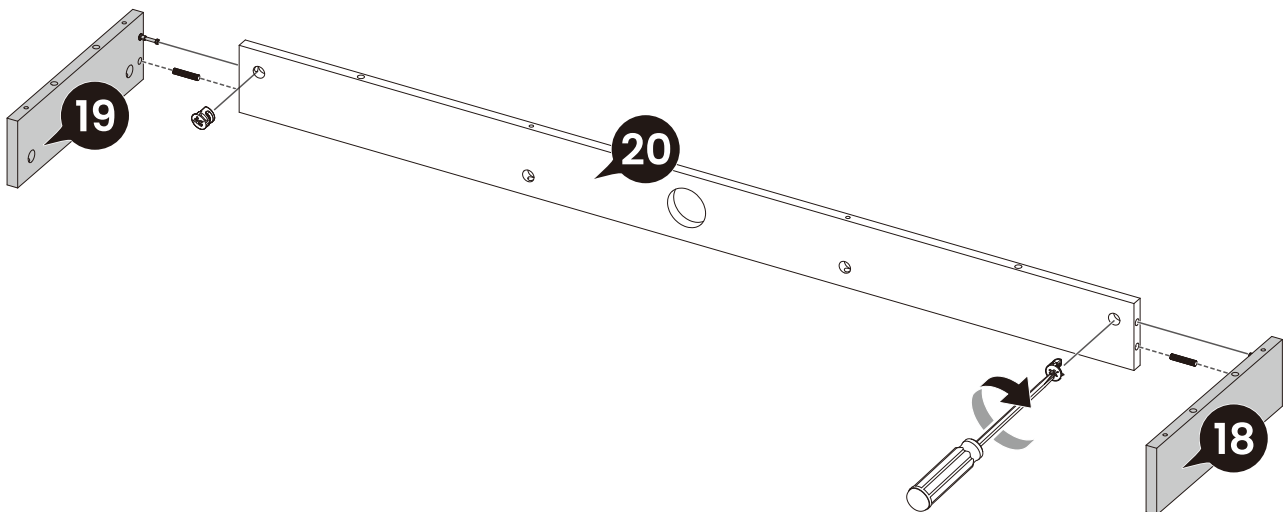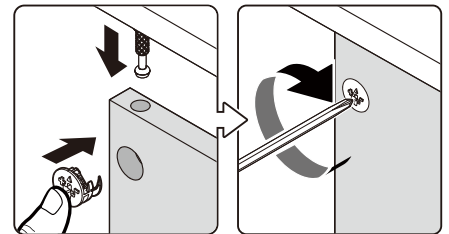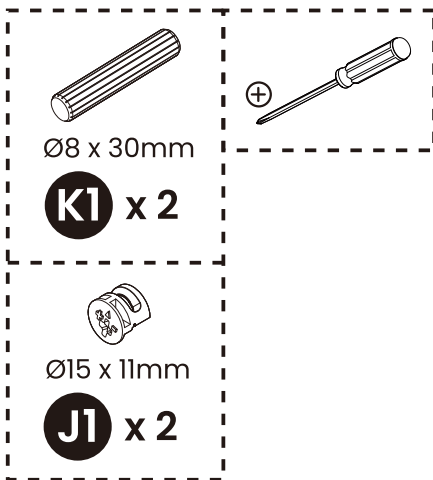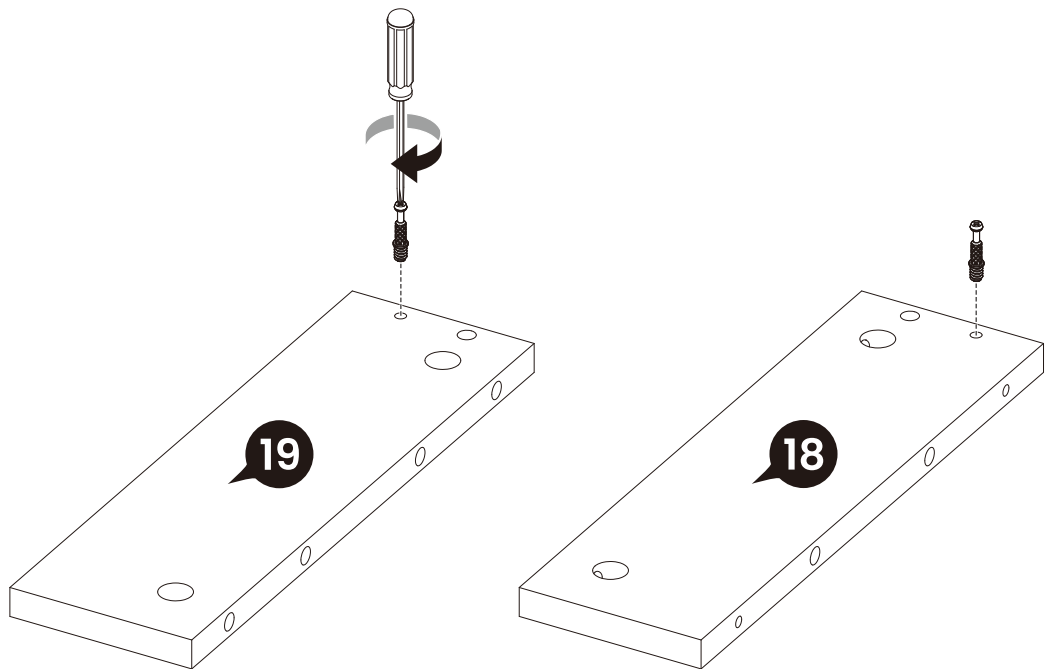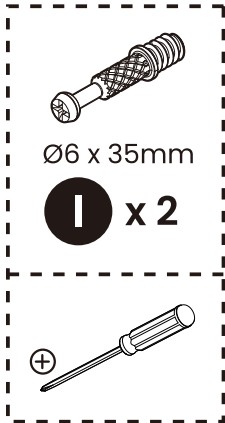

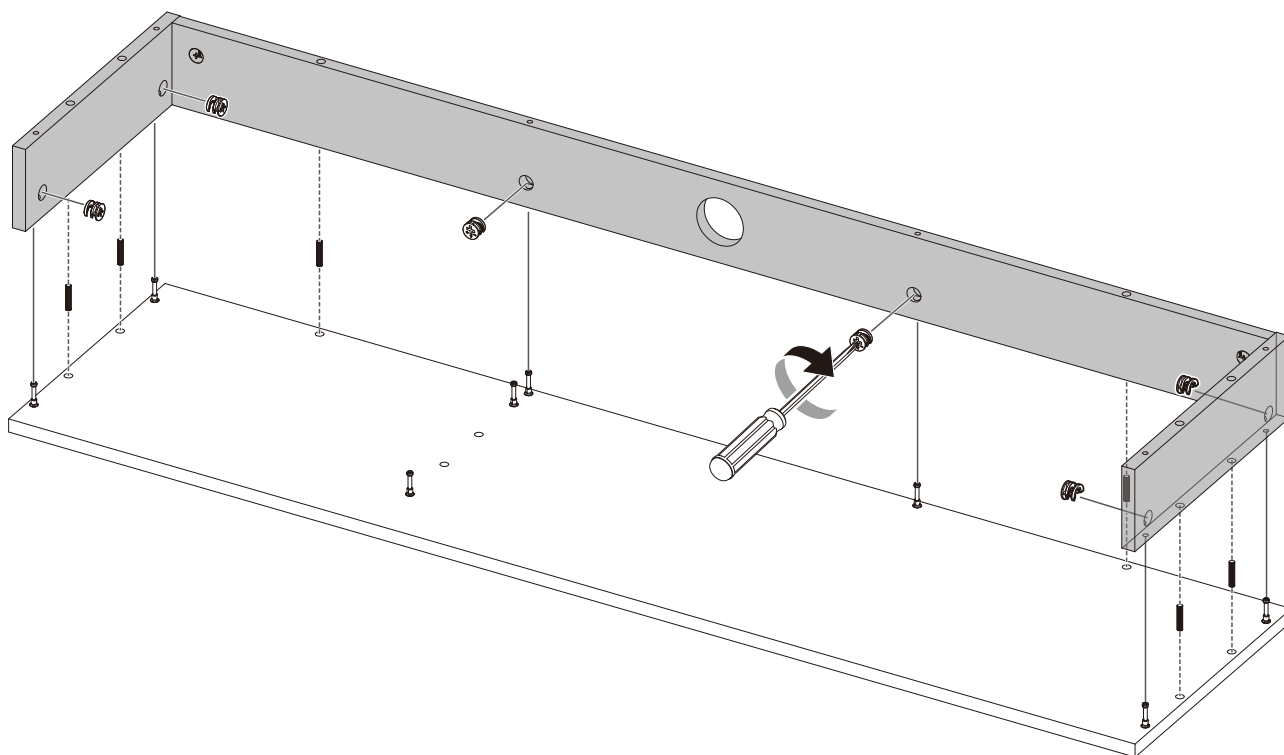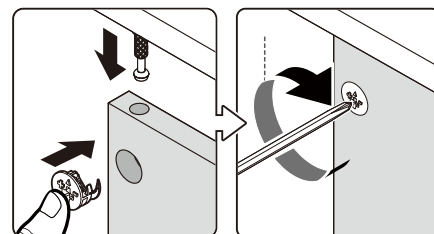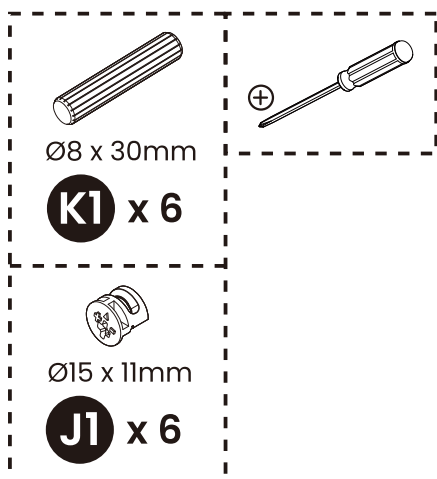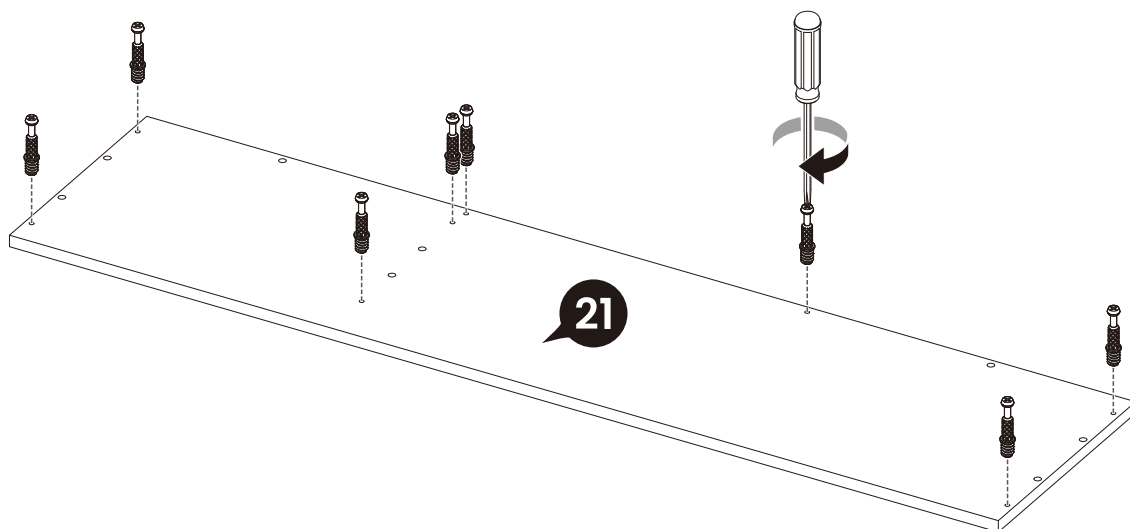
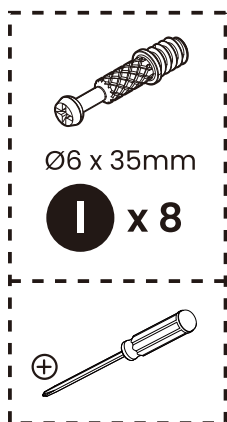


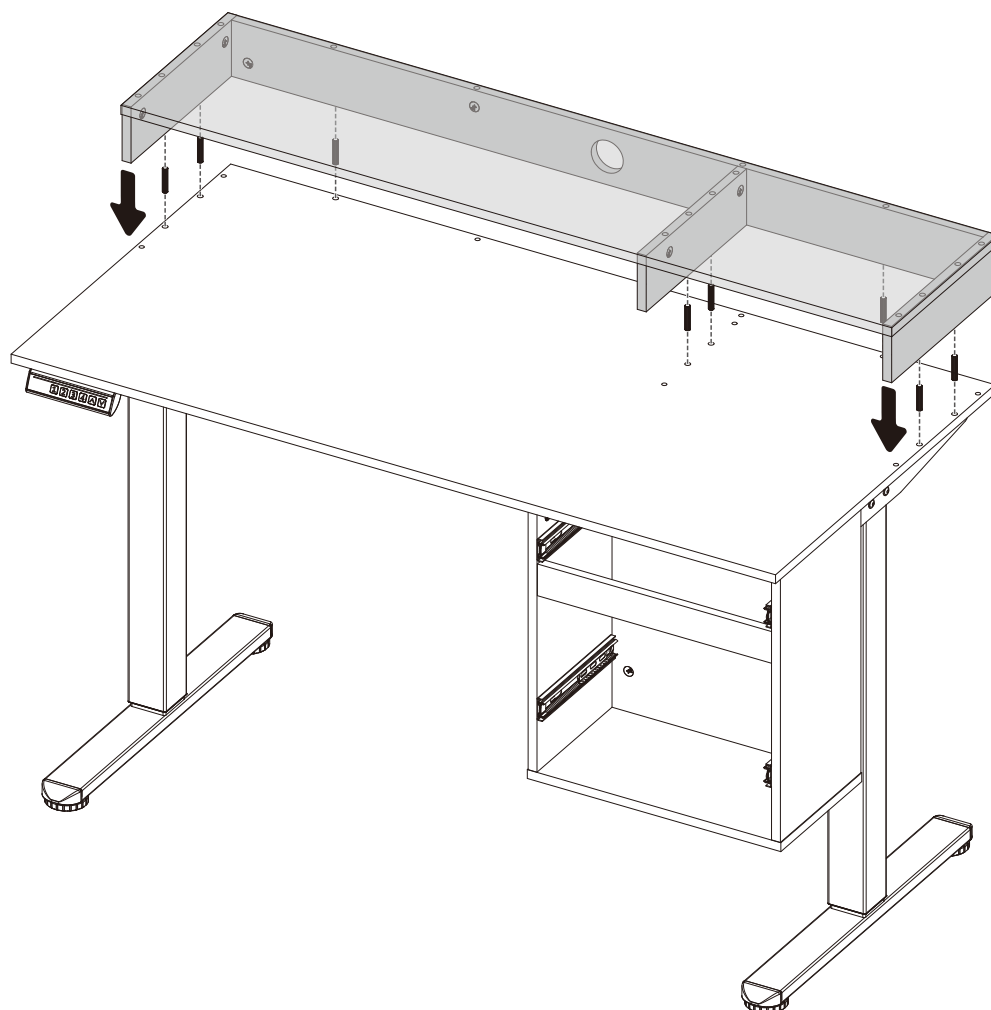
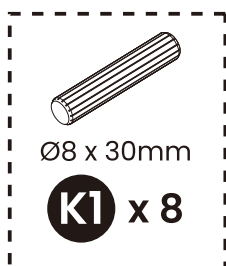
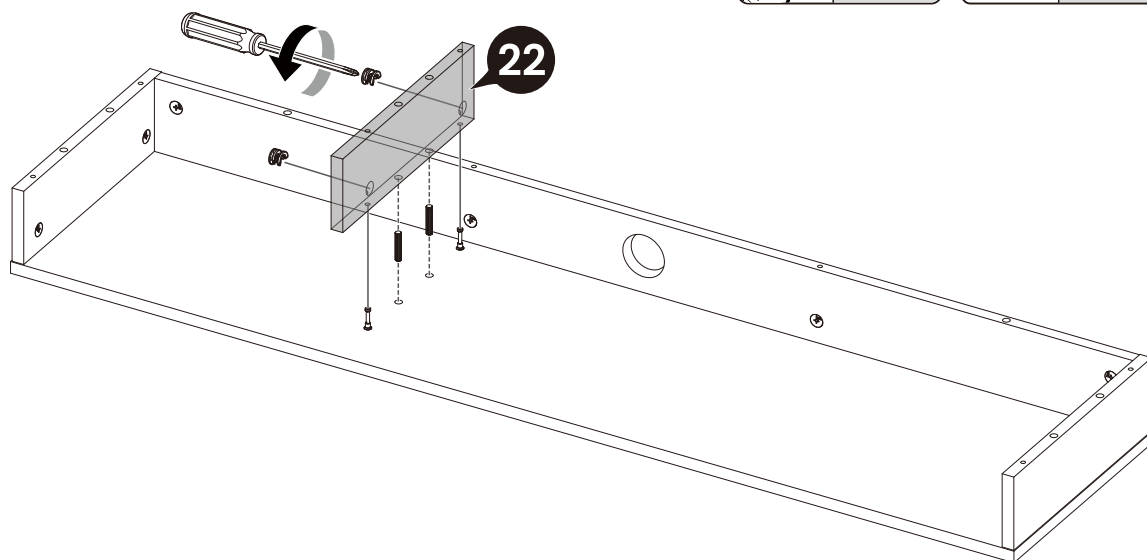
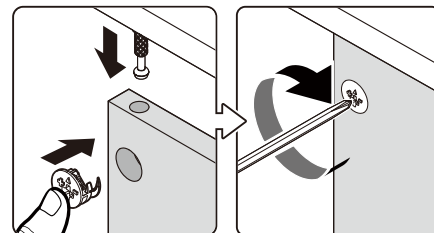
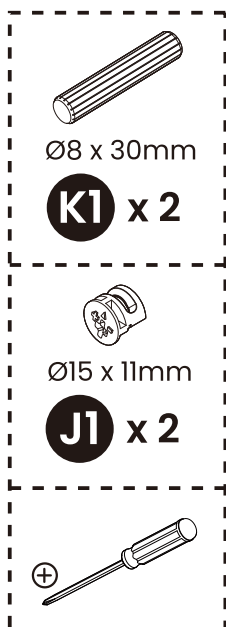


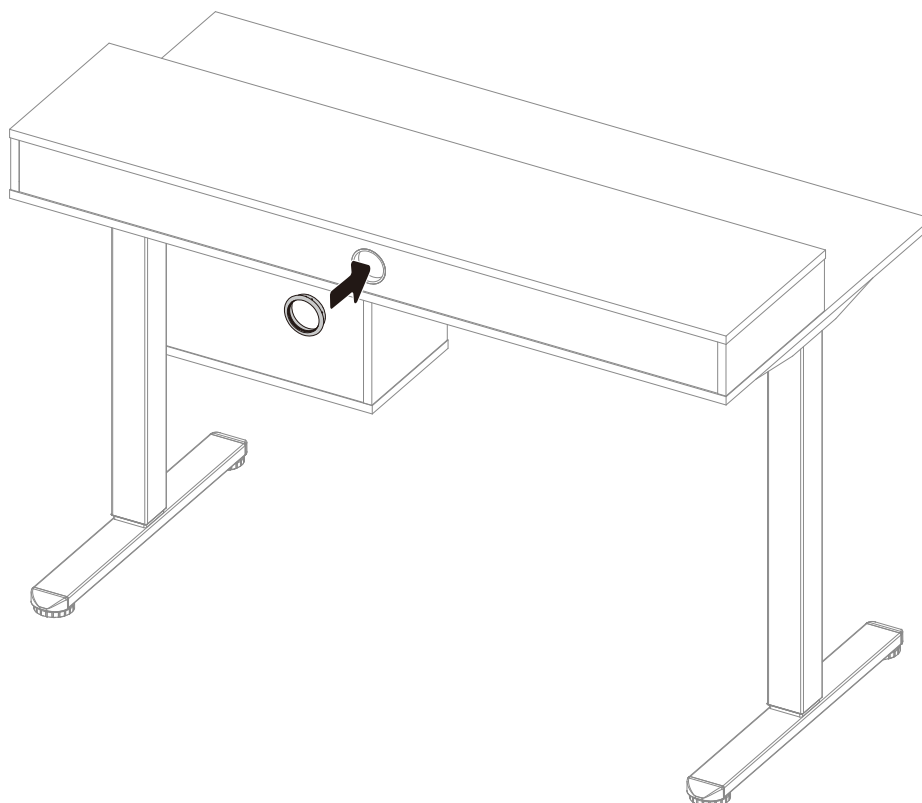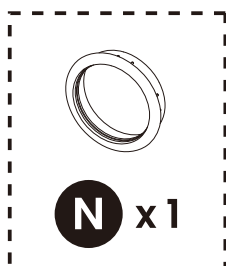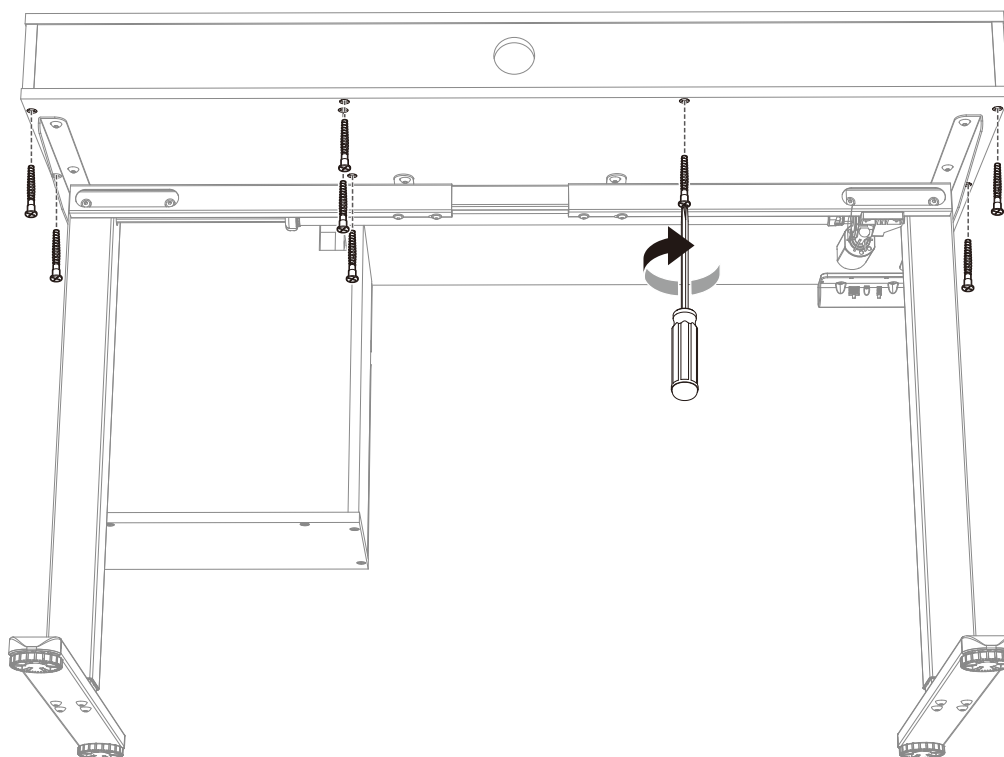
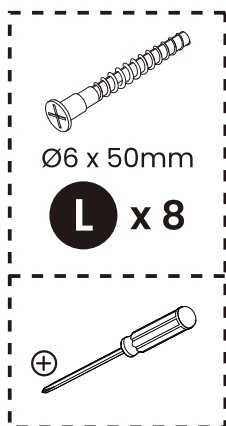





6






Attaching the Drawers


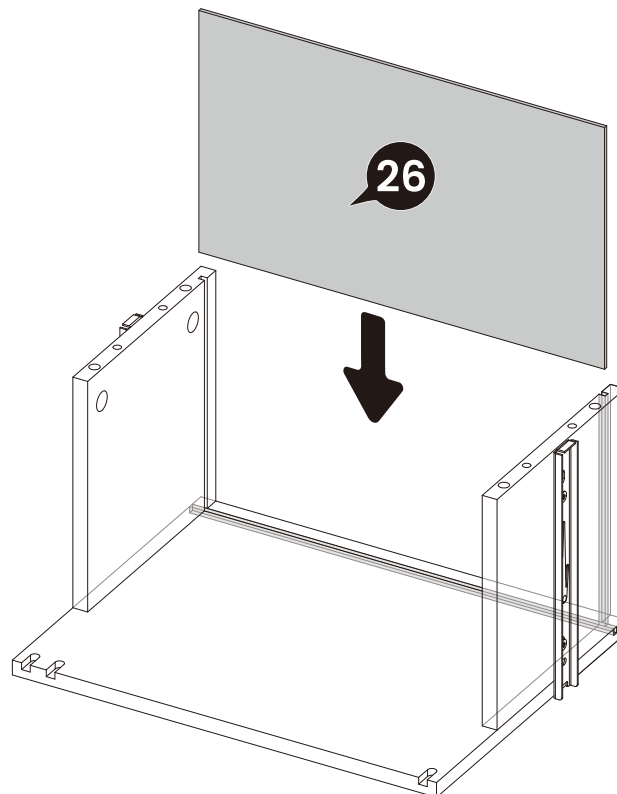
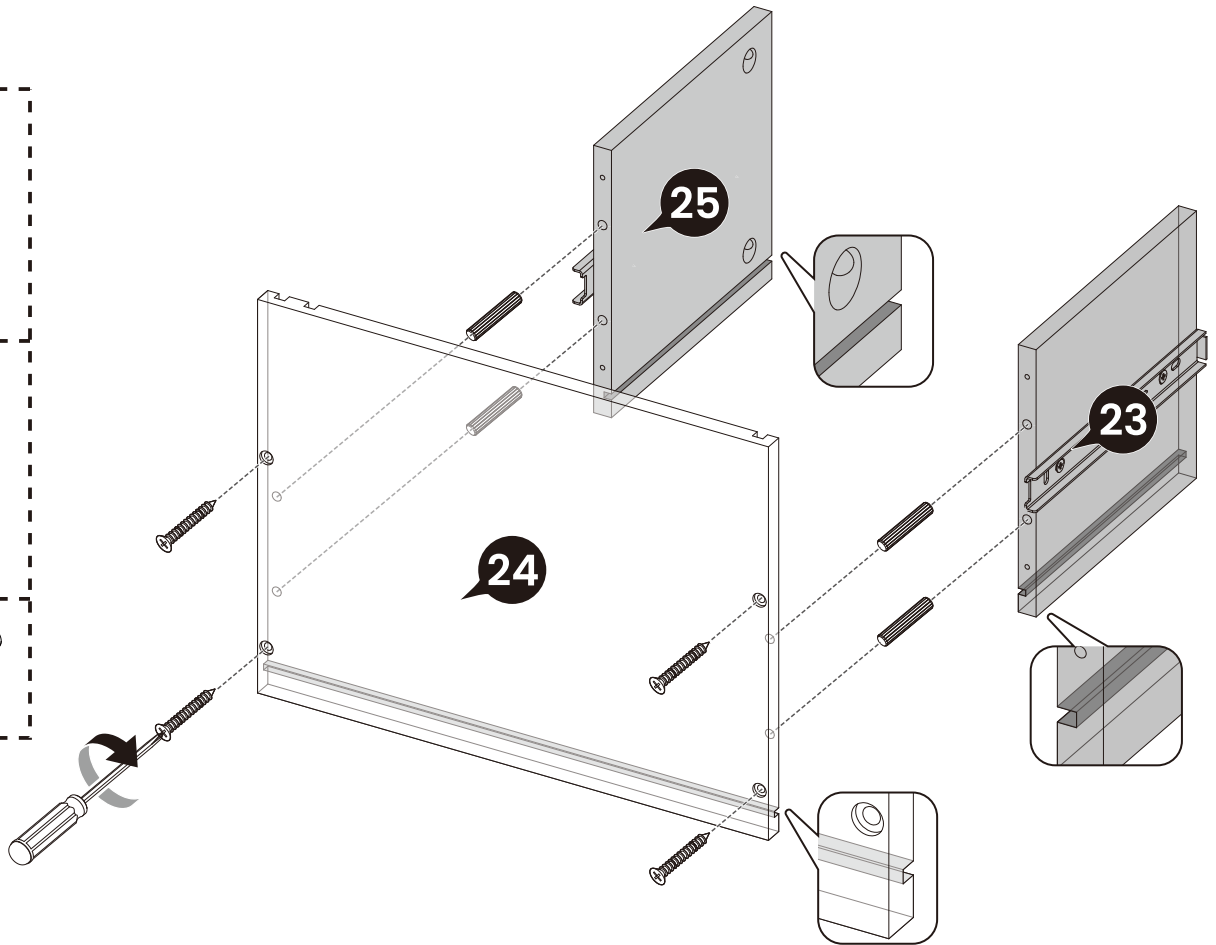


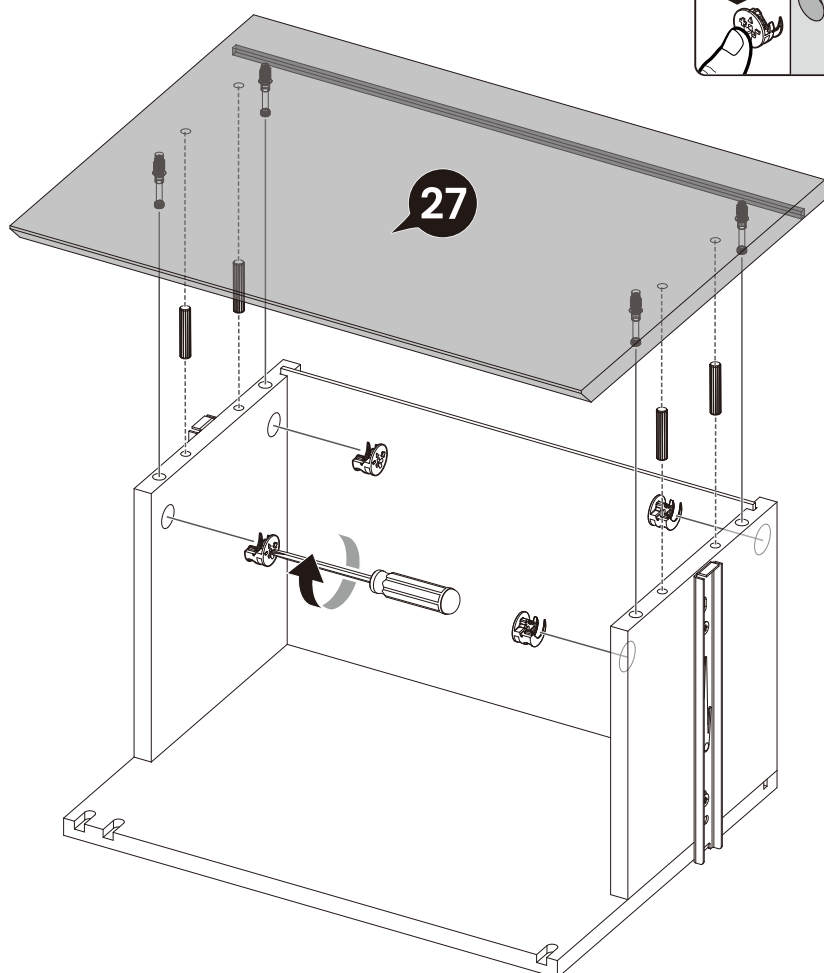
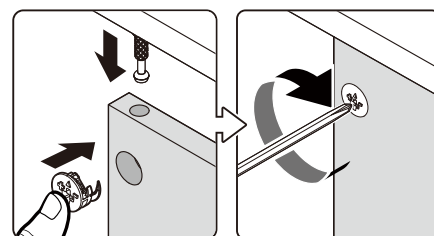
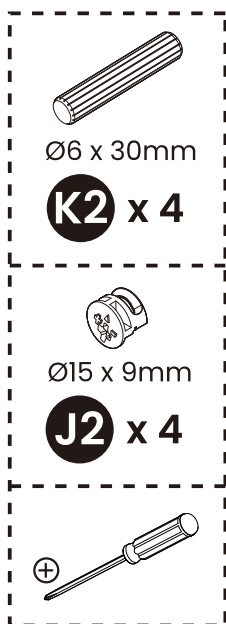
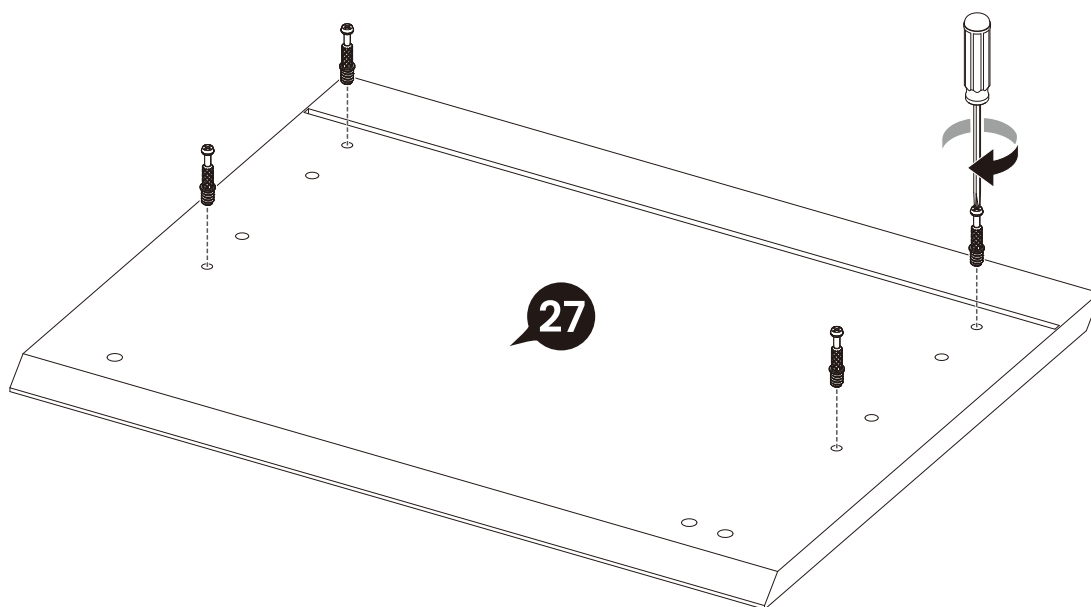
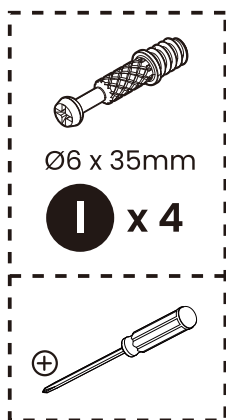


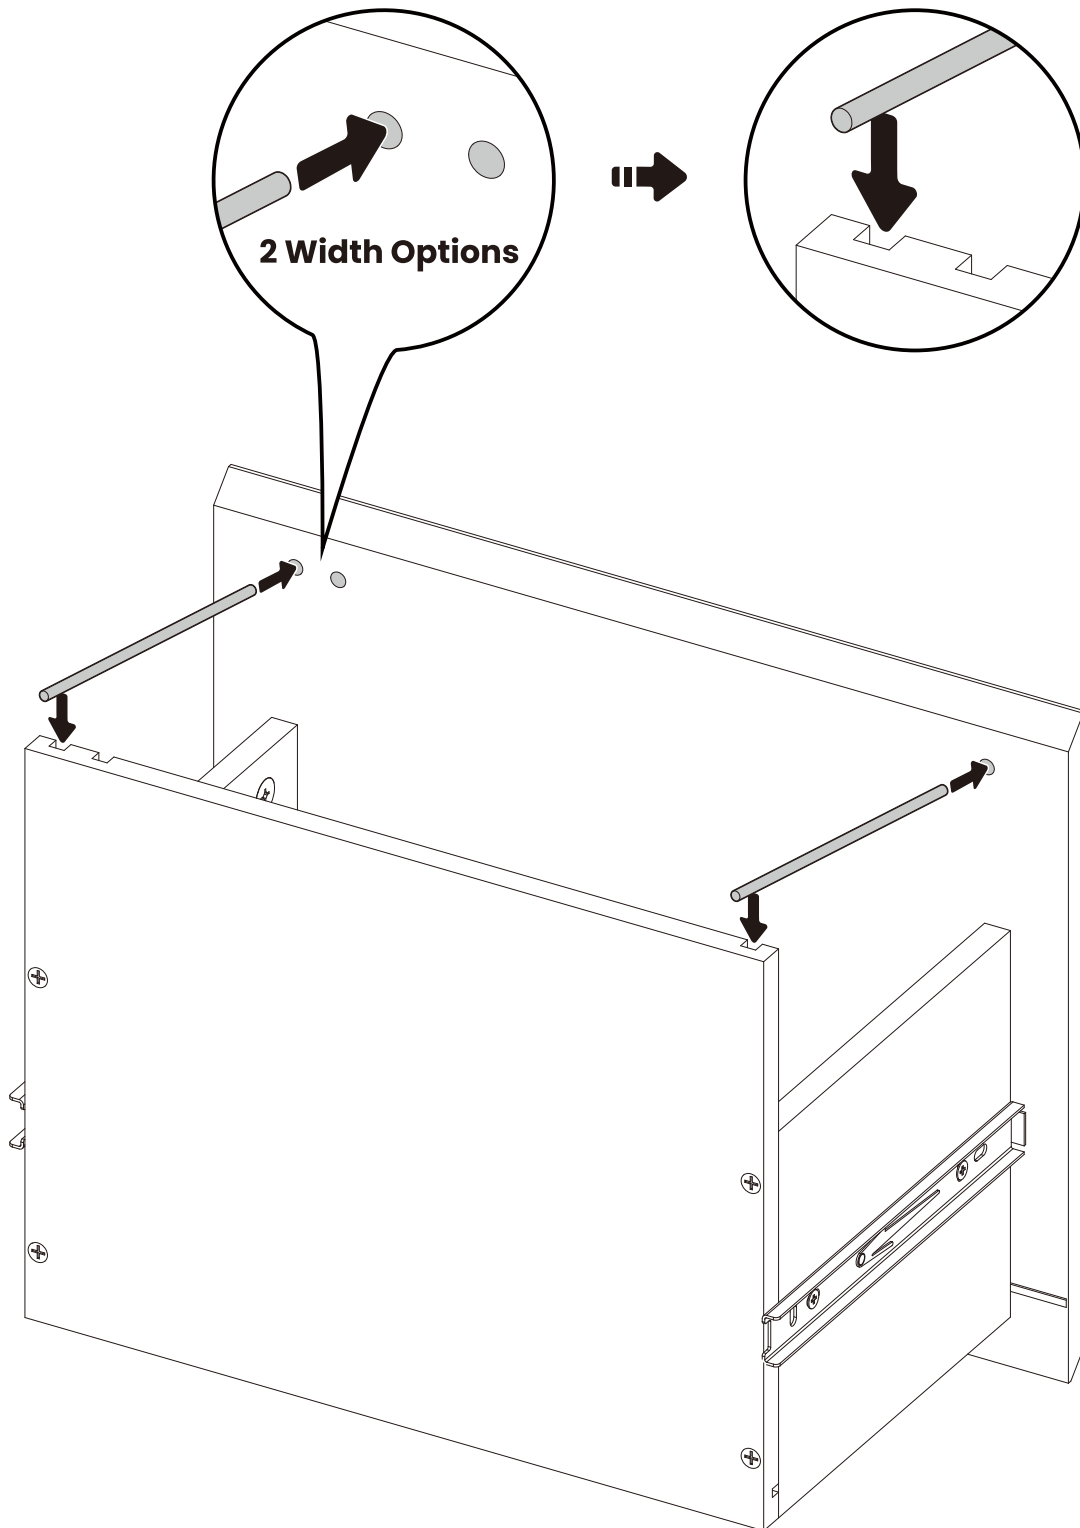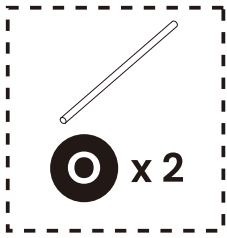


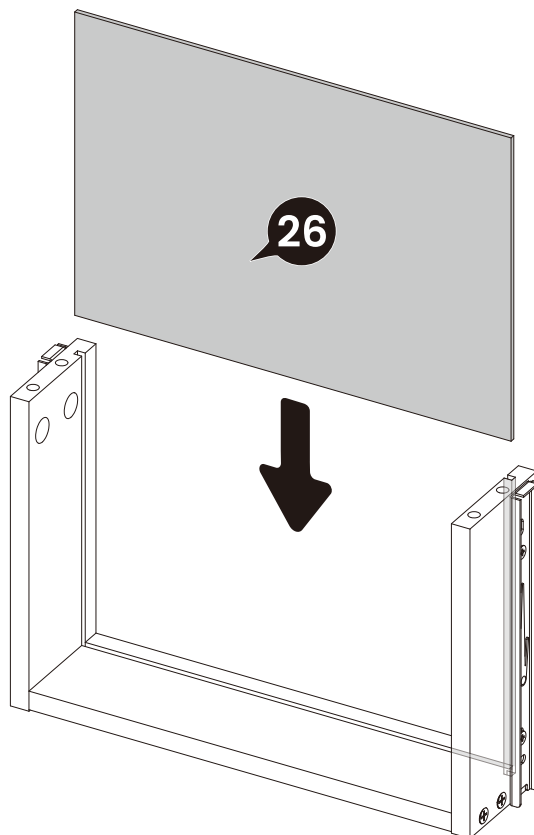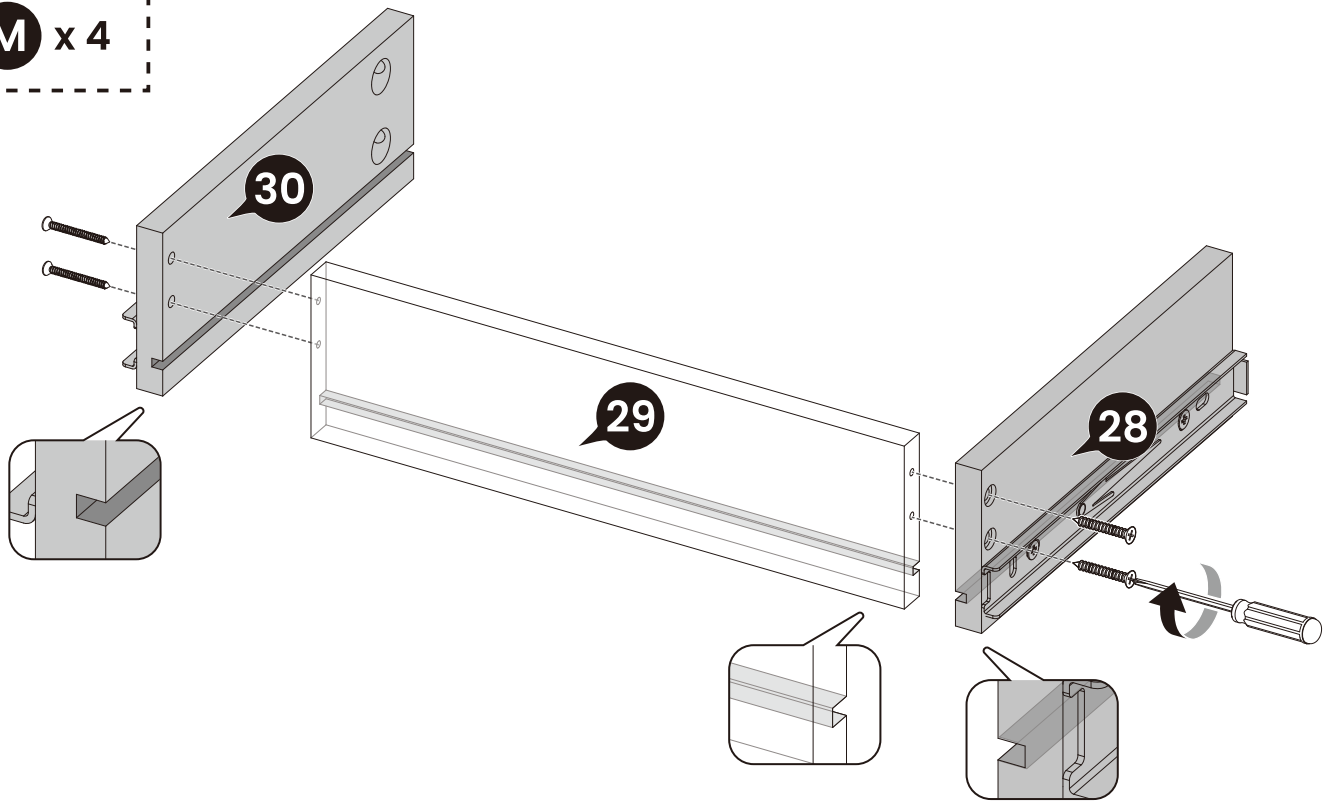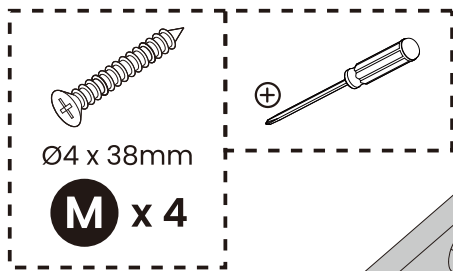

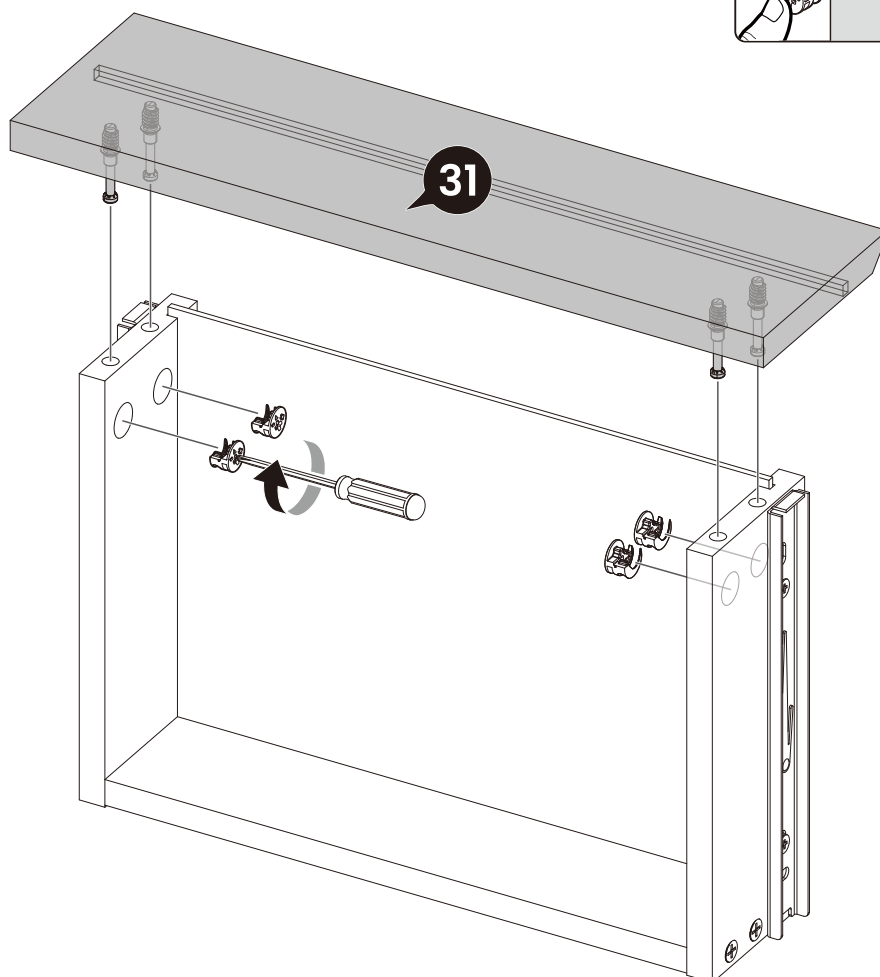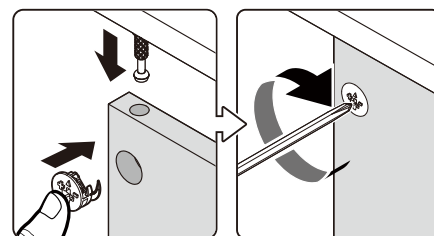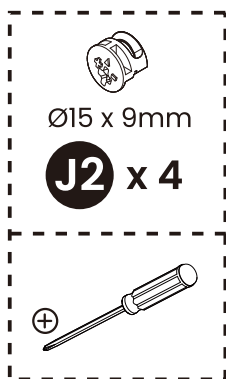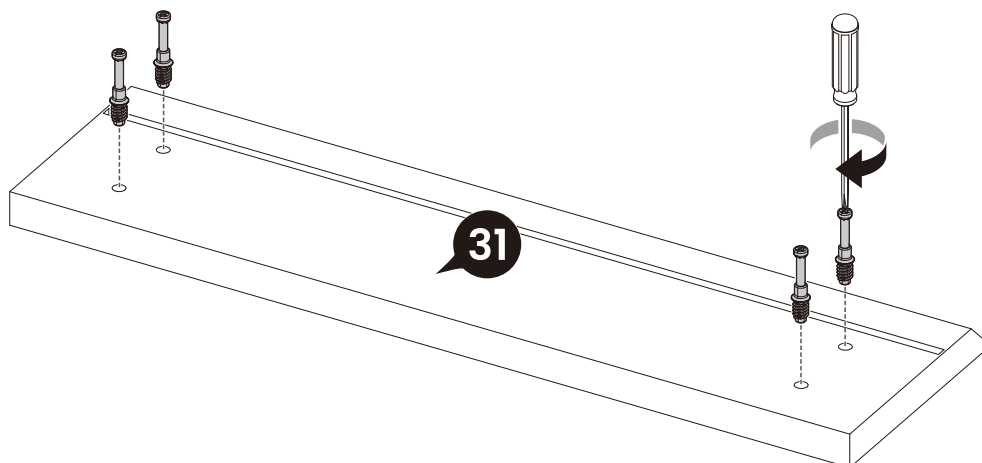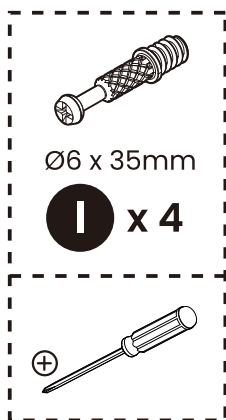


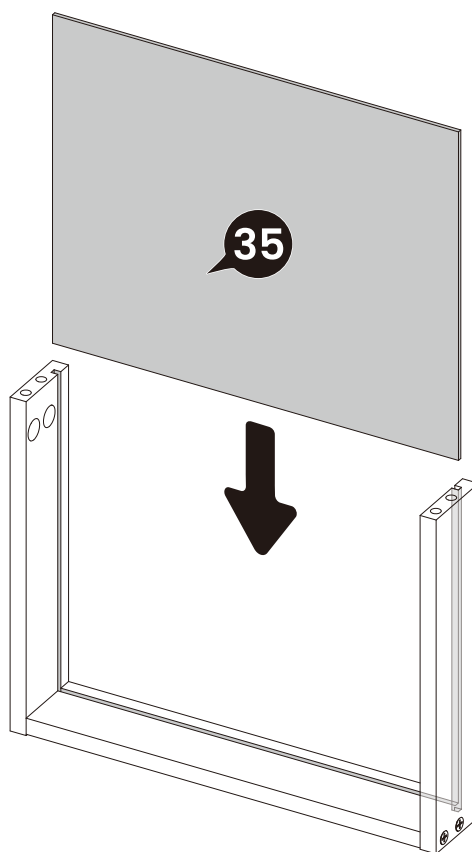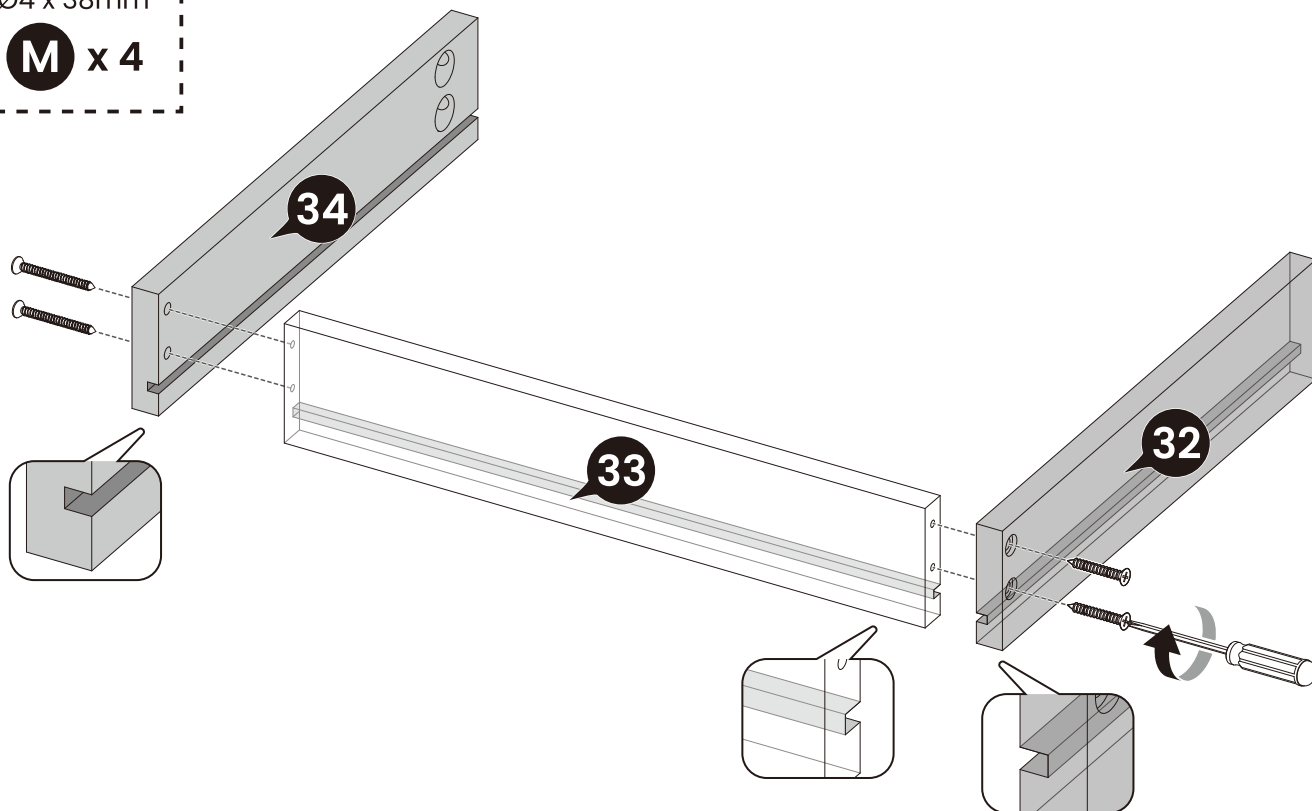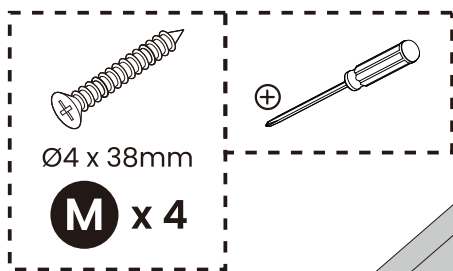

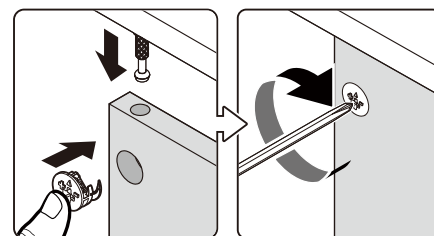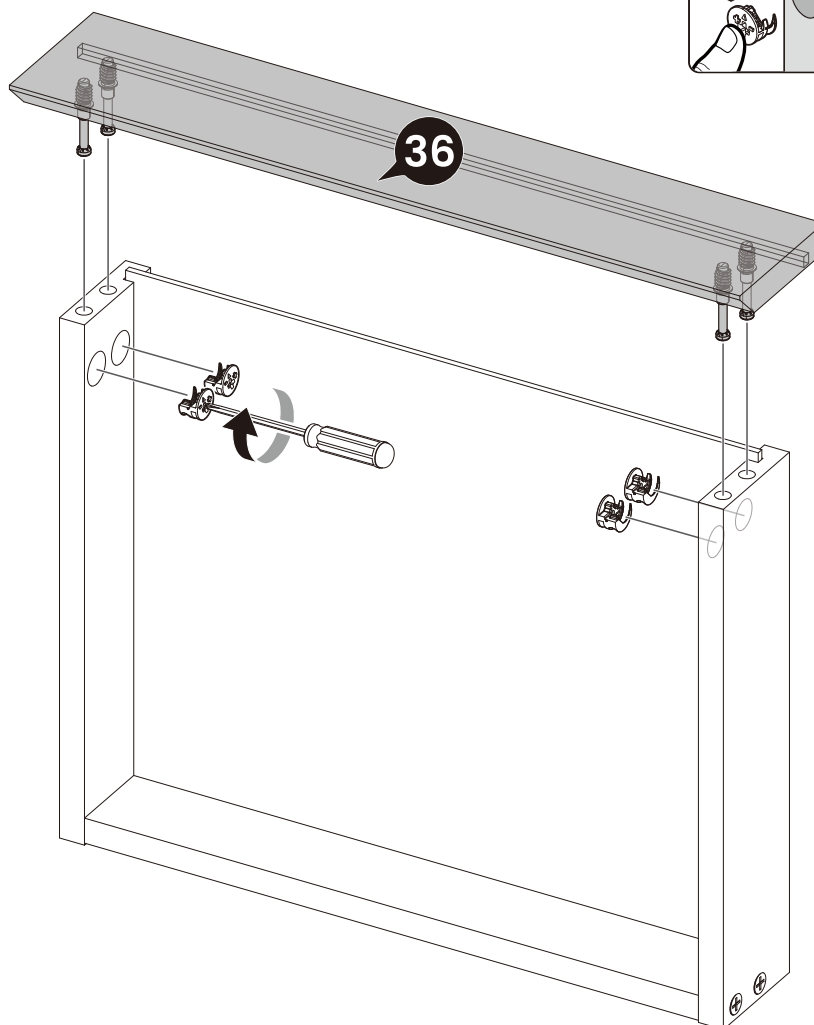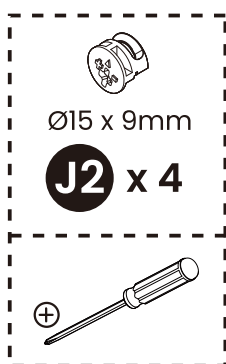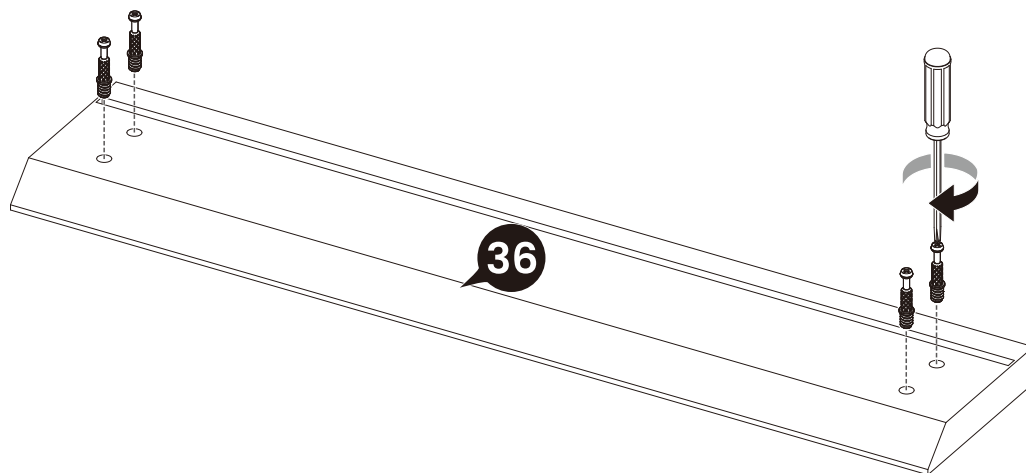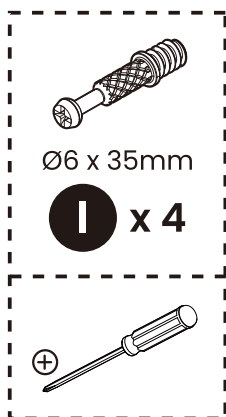


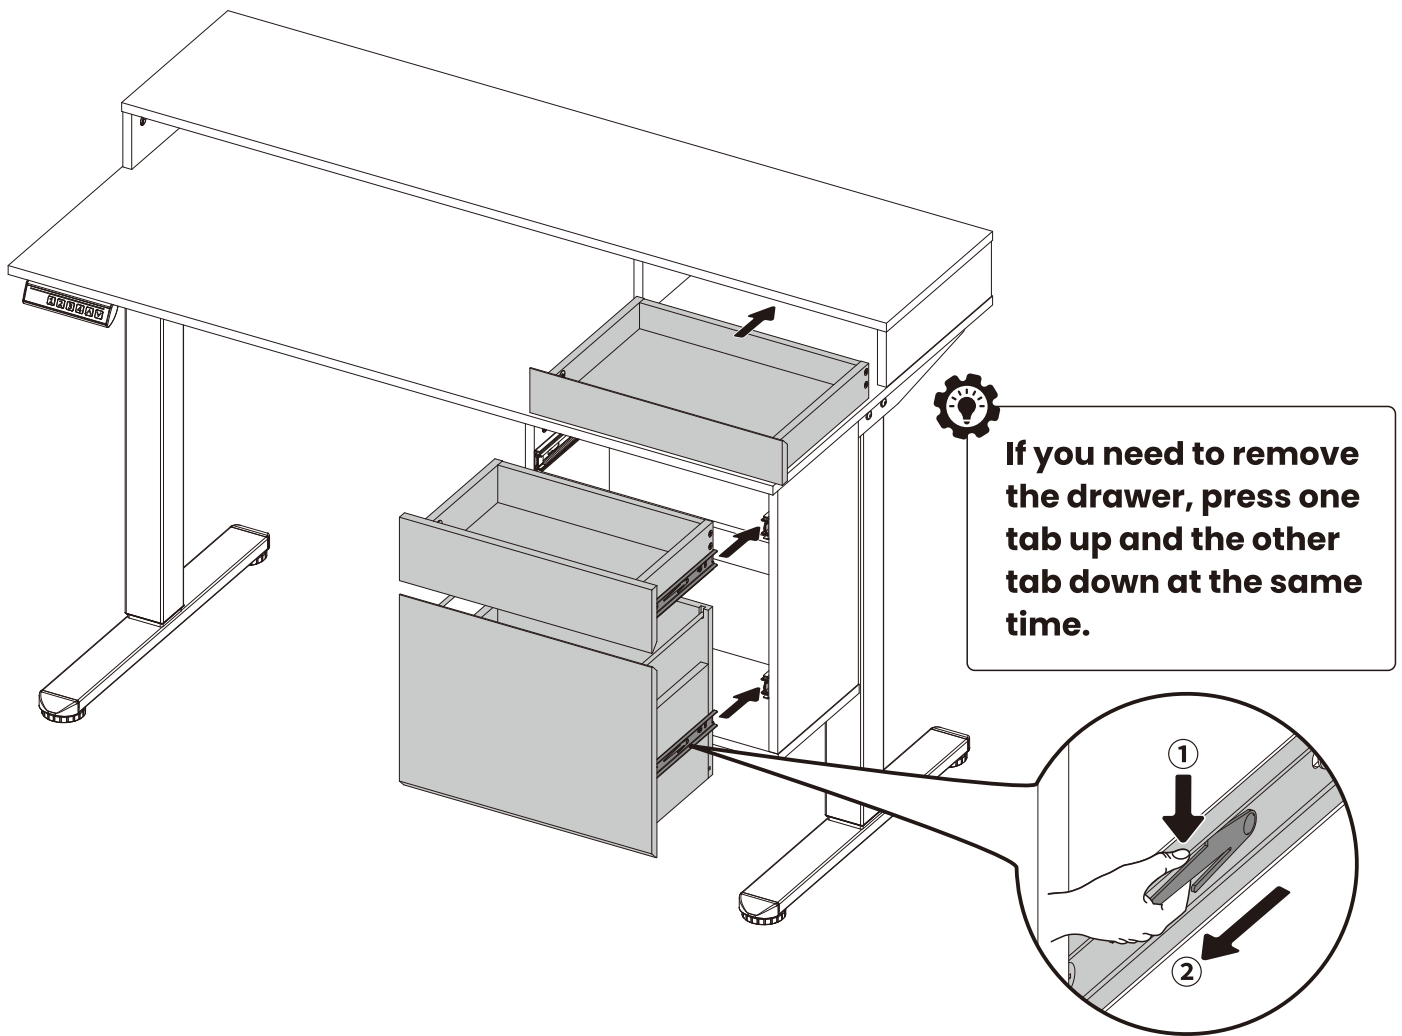


Drawer Alignment Adjustment

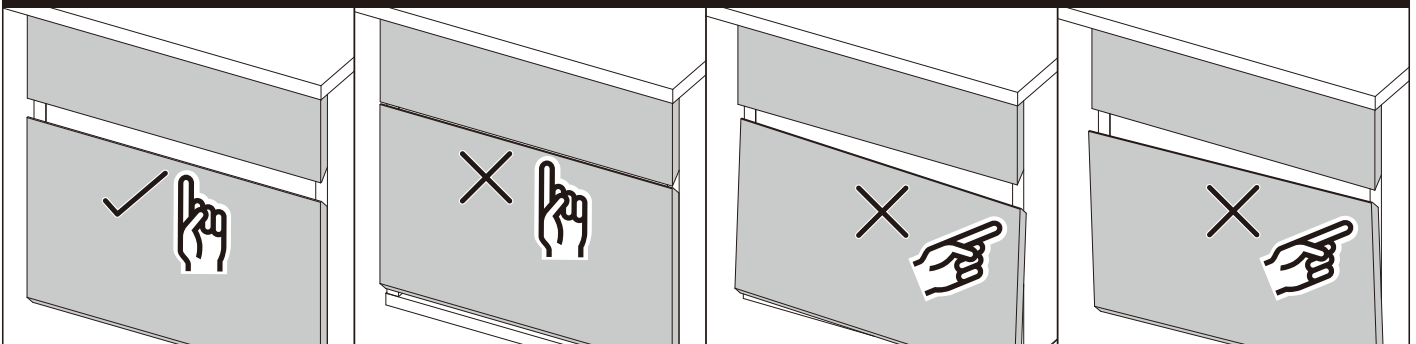

Adjust the slide screws up or down for proper installation.

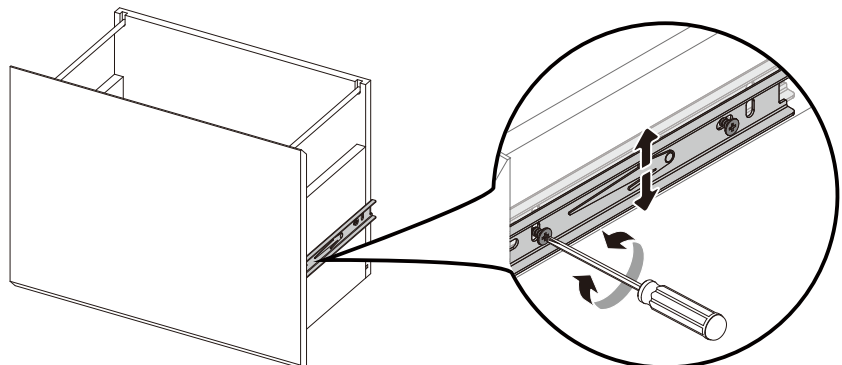

Using the Controller

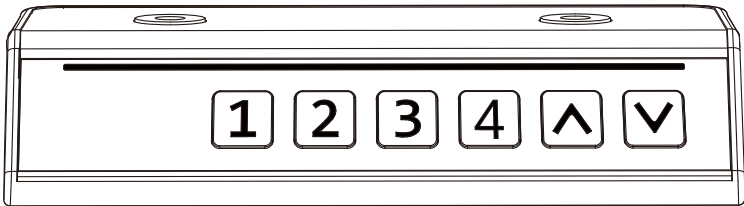

Note: Ensure that there are no obstacles when using the desk, that the desktop is not too close to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operation.

- Up. Max height: 46.5"/118cm
- Down. Min height: 28.3"/72cm

• Save Current Height Setting

Four heights can be saved. Press and hold the 1, 2, 3, or 4 button for 5 seconds until 'H1,' 'H2,' 'H3,' or 'H4' is displayed. The current height will be saved to that button.

• Select Height Setting

Press the 1 / 2 / 3 / 4 button. The desk will move to the height that was previously set for that button.

| Settings | |
|--------------------------------------|--|
| Reset | 1. Press and hold the down arrow button until the desk goes down to its lowest level, then release the button. |
| 'RES' displays as RES on the screen. | 2. Press and hold the down arrow button for 5 seconds, and the screen will display 'RES.' Continue holding until the desk comes back up slightly. Reset is complete. |

Protection Mode Error Codes

| | |
|------------|--|
| Hot | Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment. |
| E10 | Sensor Malfunction Warning: Motor safety sensor cannot be detected. Power off, disconnect the cables, reconnect the cables, then power back on and perform a reset. |
| E20 | Overload Warning: Max load exceeded. If raising the desk, remove all items from the desk and try again. If lowering the desk, power off, remove all items from the desk, power back on, then try again. If error code persists, follow the reset instructions. |
| E02 | Operation Status Warning: The desk stops moving if vibration, impact, or incline are detected. If this detection is incorrect, follow the reset instructions before continuing use. |
| E32 | Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, power off, disconnect the cables, reconnect the cables, then power back on and perform a reset. |
| E31 | Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, power off, disconnect the cables, reconnect the cables, then power back on and perform a reset. |
| | Cable Disconnection Warning: Ensure all cables are properly connected and the controller is plugged in before use. |