
Electric Standing Desk

Perledesign-Series

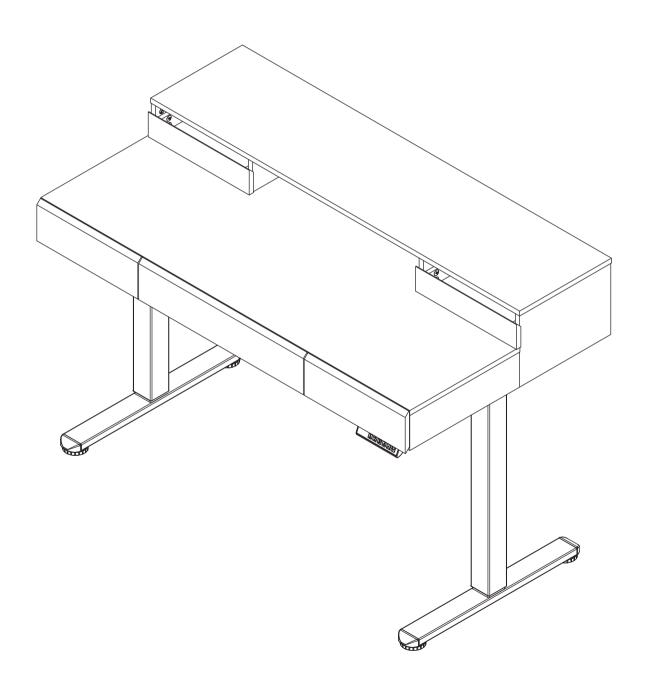


HNESD214-120A

support@bsqworld.com


Note

The product is packed into two separate parcels. Please make sure both parcels are received before assembly. To assemble, follow the instruction manual for HNESD214-120A.



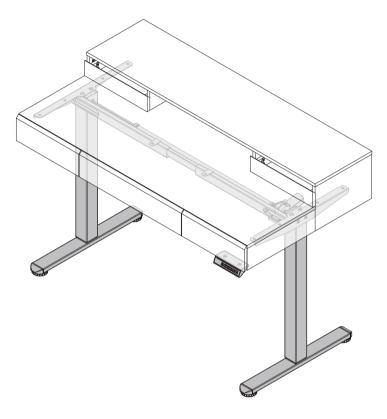

Box for HNESD214-120A
Desktop + Cabinet

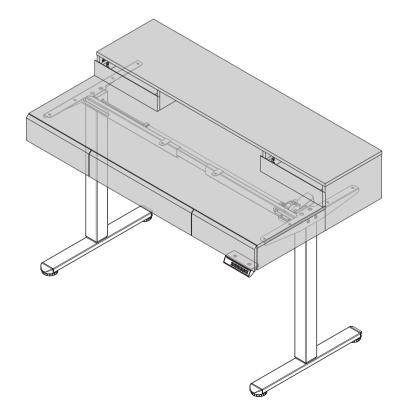



Height Adjustment Range 28.3-46.5" (72-118cm)




Power Input 100V-240V



Max. Speed 20mm/s





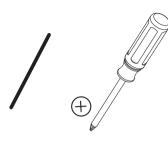





M6 x 11mm





M6 x 35mm



x 8



M8 x 12mm





3/16" (5mm)





M6 x 12mm





M5 x 12mm





5/64" (2mm)







Accessories contained in box for HNESD214-120A

Accessories contained in box for HNESD217



Ø6 x 35mm





Ø6 x 50mm



 


Ø4 x 38mm





Ø15 x 11mm





Ø15 x 9mm





Ø8 x 30mm





 






Ø3.5 x 12mm












support@bsqworld.com

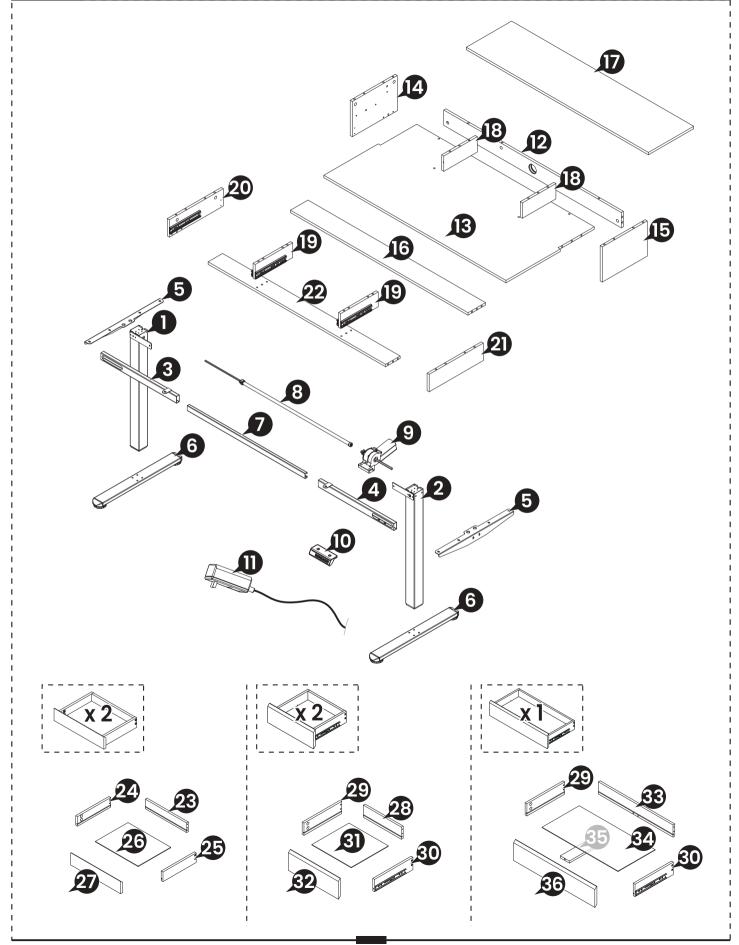






Assembling the Destop and Cabinets

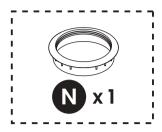


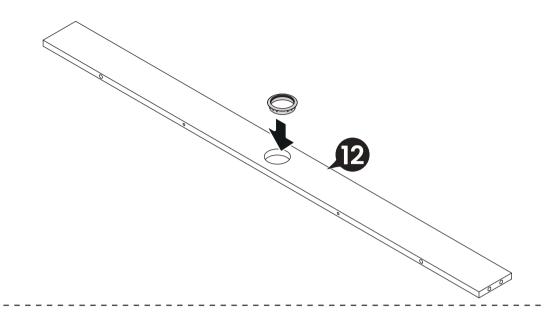


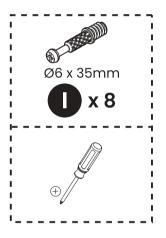


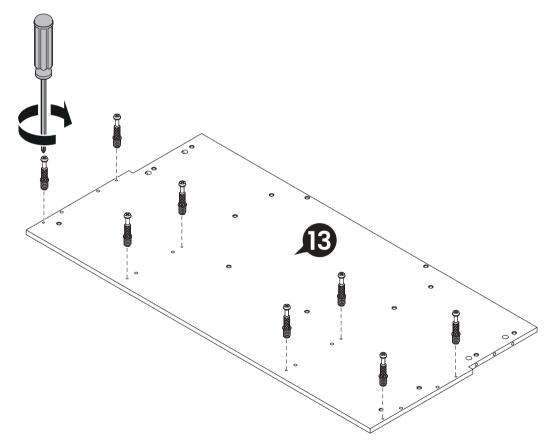


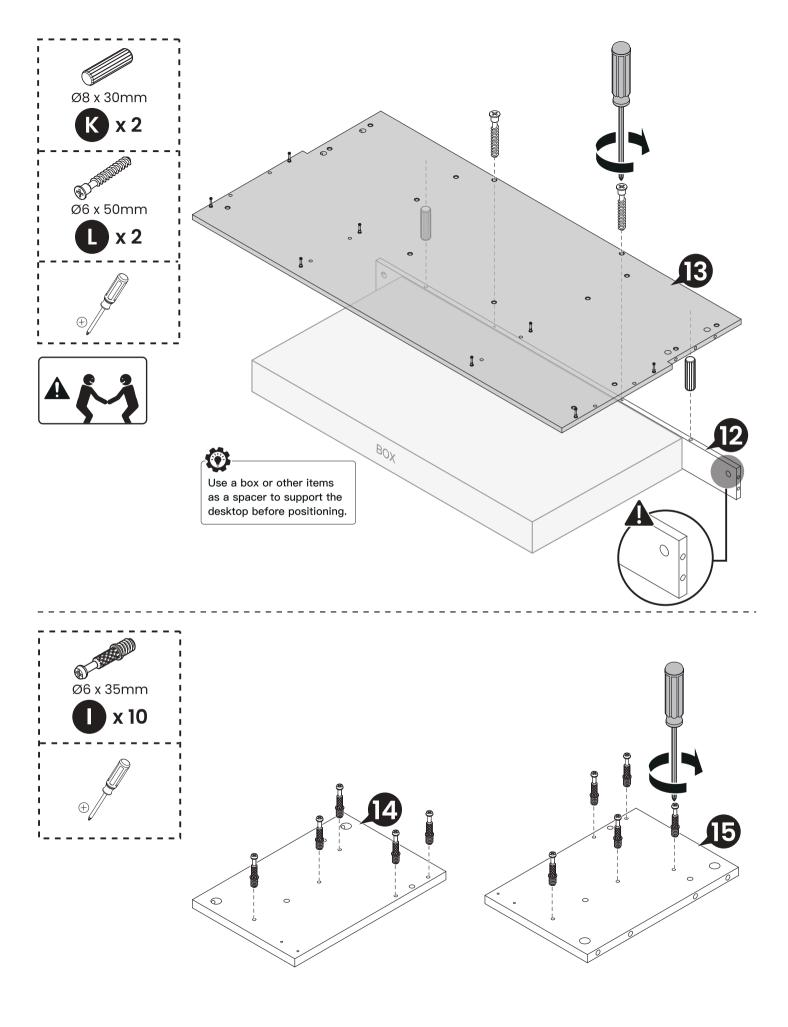


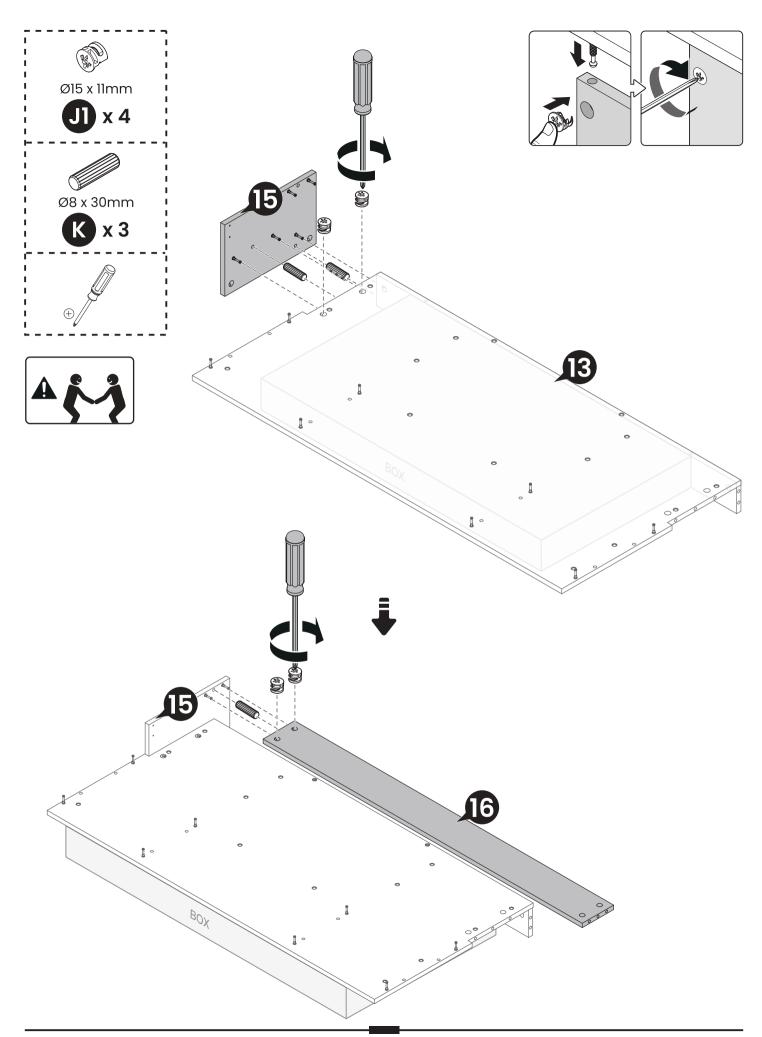


 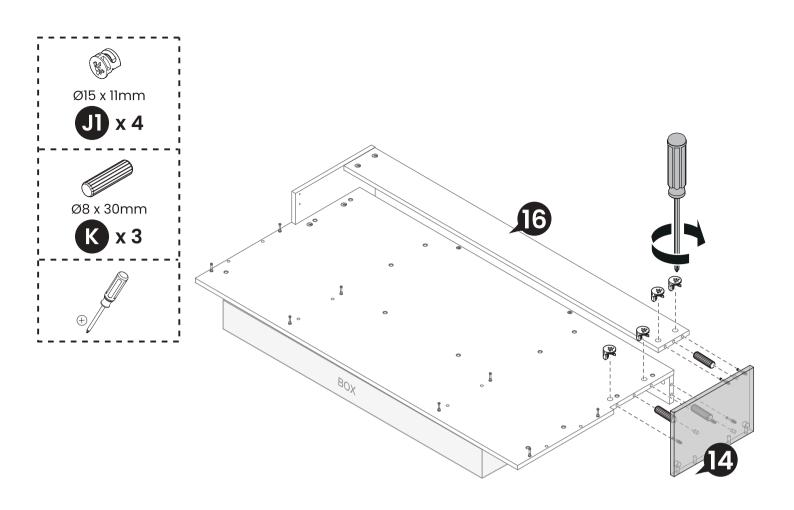


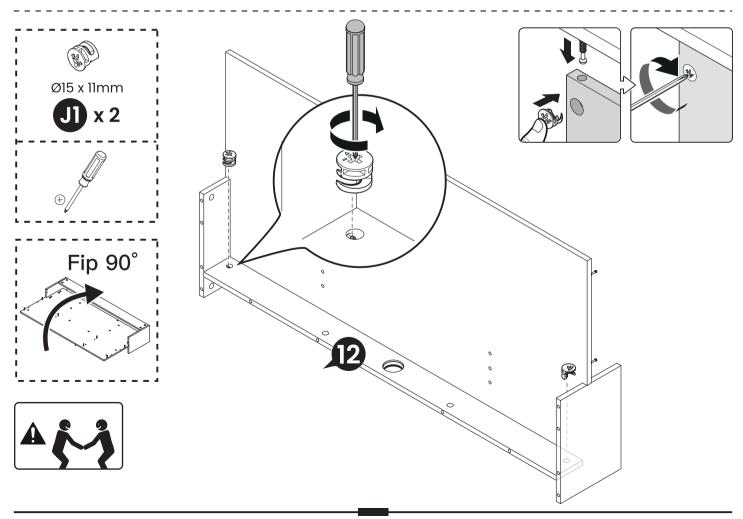


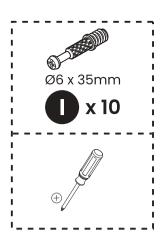


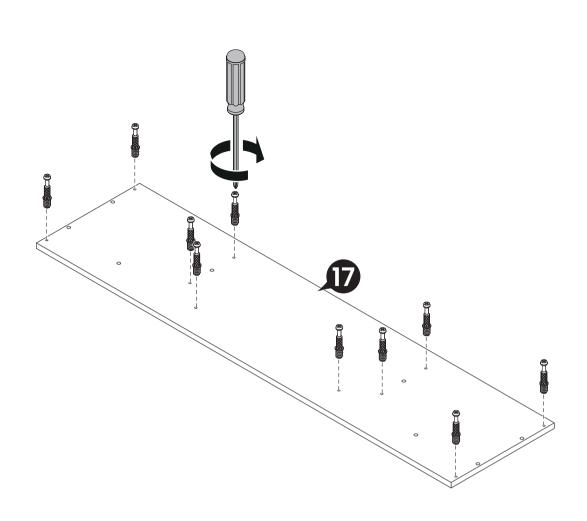


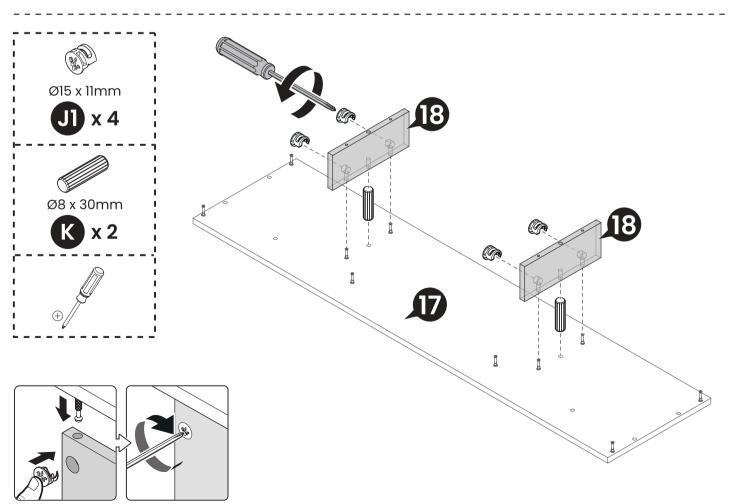





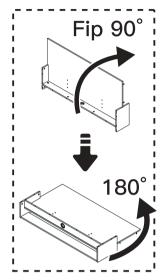


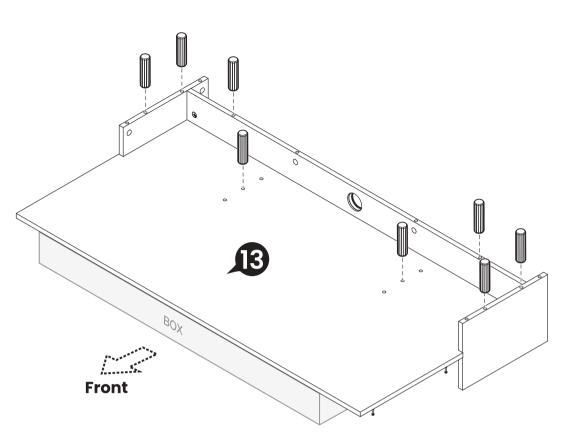


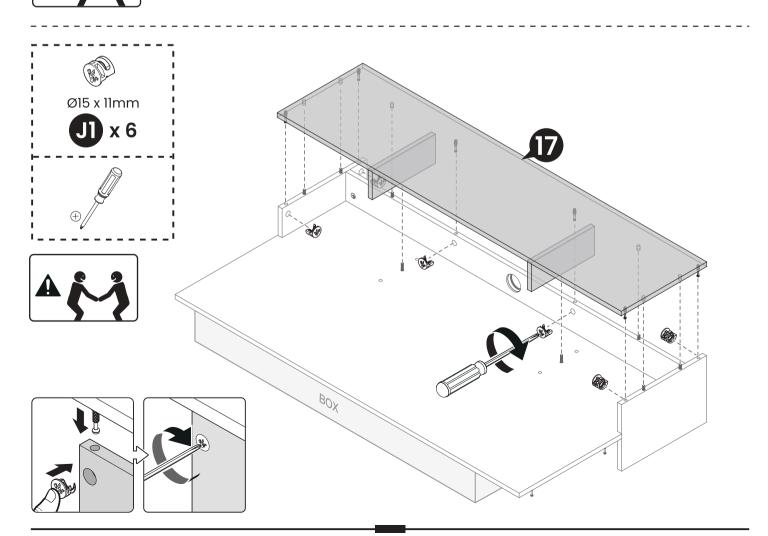


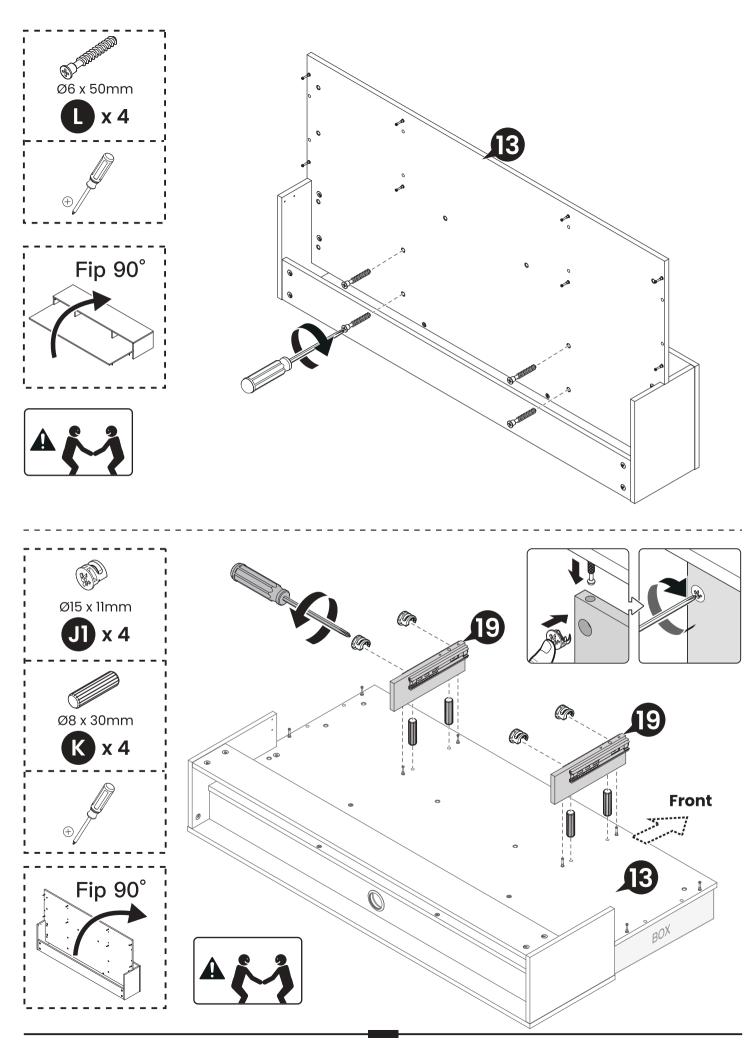


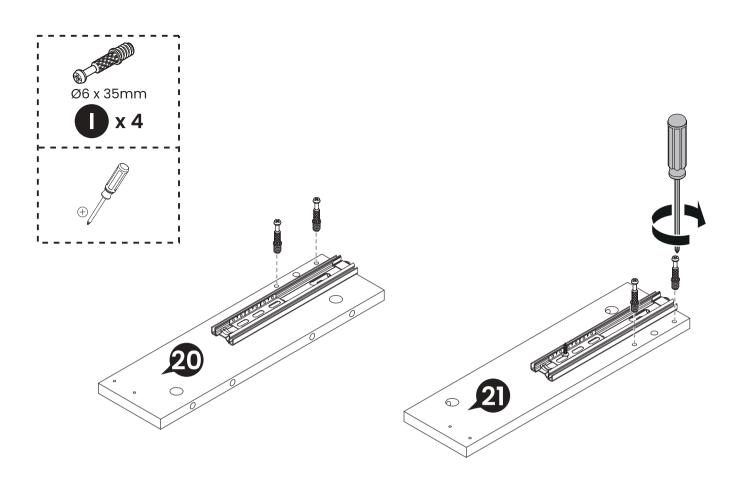


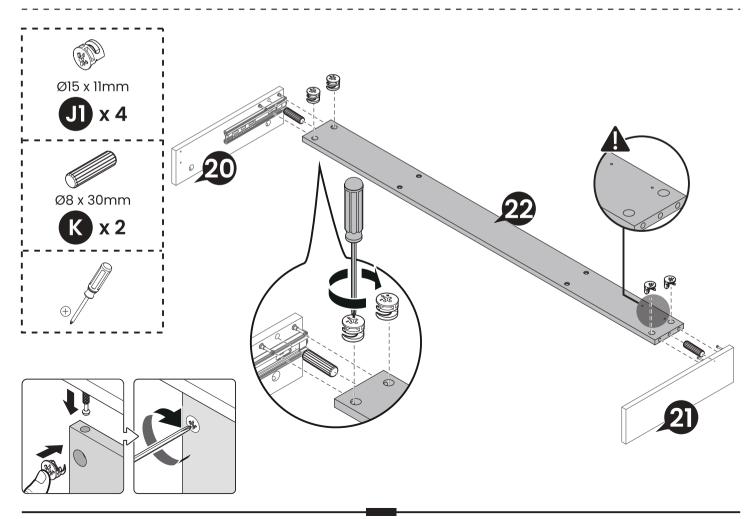


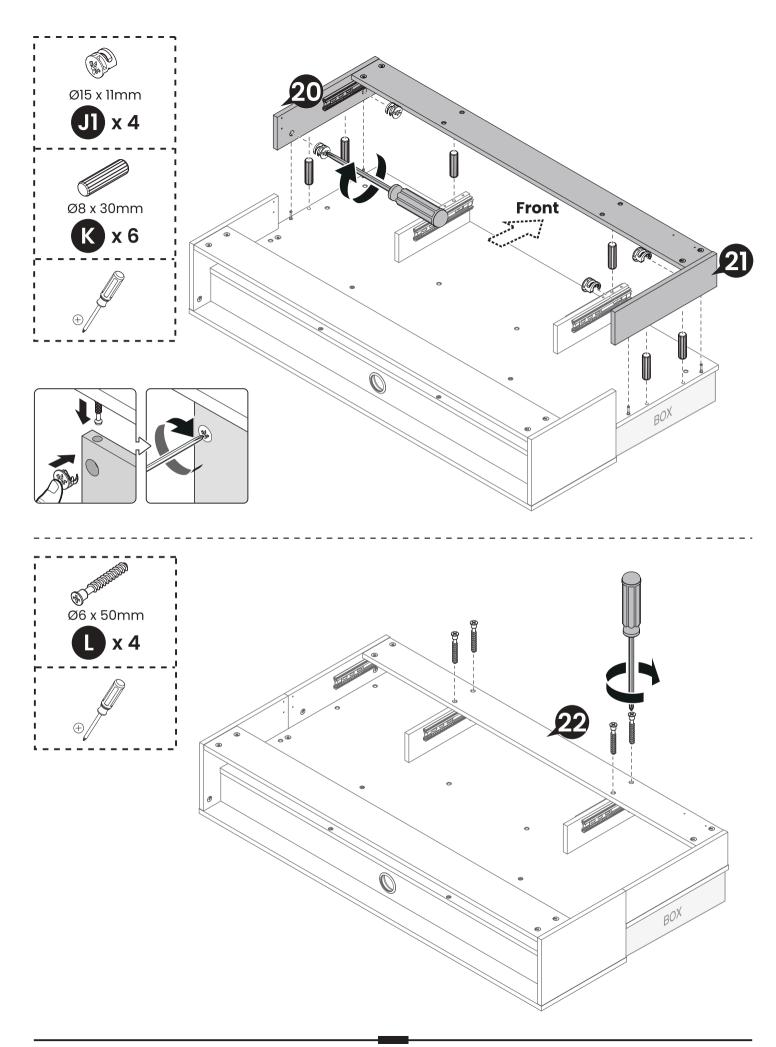

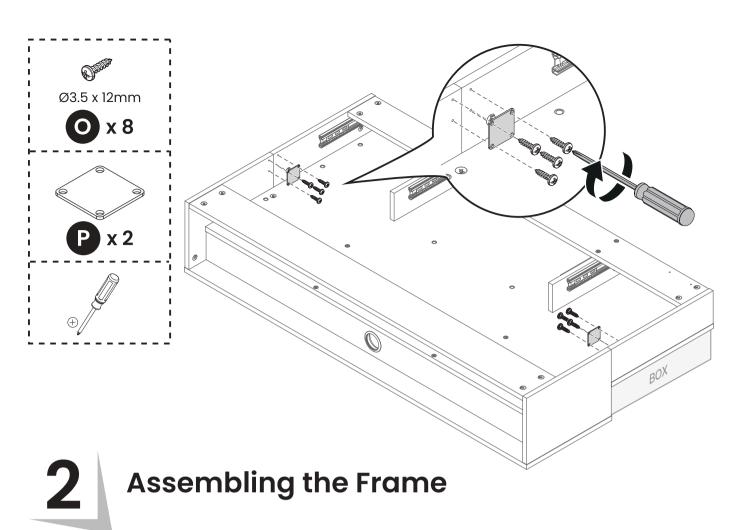


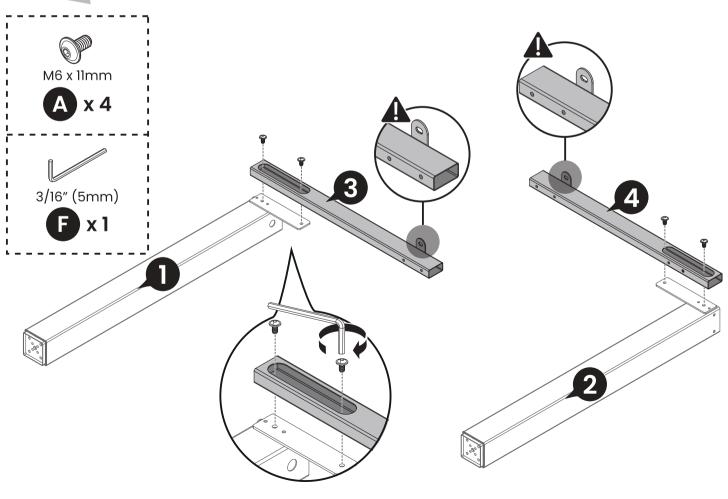


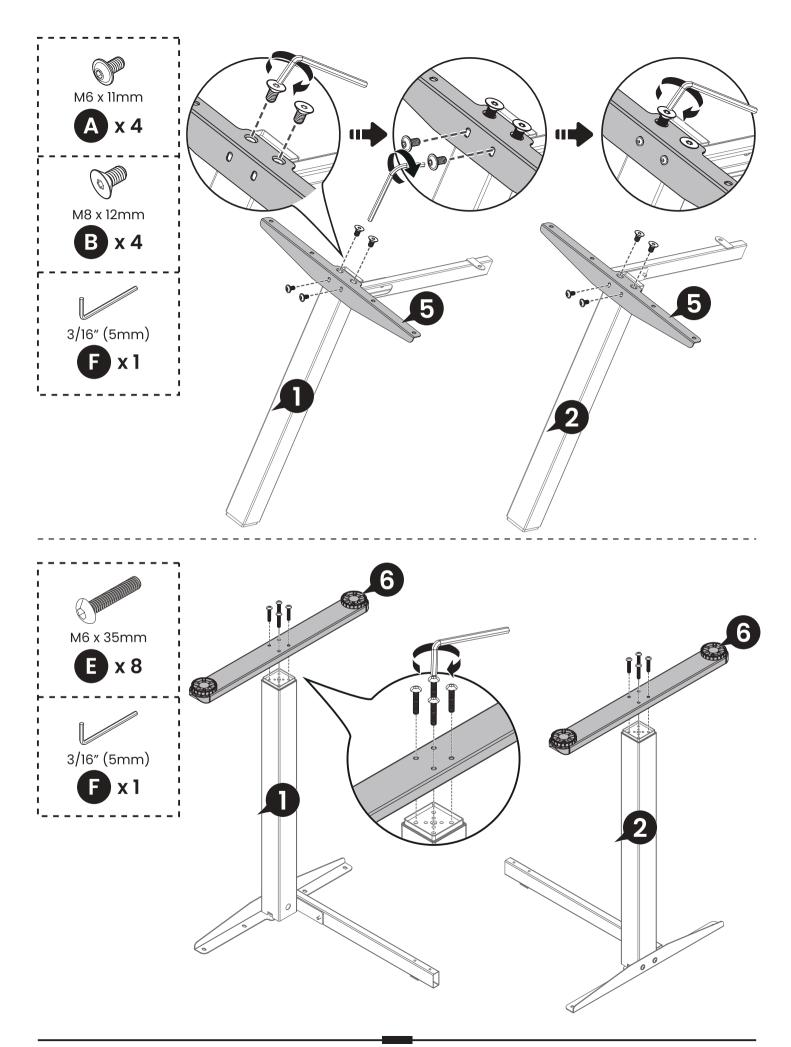


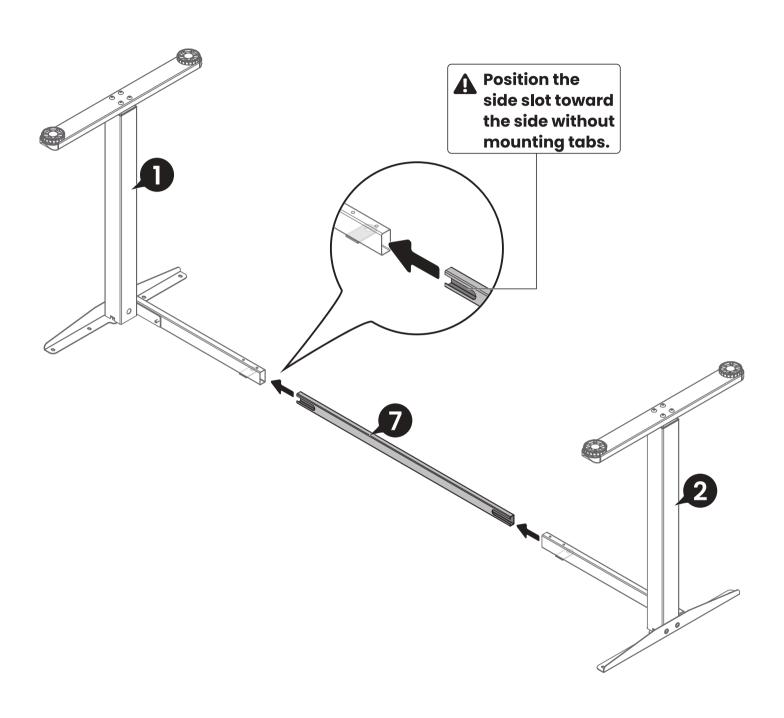


Attaching the Frame and the Controller

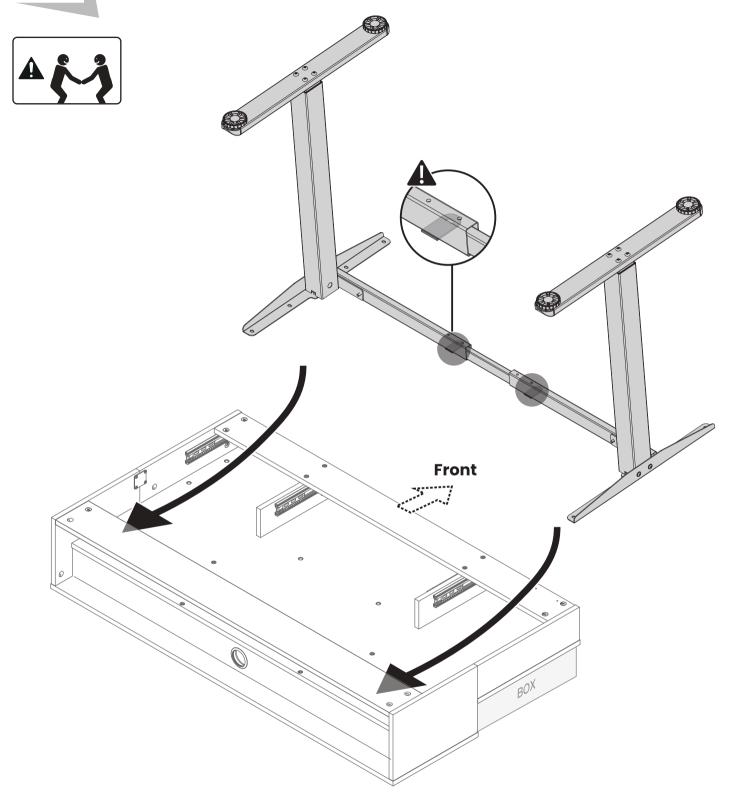


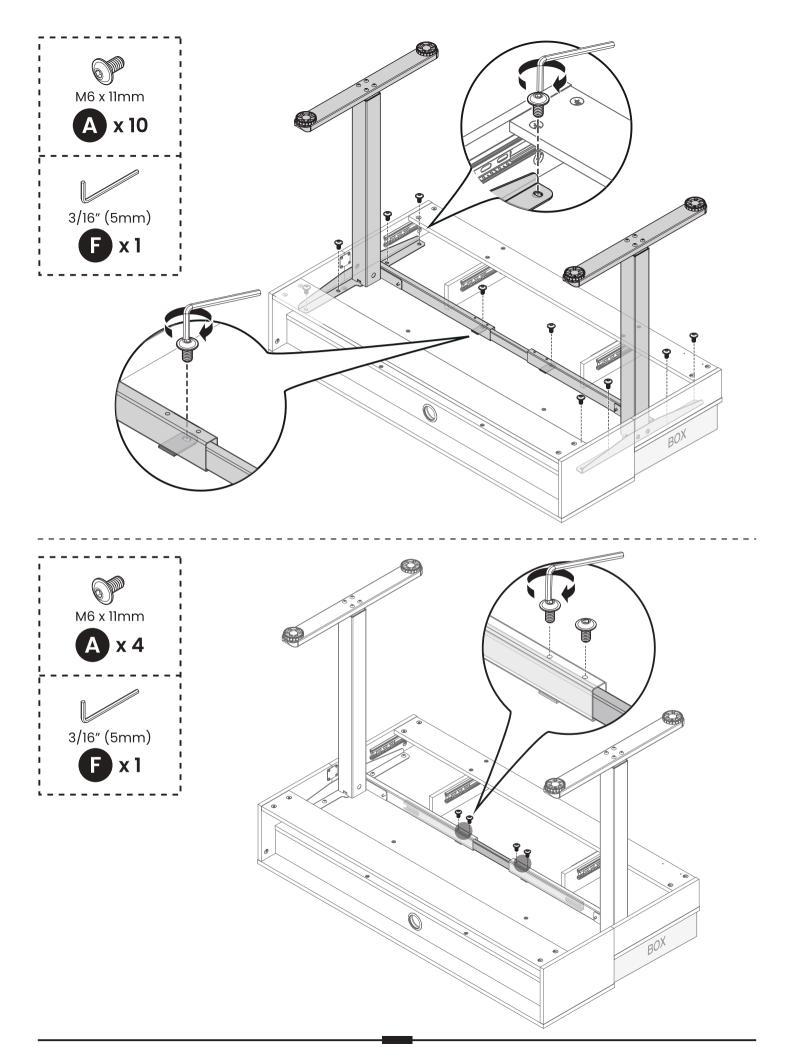


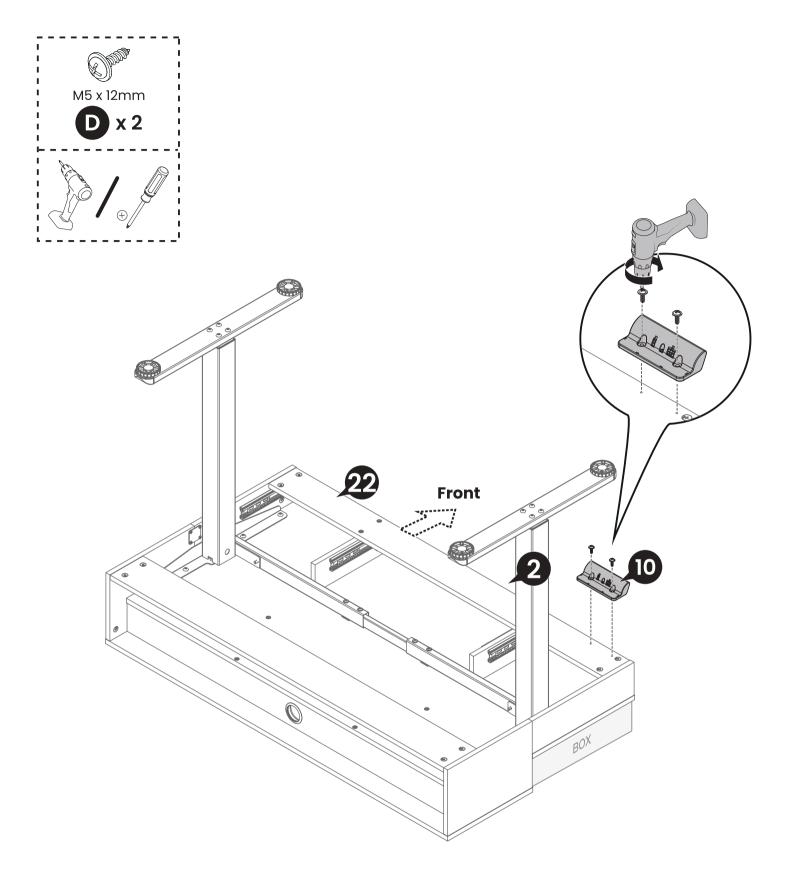


Attaching the Transmission Rod

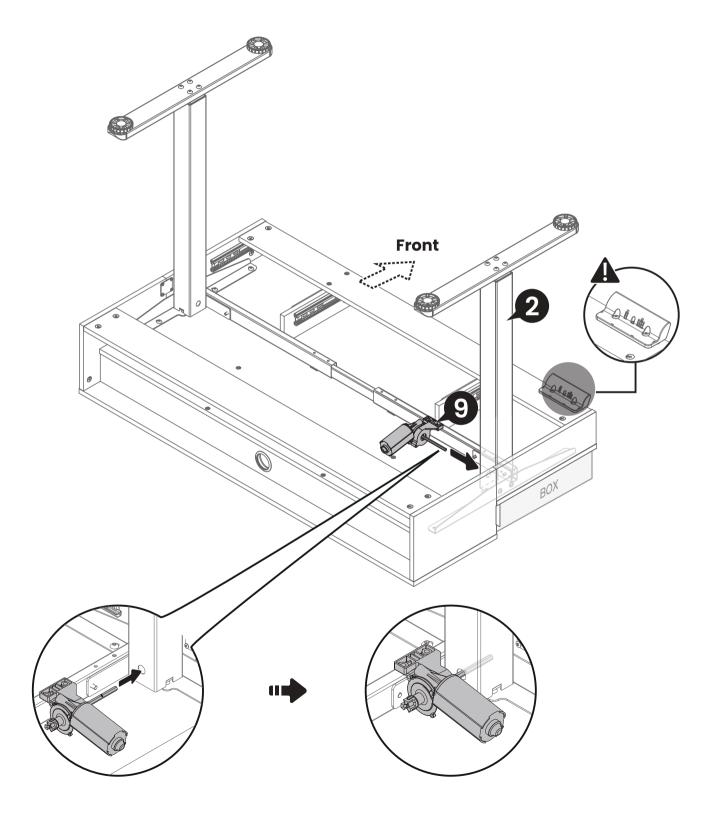

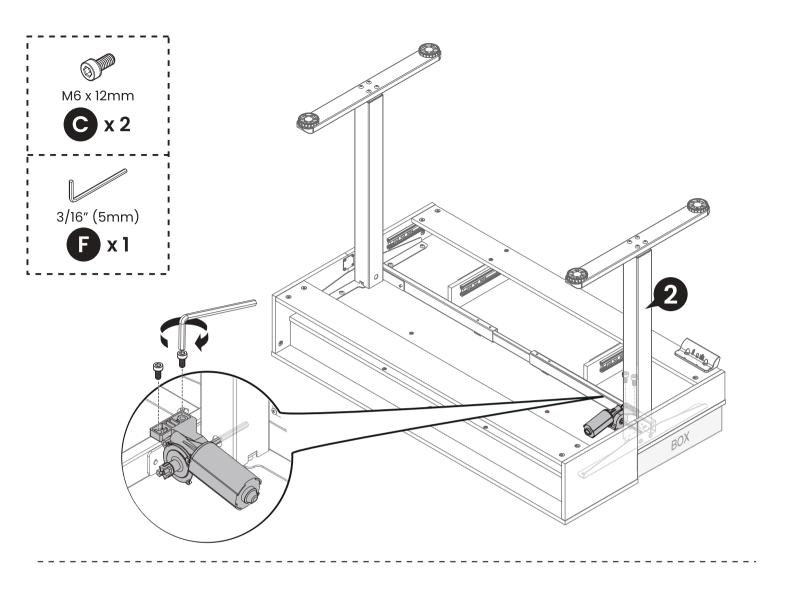


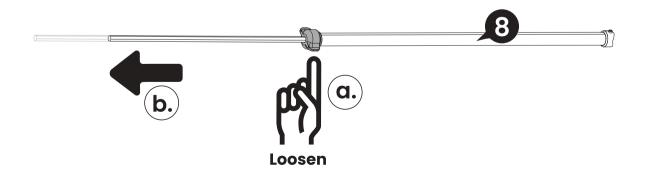


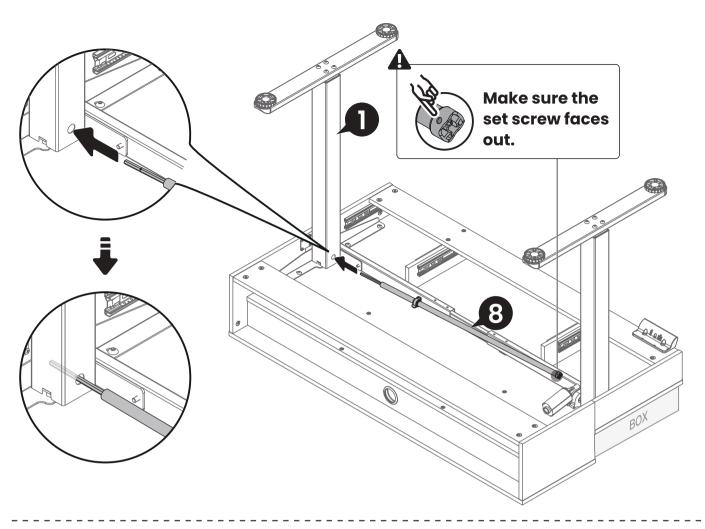

Adjust uneven desk legs if needed:


Measure the height of each leg to see if they are set at the same level. If not, turn the rod to raise or lower the leg until it's level with the leg with motor.

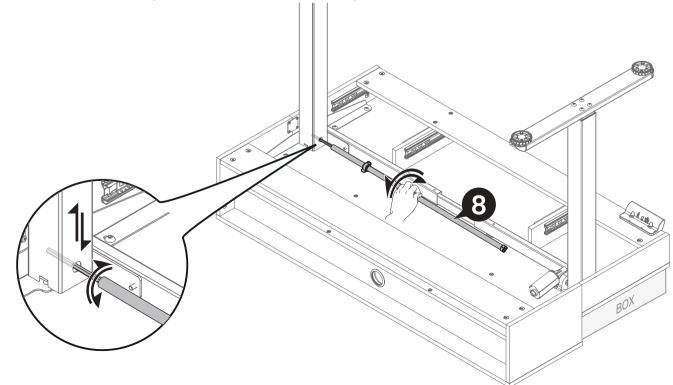

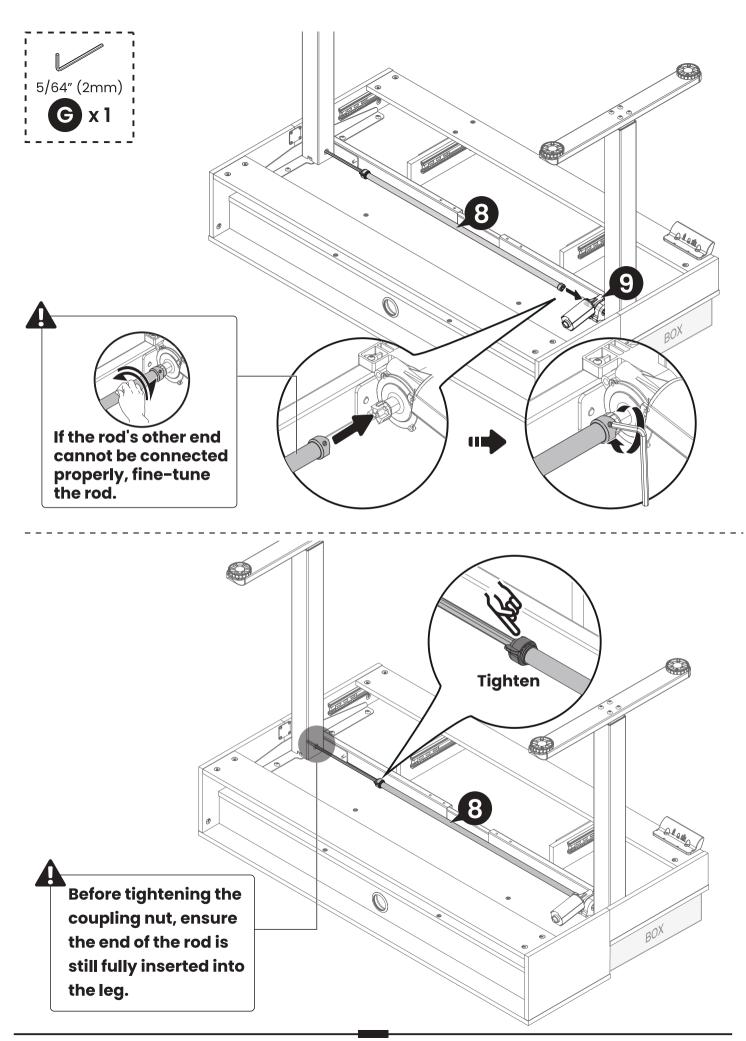


Connecting the Cables


An example of a cable clip layout is indicated below. However, the cable clips can be arranged according to your needs.

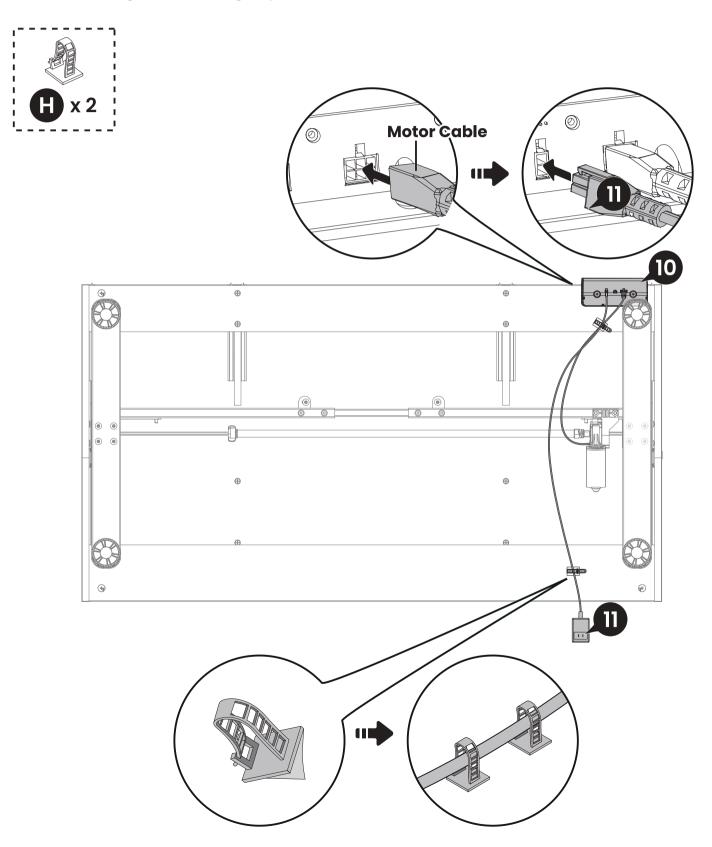




 When flipping the desk over, make sure the controller does not hit the ground, which could cause damage.




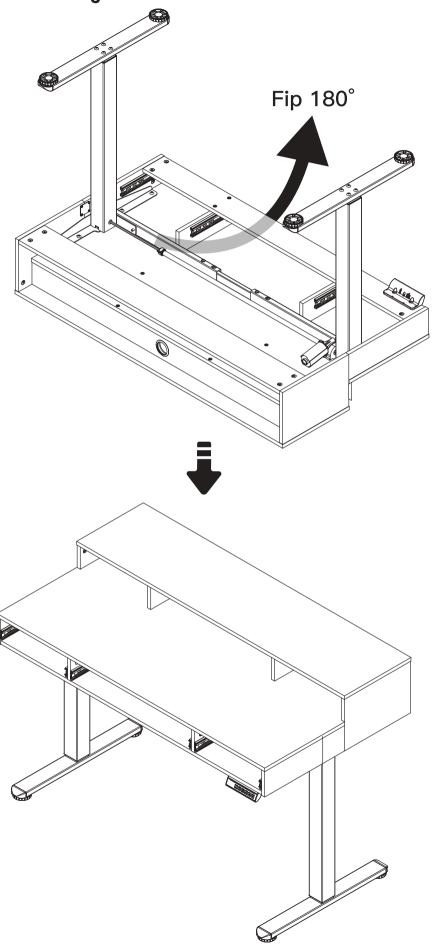



Attaching the Drawers

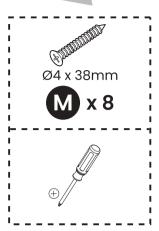



x

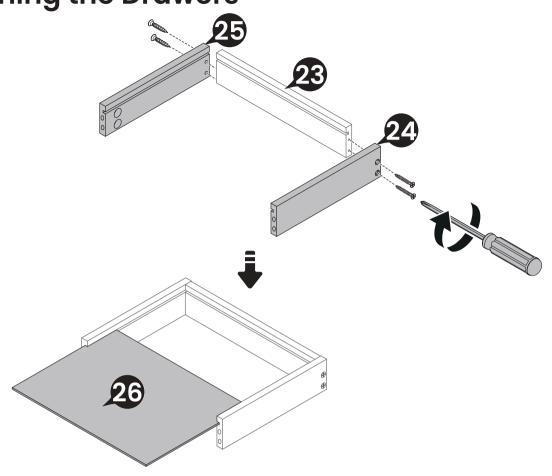


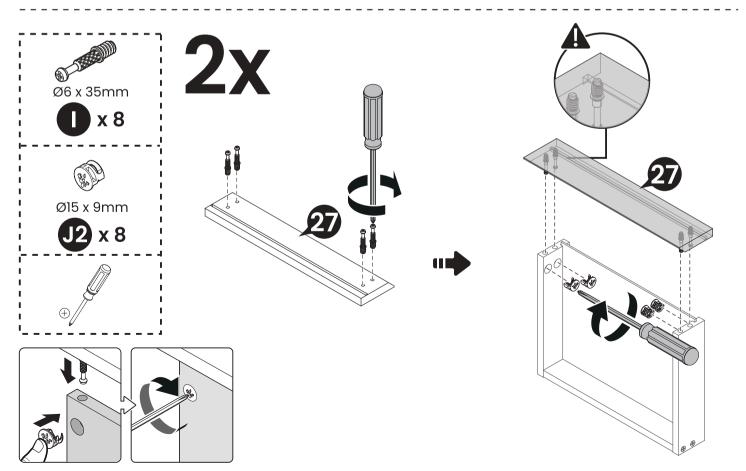


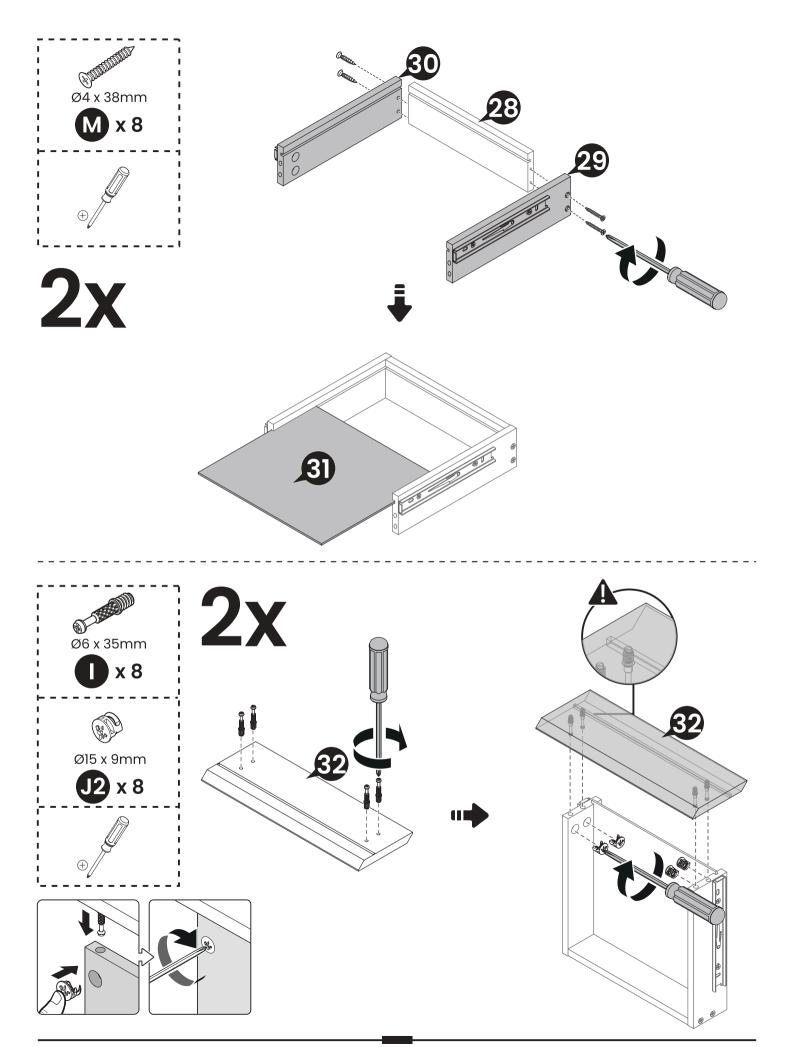


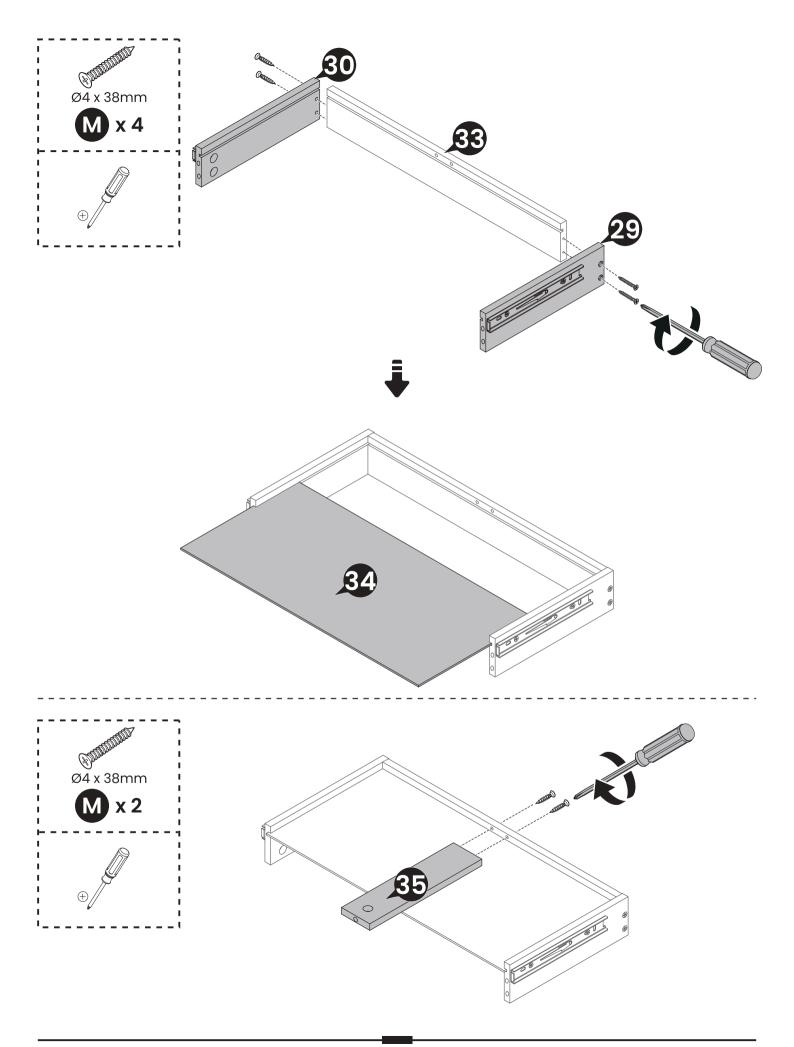


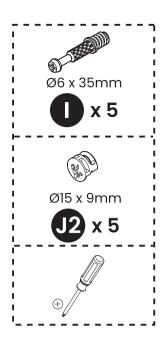


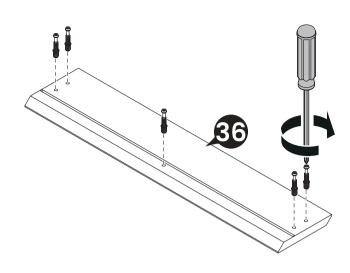

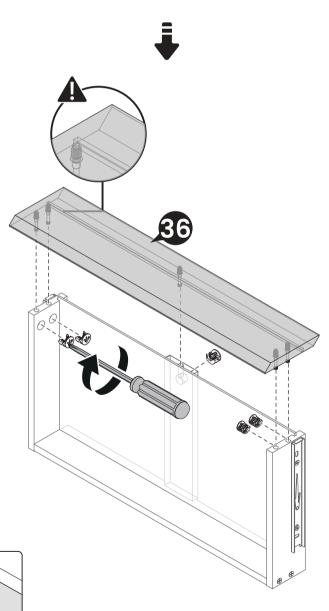

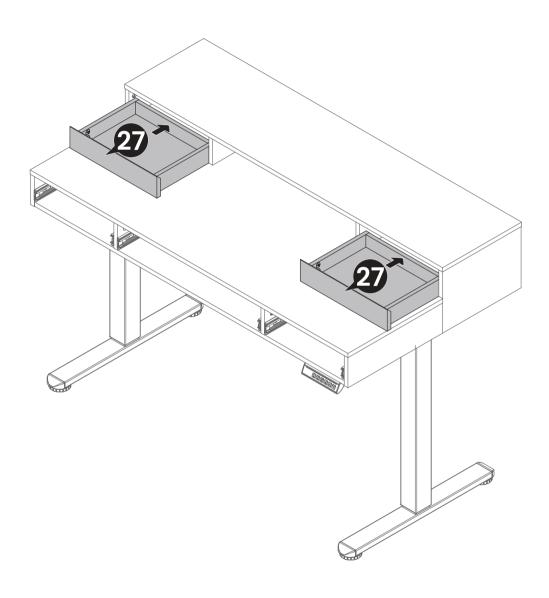


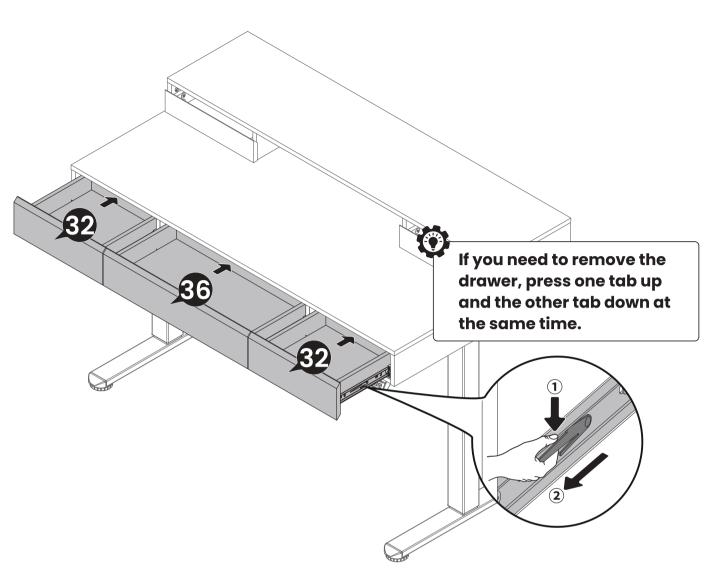

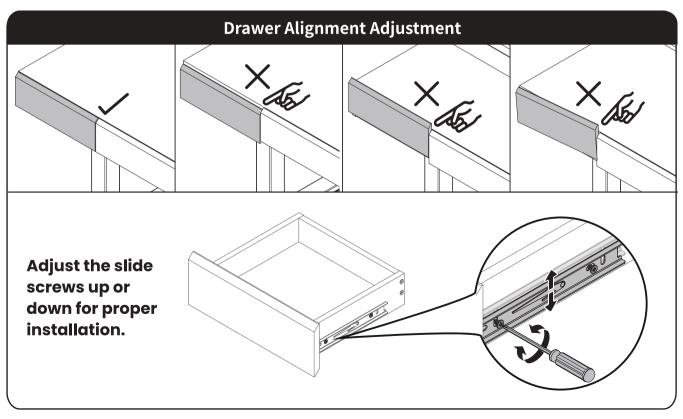

Using the Controller



 

Note: Ensure that there are no obstacles when using the desk, that the desktop is not too close to the wall, and that all cables are long enough for the desk to move up and down freely. When the controller screen is off (power-saving mode), press any button to wake it before operation.

▲ Up. Max height: 46.5"/118cm

☑ Down. Min height: 28.3"/72cm

• Save Current Height Setting

Four heights can be saved. Press and hold the 1,2,3, or 4 button for 5 seconds until 'H1,' 'H2,' 'H3,' or 'H4' is displayed. The current height will be saved to that button.

Select Height Setting

Press the $\boxed{1}/\boxed{2}/\boxed{3}/\boxed{4}$ button. The desk will move to the height that was previously set for that button.

Settings						
Reset	1. Press and hold the 🗹 button until the desk goes down to its lowest level, then release the button.					
'RES' displays as FES on the screen.	2. Press and hold the 🗹 button for 5 seconds, and the screen will display 'RES.' Continue holding until the desk comes back up slightly. Reset is complete.					

Protection Mode Error Codes					
Hot	Overheating Protection: When the motor has been working continuously for 5 minutes, it will stop operating to prevent damage from overheating. Wait for at least 15 minutes before making any further height adjustment.				
E10	Sensor Malfunction Warning: Motor safety sensor cannot be detected. Power off, disconnect the cables, reconnect the cables, then power back on and perform a reset.				
E20	Overload Warning: Max load exceeded. If raising the desk, remove all items from the desk and try again. If lowering the desk, power off, remove all items from the desk, power back on, then try again. If error code persists, follow the reset instructions.				
E02	Operation Status Warning: The desk stops moving if vibration, impact, or incline are detected. If this detection is incorrect, follow the reset instructions before continuing use.				
E32	Overvoltage Protection: Input voltage too high. If the correct AC adapter is being used, power off, disconnect the cables, reconnect the cables, then power back on and perform a reset.				
E31	Undervoltage Protection: Input voltage too low. If the correct AC adapter is being used, power off, disconnect the cables, reconnect the cables, then power back on and perform a reset.				
	Cable Disconnection Warning: Ensure all cables are properly connected and the controller is plugged in before use.				

Thank you for choosing this product!