

INSTRUCTION MANUAL

Rev01(A)

HUANUO

HNOC2



Office Chair



(US / CA) 1-800-556-0533

(UK) 44-808-196-3874



support@huanuoav.com



www.huanuoav.com


Home office use

1. Adjustable Lumbar Support



2. Armrest Height Adjustment:

Raise and lower the armrest to the desired position.

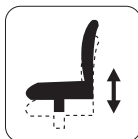

3. Seat Height Adjustment:


To raise the seat, lift your body off the seat and pull the handle up until it reaches your desired height. To lower the seat, rest your body on the seat and pull the handle up until it reaches your desired height.



4. Backrest Rocking Function: Pull the handle out to enable the rocking function (the chair will rock back and forth with the user rather than being locked in a fixed position).

5. Backrest Tilt Tension Adjustment: Turn the knob [+] or [-] to increase or decrease the rocking tension.


Tip: Tension can be adjusted to suit a particular weight. Increase tension for heavier weight and decrease tension for lighter weight.

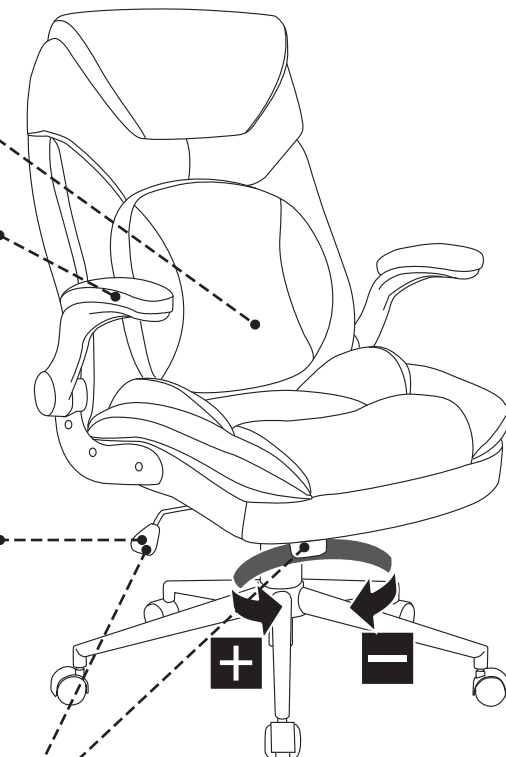

Hard casters for soft floor

IMPORTANT SAFETY INFORMATION

- Check package contents against supplied parts and hardware list to confirm that all components were received undamaged. Do not use damaged or defective parts. If you require replacement parts, please contact our technical support line at 1-800-556-0533 (US / CA) / 44-808-196-3874 (UK) or customer service at support@huanuoav.com.
- Carefully read all instructions before attempting installation. If you have any concerns or questions, please contact our technical support line at 1-800-556-0533 (US / CA) / 44-808-196-3874 (UK) or customer service at support@huanuoav.com.
- Only (1) person should sit in the chair at a time.
- Only use the chair on level flooring.
- Children under 5 years of age should not operate the chair alone.
- Please do not sit on the armrest, which would cause damage to the chair and lead to injury.
- Don't stand on the chair or use it as a ladder or stair.
- Do not put heavy objects on the chair, or use it as a trolley.
- To avoid injury, please keep hands away from the seat lift mechanism during operation.
- Do not use items with sharp edges or hooks near the chair.
- Keep the chair away from flame and heat sources.
- Do not sit on the edge of the chair. Sit correctly in the chair by utilizing the full seat with weight centered over the base. Use armrests for stability when standing up from the sitting position.
- To avoid tipping over, do not lift legs up while tilting the backrest or rocking.

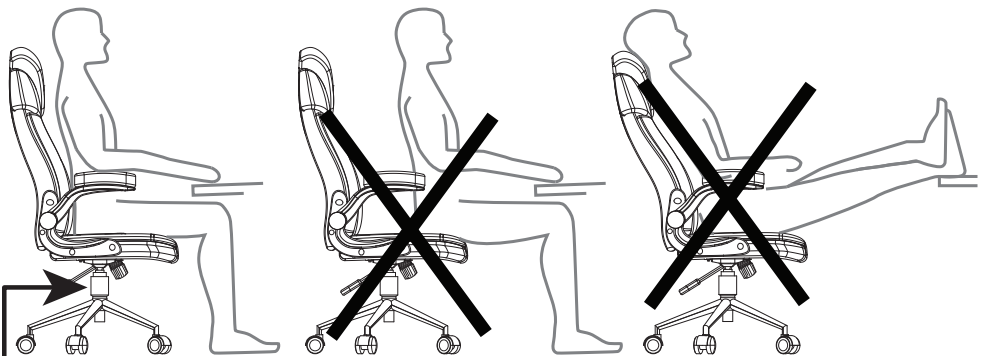

WARNING! Only trained personnel may replace or repair seat height adjustment components with energy accumulators.

Care And Maintenance

How To Clean


It is recommended that the office chair should be thoroughly cleaned at least once a month to maintain condition and functionality.

- Use a vacuum cleaner to suck up the dirt that may be resting on the seat of the leather office chair.
- Use a damp cloth and wipe the armrest clean.
- The casters will stick if not maintained regularly. Brush the casters with water and wipe clean with a damp cloth.
- If dirt solidifies on the surface of the casters, use soap and water to clean it off.
- Use a dry cloth to finish cleaning, or leave your office chair in a ventilated area to air dry.

Maintenance Tips

- Direct sunlight can ruin an office chair over time, degrading most leather and materials. Keep your office chair out of direct sunlight.
- Humid conditions may lead to the formation of mildew on leather and / or rust on metal parts. Do not keep your office chair in a damp environment.
- Be careful with drinks, food, or any type of liquids when you are near your chair. If a spill happens, clean and attend to stains immediately.
- Avoid the use of sharp objects or blades near the office chair that may cause damage.
- If possible, cover the chair to protect it against dirt and dust.
- Regularly examine the chair to ensure that all nuts and bolts are correctly fastened, including those connecting the seat, arms, back, and chair mechanics.

Contents

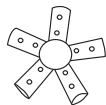

01 x 1



 
02 x 1



03 x 5




04 x 5




05 x 1



06 x 1

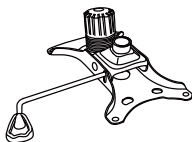


07 x 1

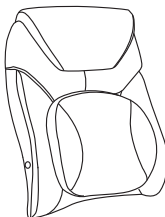

08 x 1




09 x 1

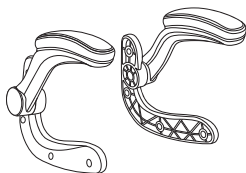


10 x 1



 
11 x 8




M6 x 12mm
[A] x 10

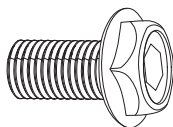

1/4" x 3/4"
[B] x 4

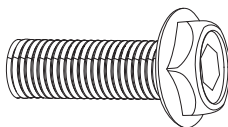


1/4" x 1"
[C] x 8

 

3/16" (5mm)
[D] x 1


Installation

1

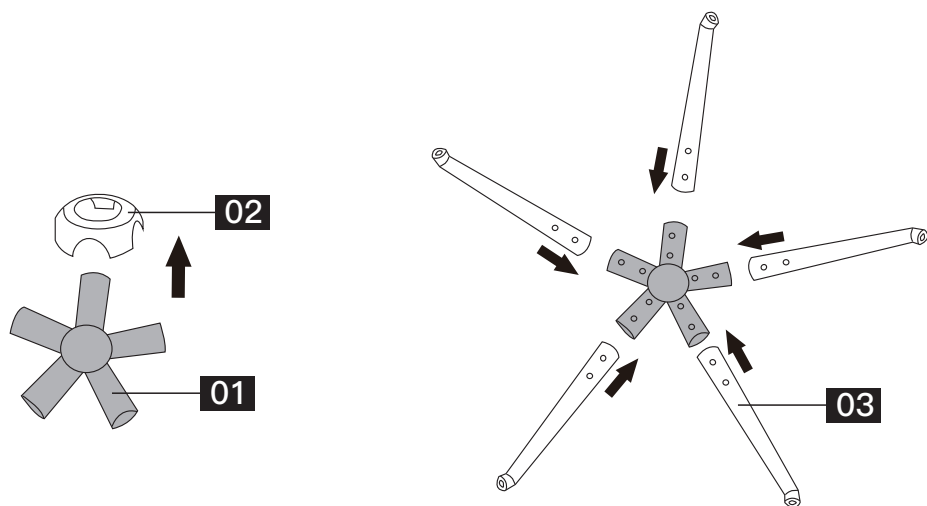


If the decorative cover [02] attaches to the leg connector [01], remove the cover and save it for use in Step 4. Then insert the legs [03] into the leg connector [01].


2

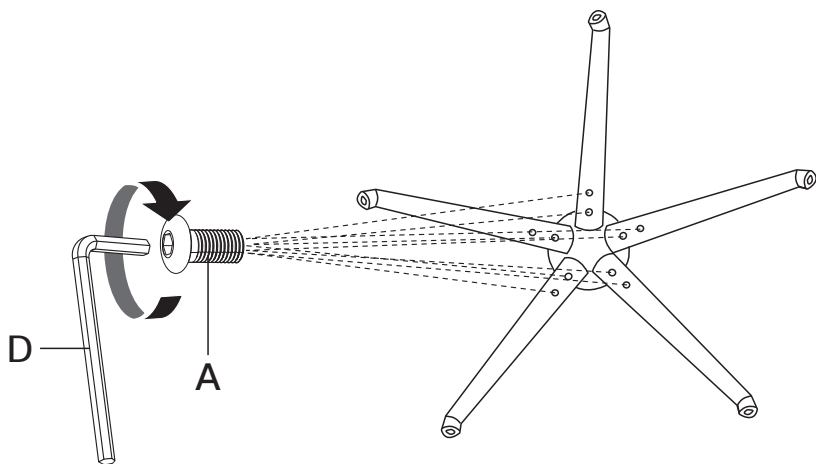

Secure the legs [03] to the leg connector [01] by tightening the bolts [A].


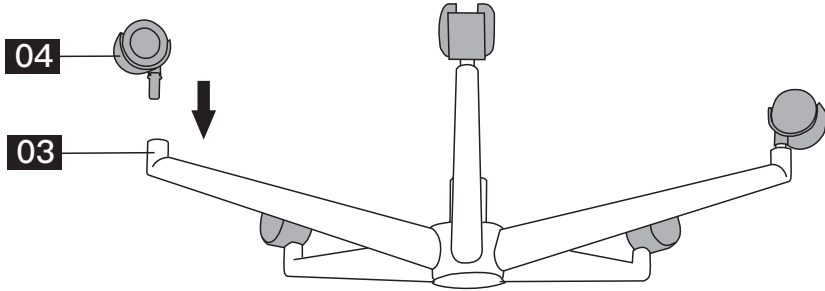


Press the casters [04] firmly until they click into the holes on the legs [03].

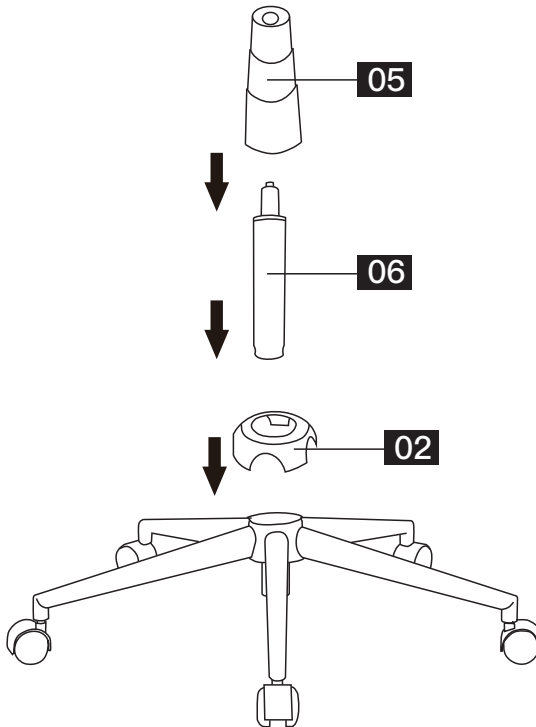

Attach the decorative cover [02] to the leg connector [01], and press the gas lift cylinder [06] into the leg connector [01]. Then attach the telescopic gas lift cylinder cover [05].


The handle should be face left.

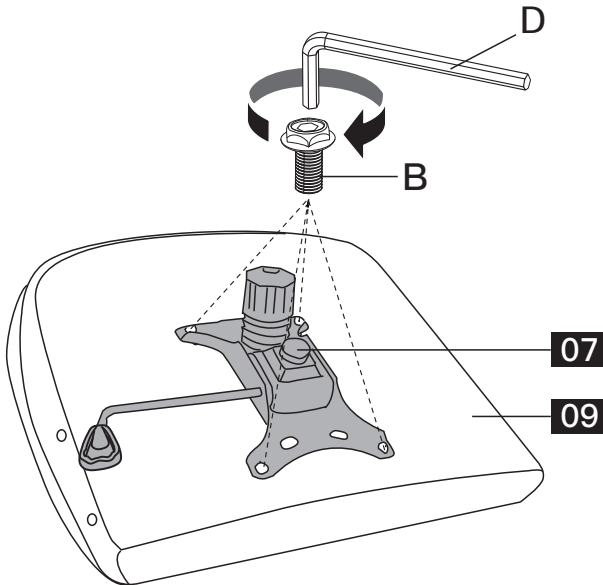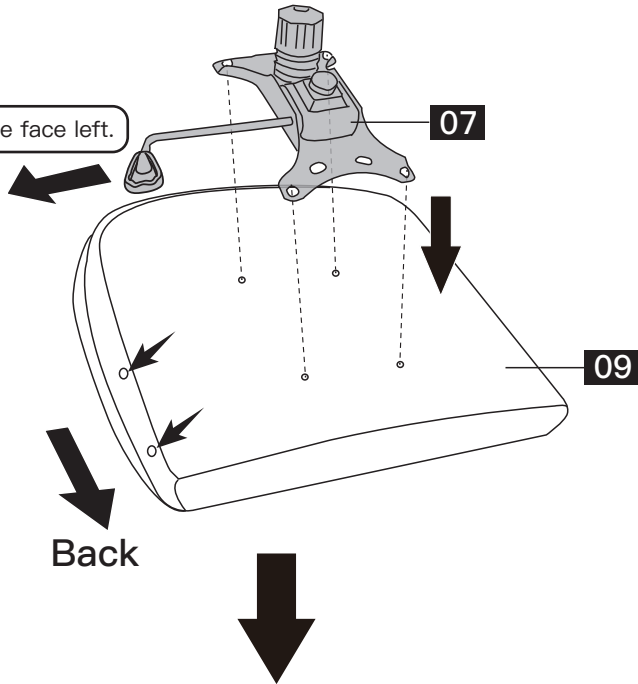


Secure the mechanism [07] onto the seat [09] using the bolts [B].




Squeeze the seat and backrest together while attaching the armrest.

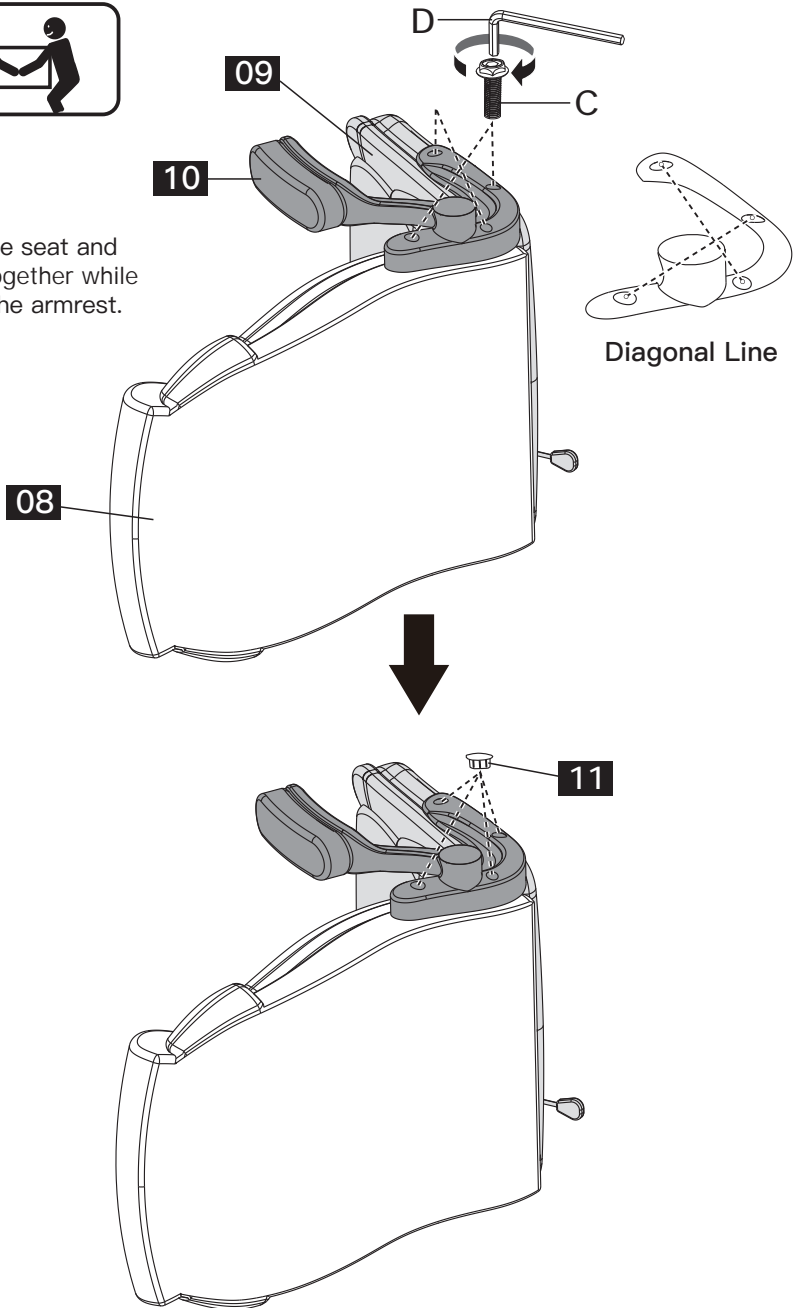

To assemble the seat [09], backrest [08] and armrest [10], tighten any two bolts [C] in a diagonal direction and then tighten the rest. Attach the caps [11].

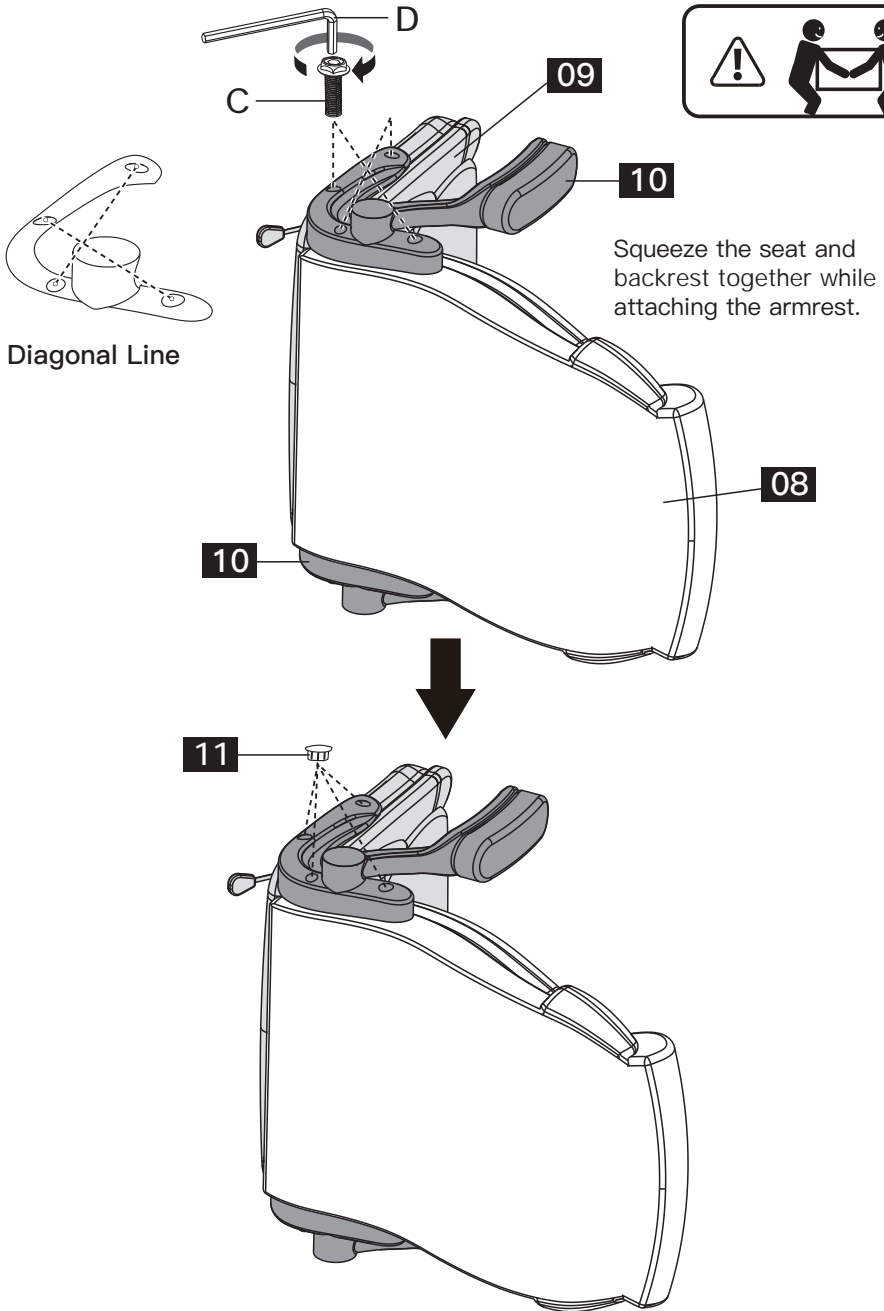

Attach another armrest to the other side of the chair in the same way, and then attach the caps [11].

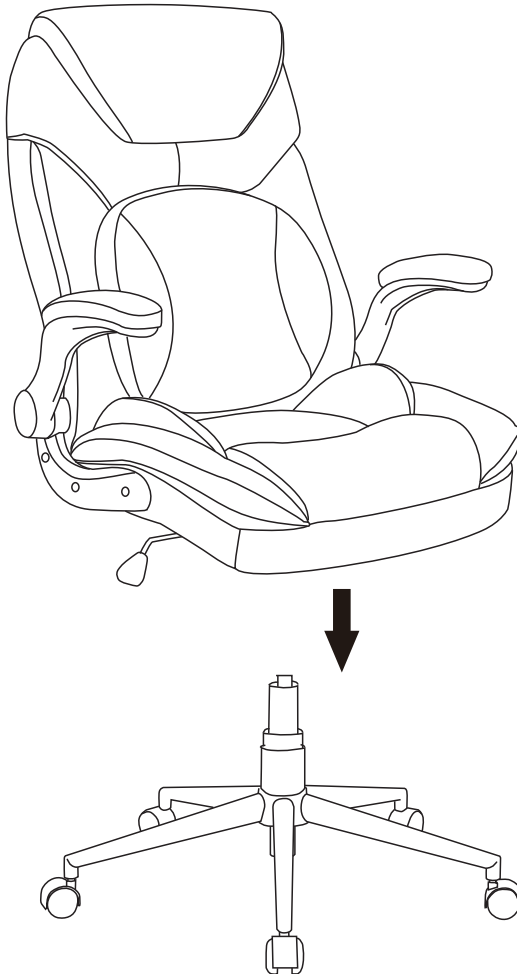

Align the hole underneath the chair with the gas lift cylinder. Press the seat down to secure the chair to the gas lift cylinder.

HUANUO



(US / CA) 1-800-556-0533
(UK) 44-808-196-3874



support@huanuoav.com



www.huanuoav.com