

3 Tiers Printer Rack Instruction Manual



Model: HNPS01


Thank you for choosing this HUANUO product! At HUANUO we strive to provide you with the best quality products and services in the industry. Should you have any issues, please don't hesitate to contact us at

Technical Support:

1-800-556-0533 Mon-Fri 8am - 8pm (CST)

Other Info:


support@huanuoav.com (US/CA)

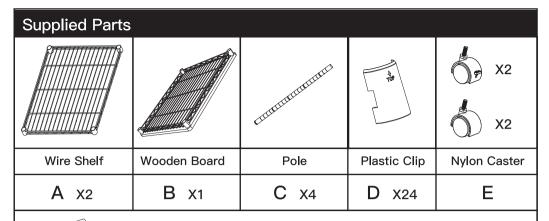




Step 1

Screw nylon casters [E] into the bottom of four poles [C] by wrench. Snap one pair of plastic clips [D] on the same groove of each pole as shown in the below image. The arrow of all plastic clips should be pointed up, and the grooves of pole should be covered by convex part of plastic clips.

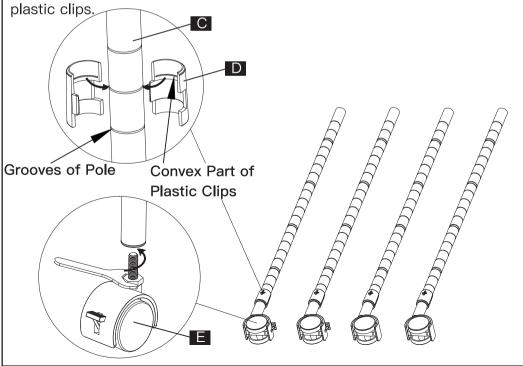


Step 2

Keep the collar of the wire shelf [A] downward. Then slide the wire helf [A] into the plastic clips from the top of each poles.

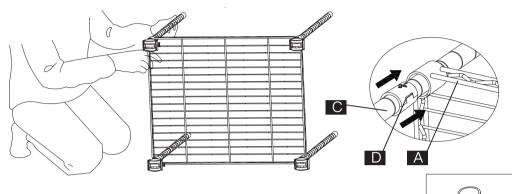


Keep the collar downward

 

Step 3

Set the shelf upright. Refer to Step 1 to snap the plastic clips [D] on the same grooves of each poles at your desired position for the second wire shelf [A]. Then refer to Step 2 to assemble the second wire shelf [A].

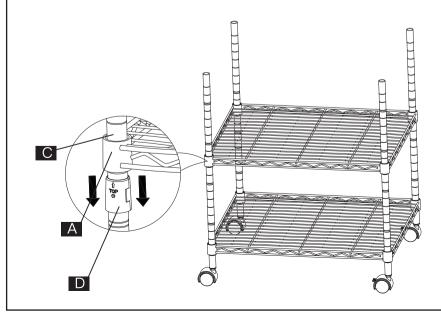

Step 4

Insert the wooden board [B] into the top of the four poles to make it snug on the poles. Push firmly down the corners of the two wire shelves [A] by rubber mallet (not included) to make the wire shelf [A] secure onto the plastic clips. Now the three tiers printer rack is completely assembled.

NOTE: Put a towel between rubber mallet and wire shelf to prevent damage.

