


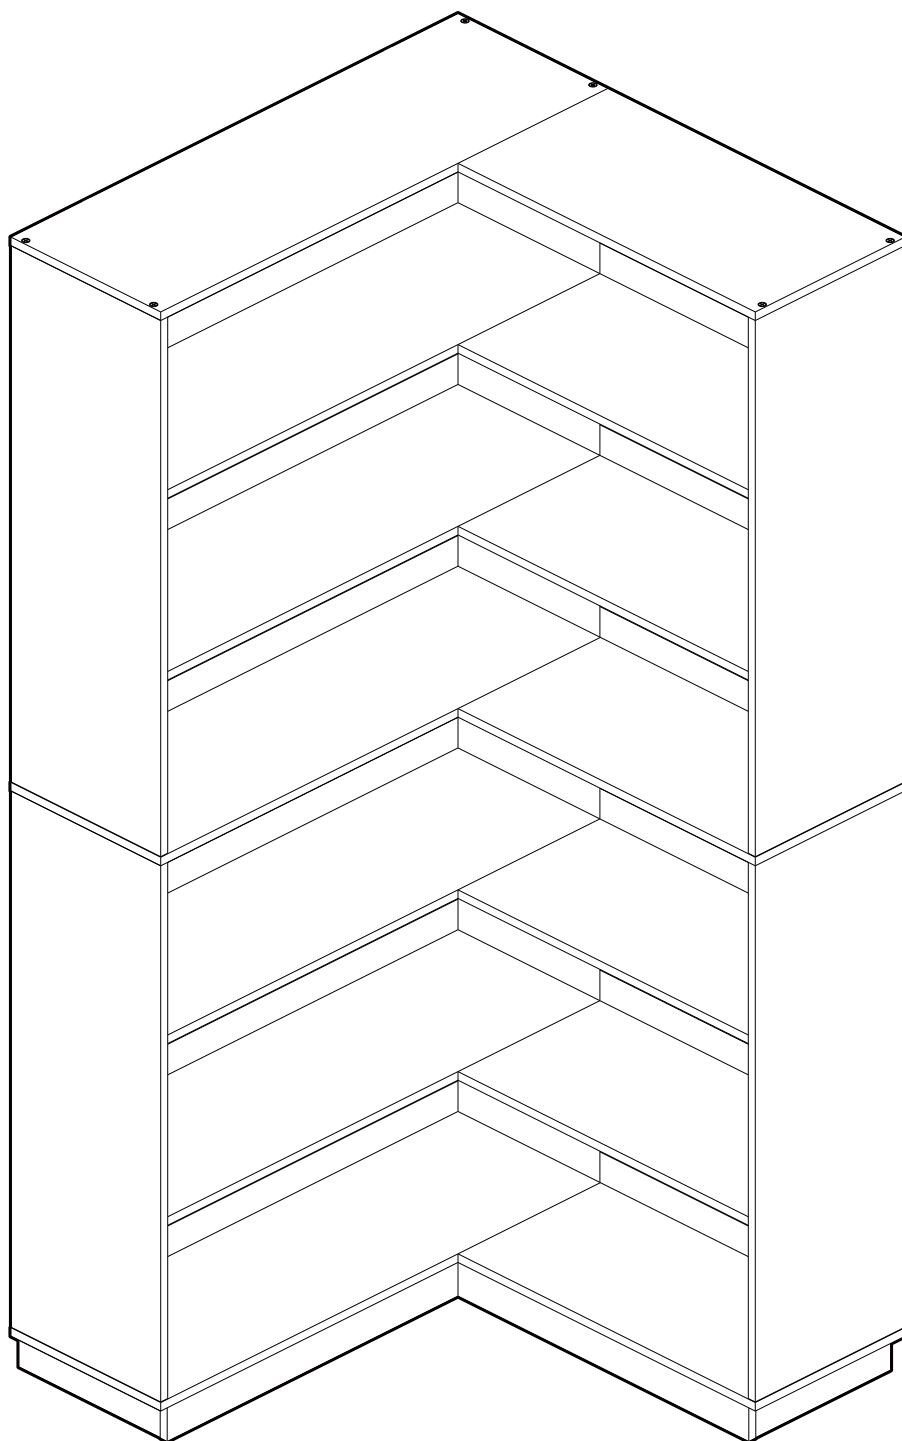
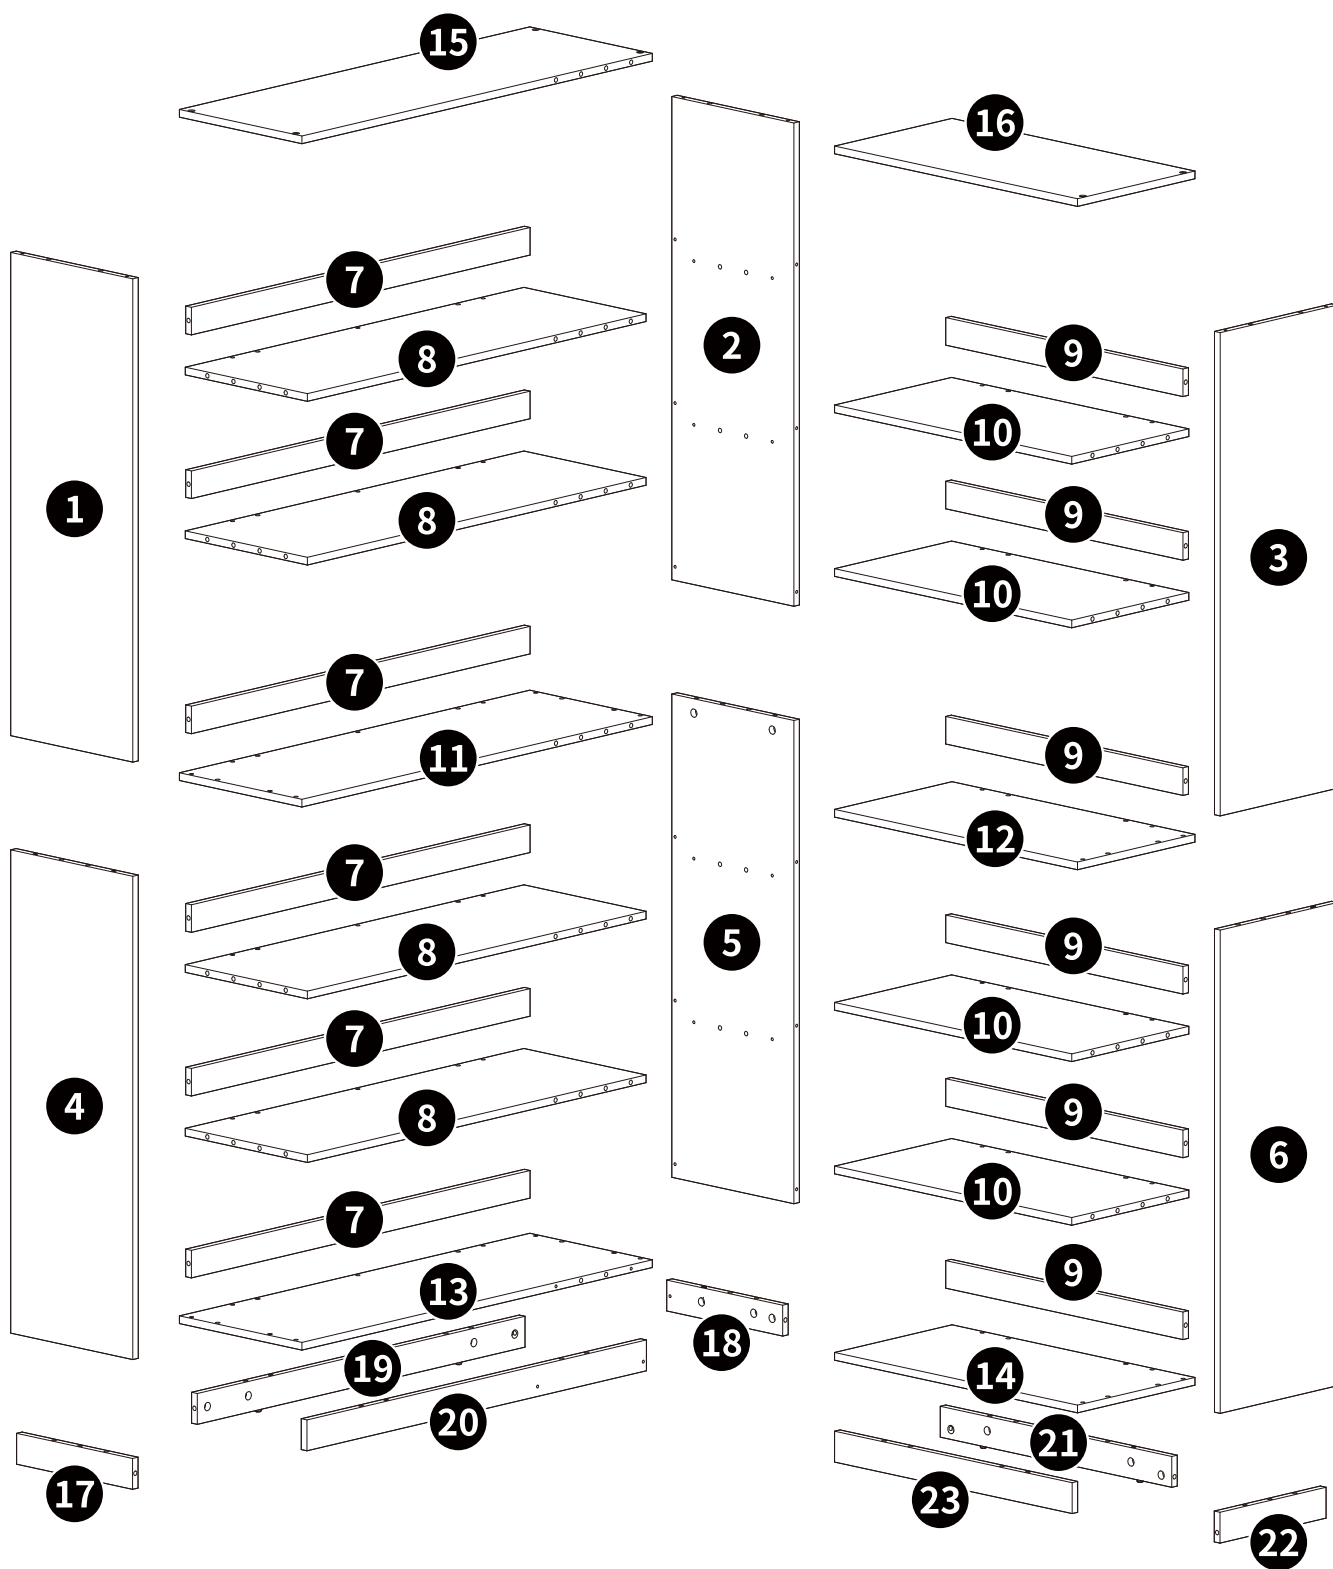
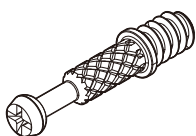
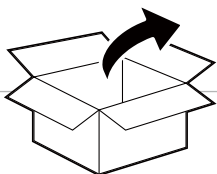

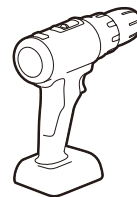
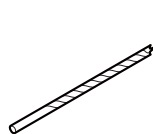
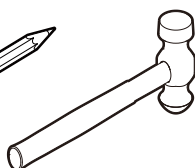
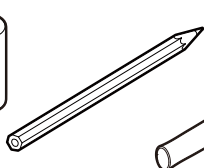


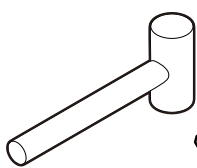


PDBFC01

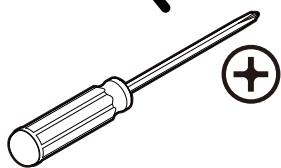

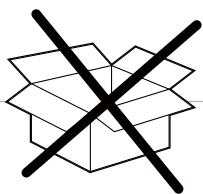


Ø6 x 35mm

(A) x 78




Ø15 x 11mm

(B) x 78

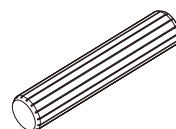

Ø8 x 30mm

(C) x 109

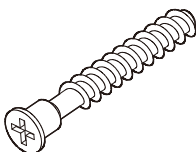


Ø6 x 50mm

(D) x 48




Ø4 x 12mm

(E) x 48

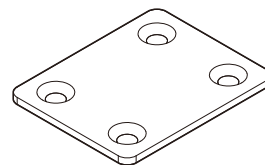


(F) x 12

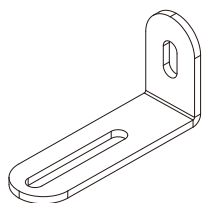


x 2



ST4 x 12mm
x 2

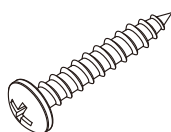

ST4 x 25mm
x 2




Ø8 x 30mm
x 2


! CAUTION!





This wall anchor is for concrete ONLY. DO NOT use them in drywall or wood studs.





Installation Guide



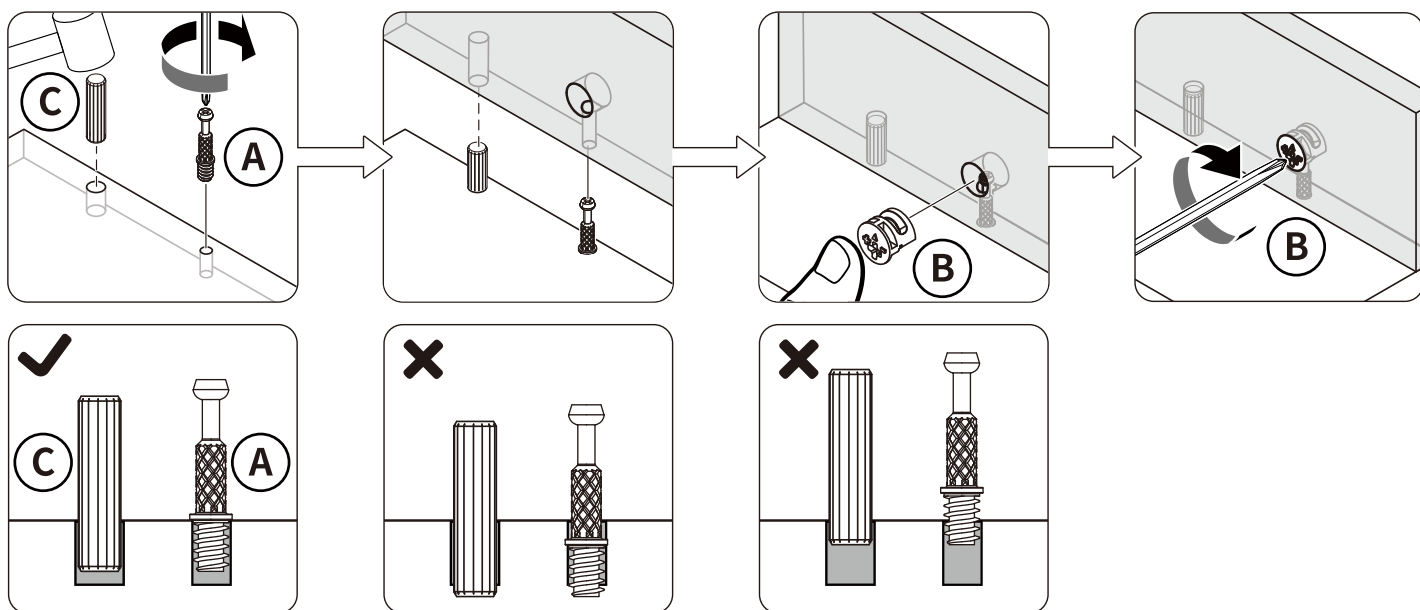





1


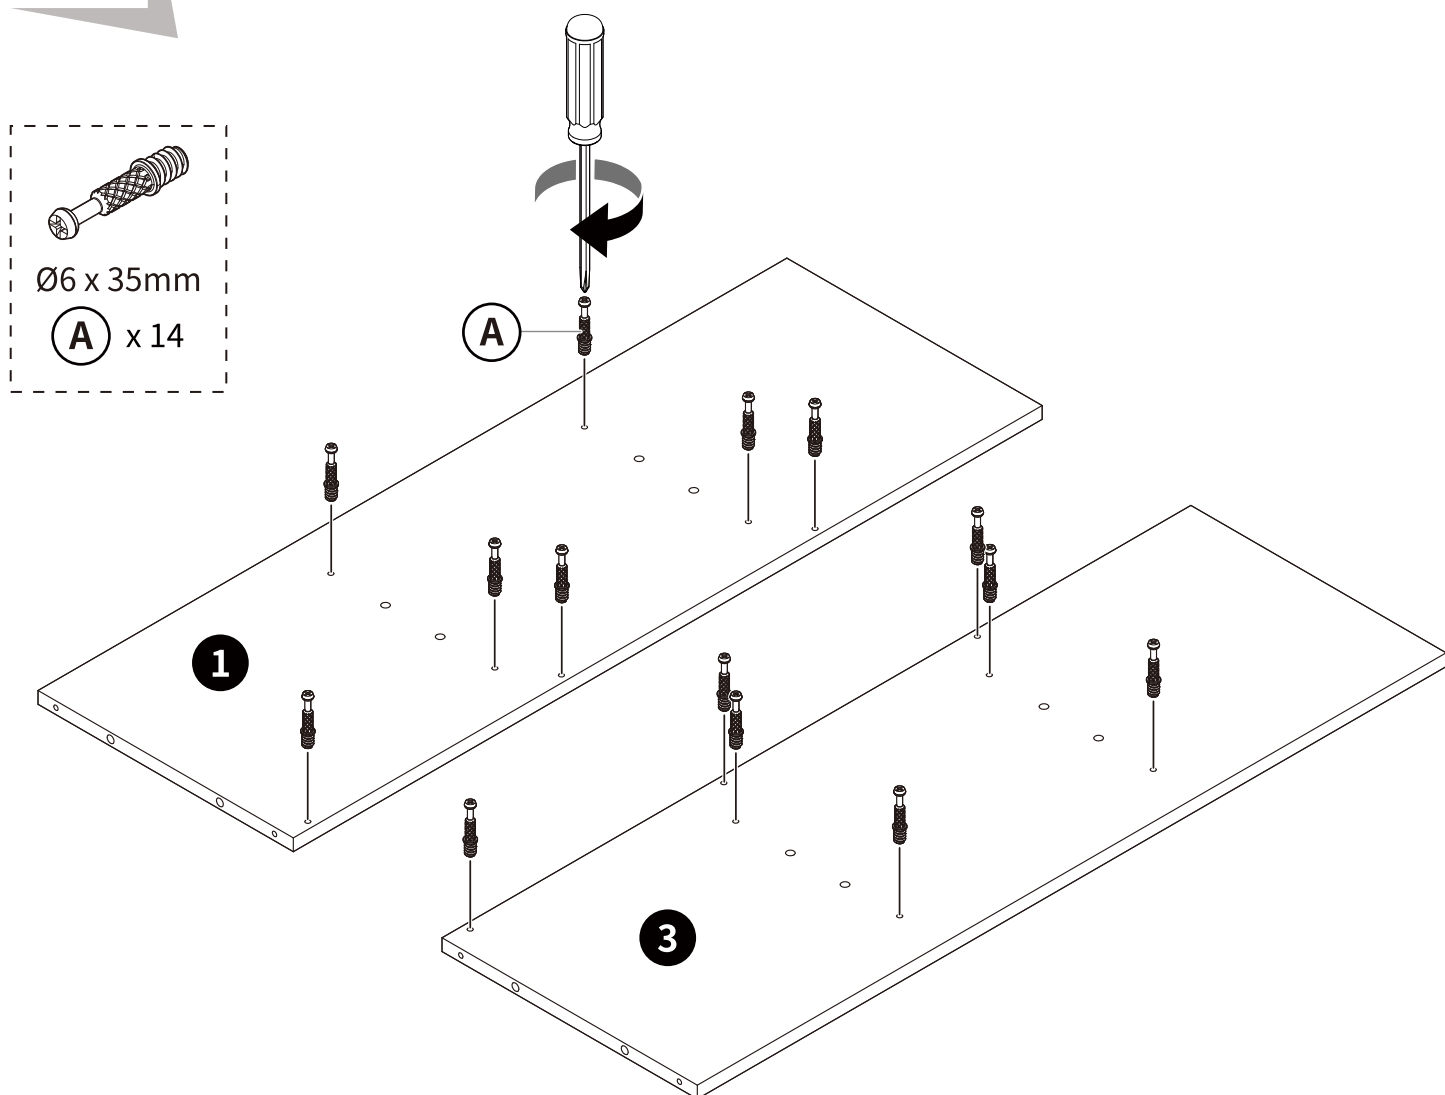





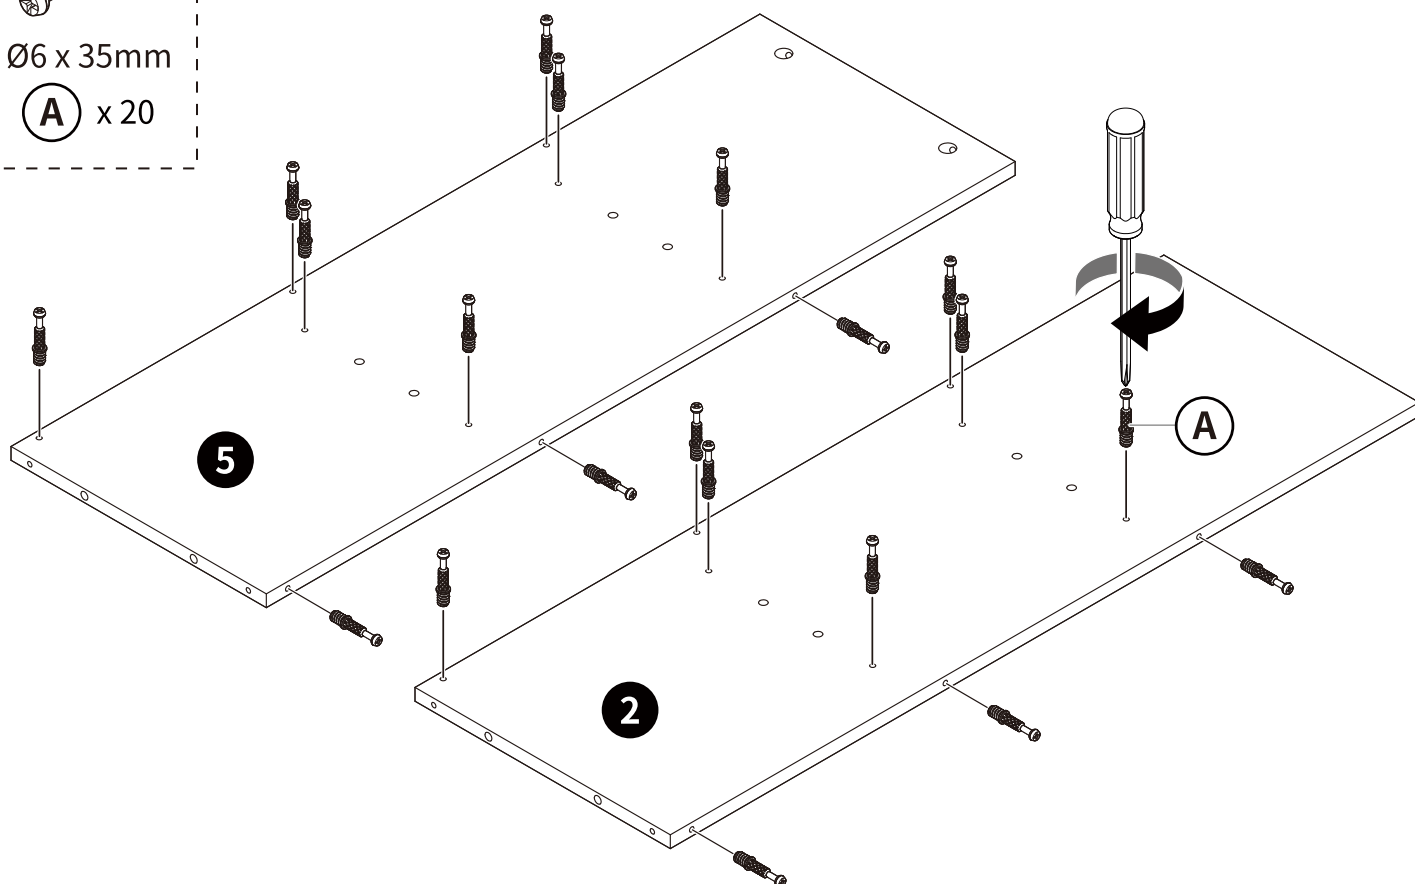
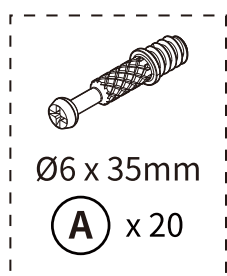
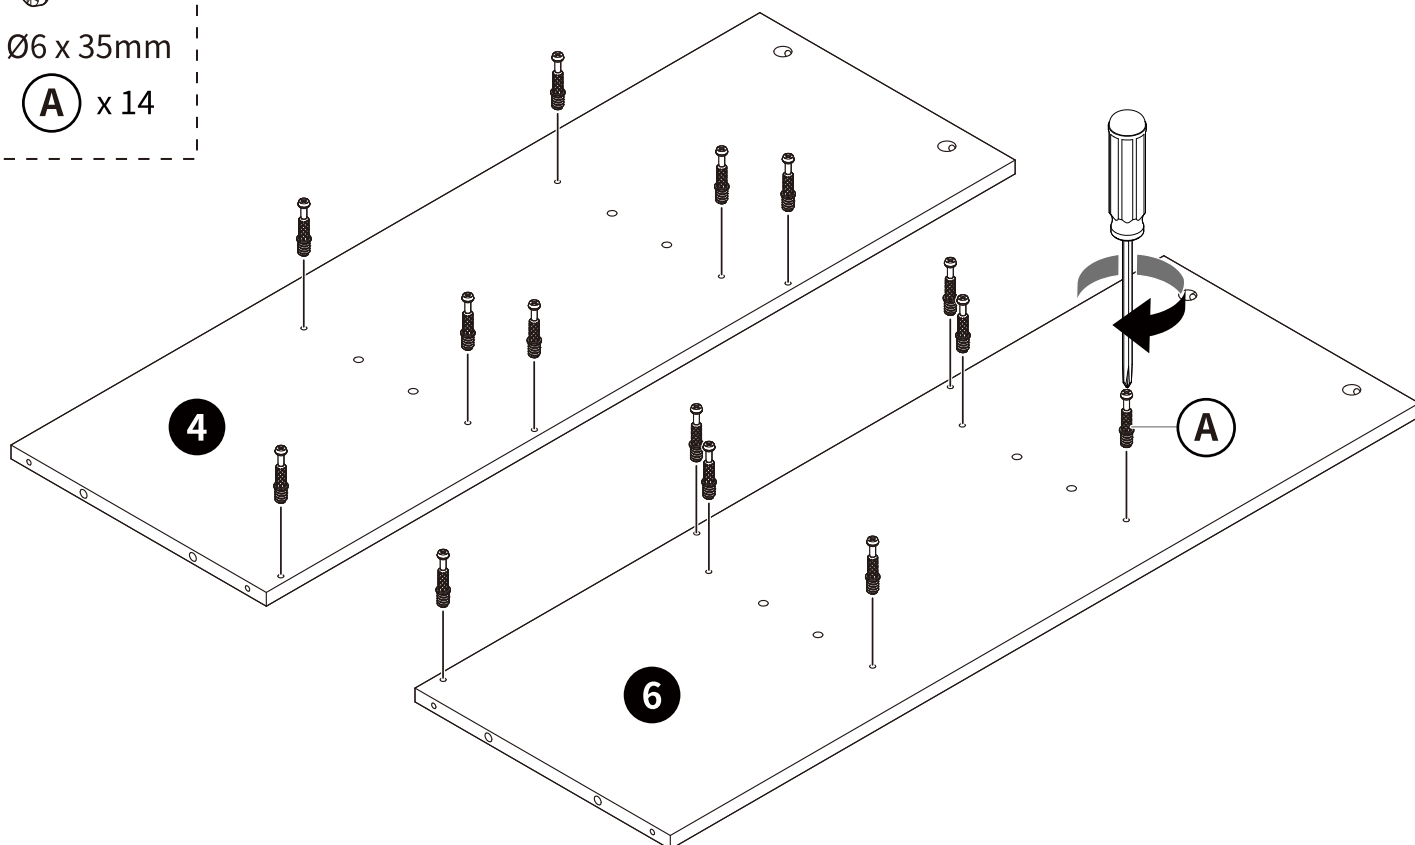
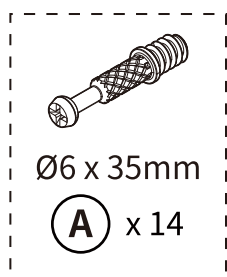




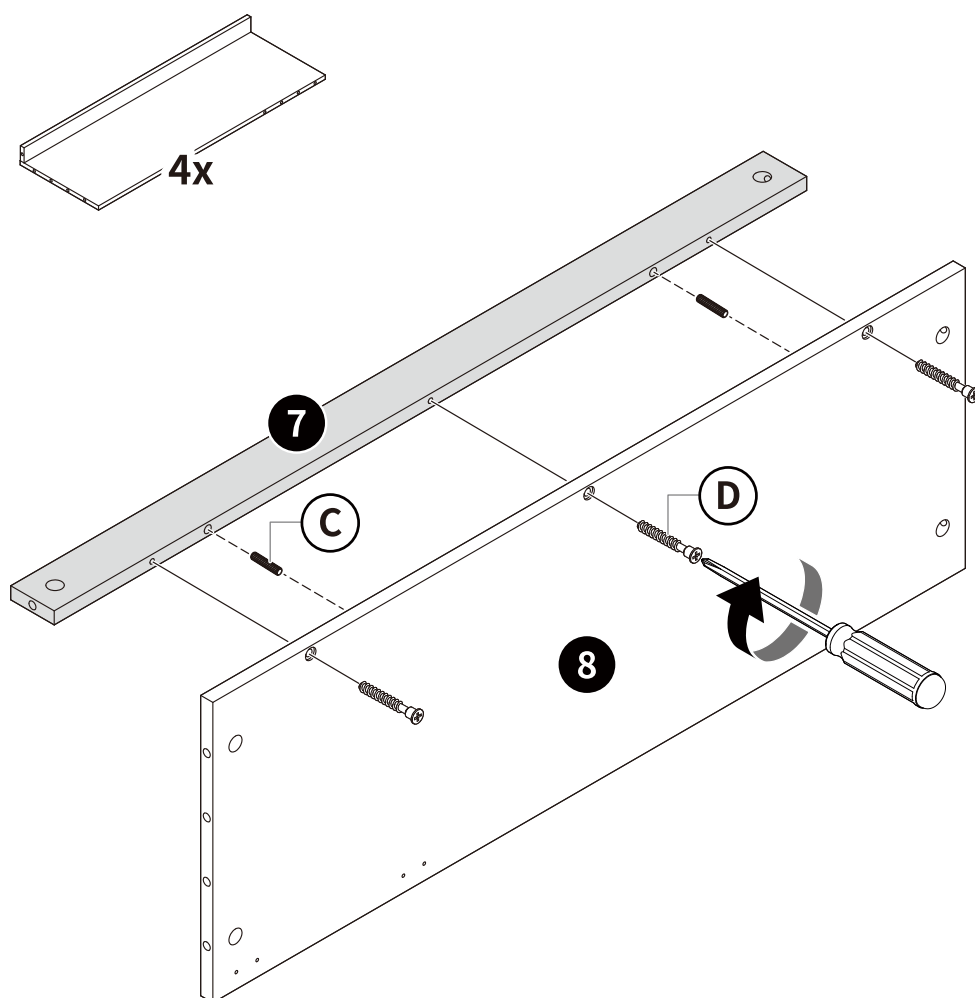
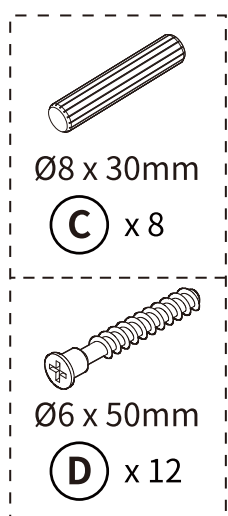
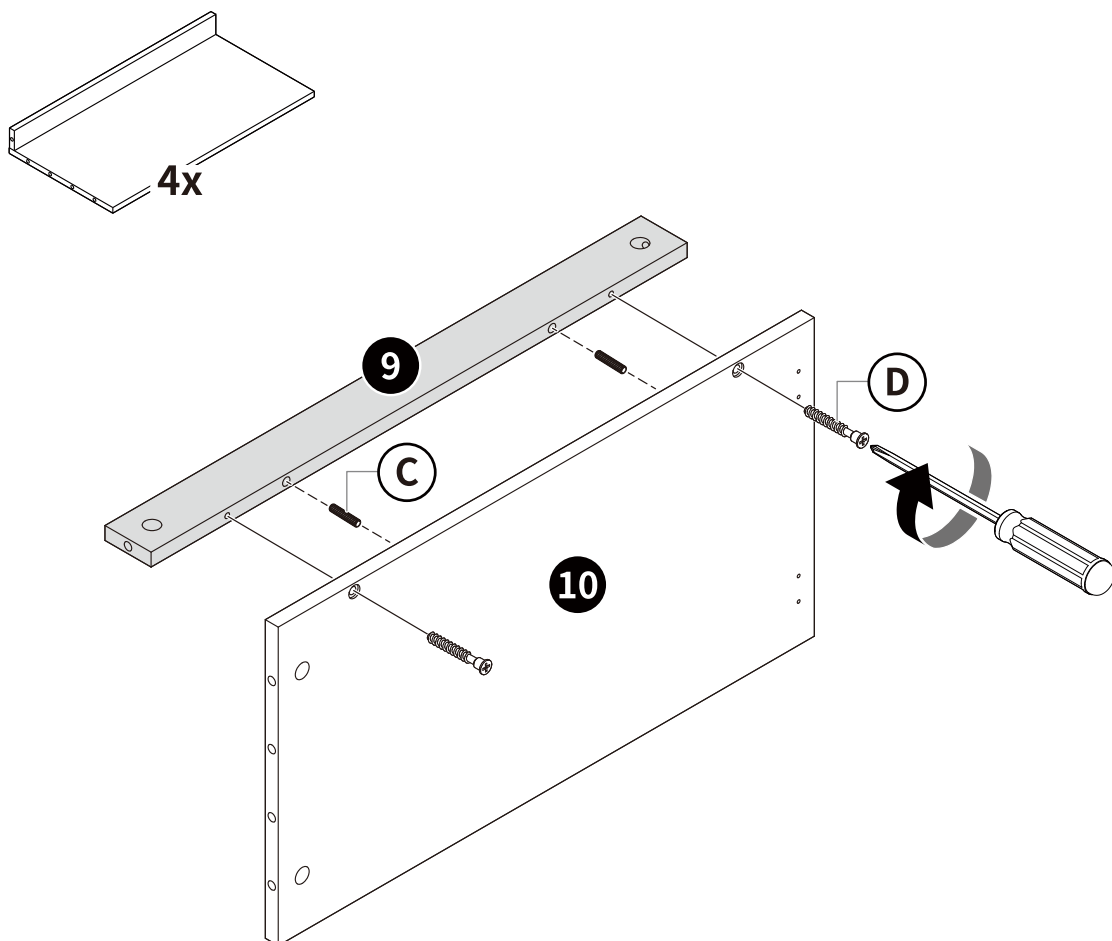
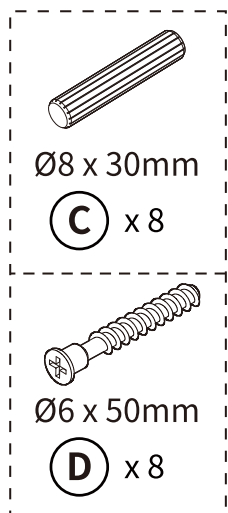




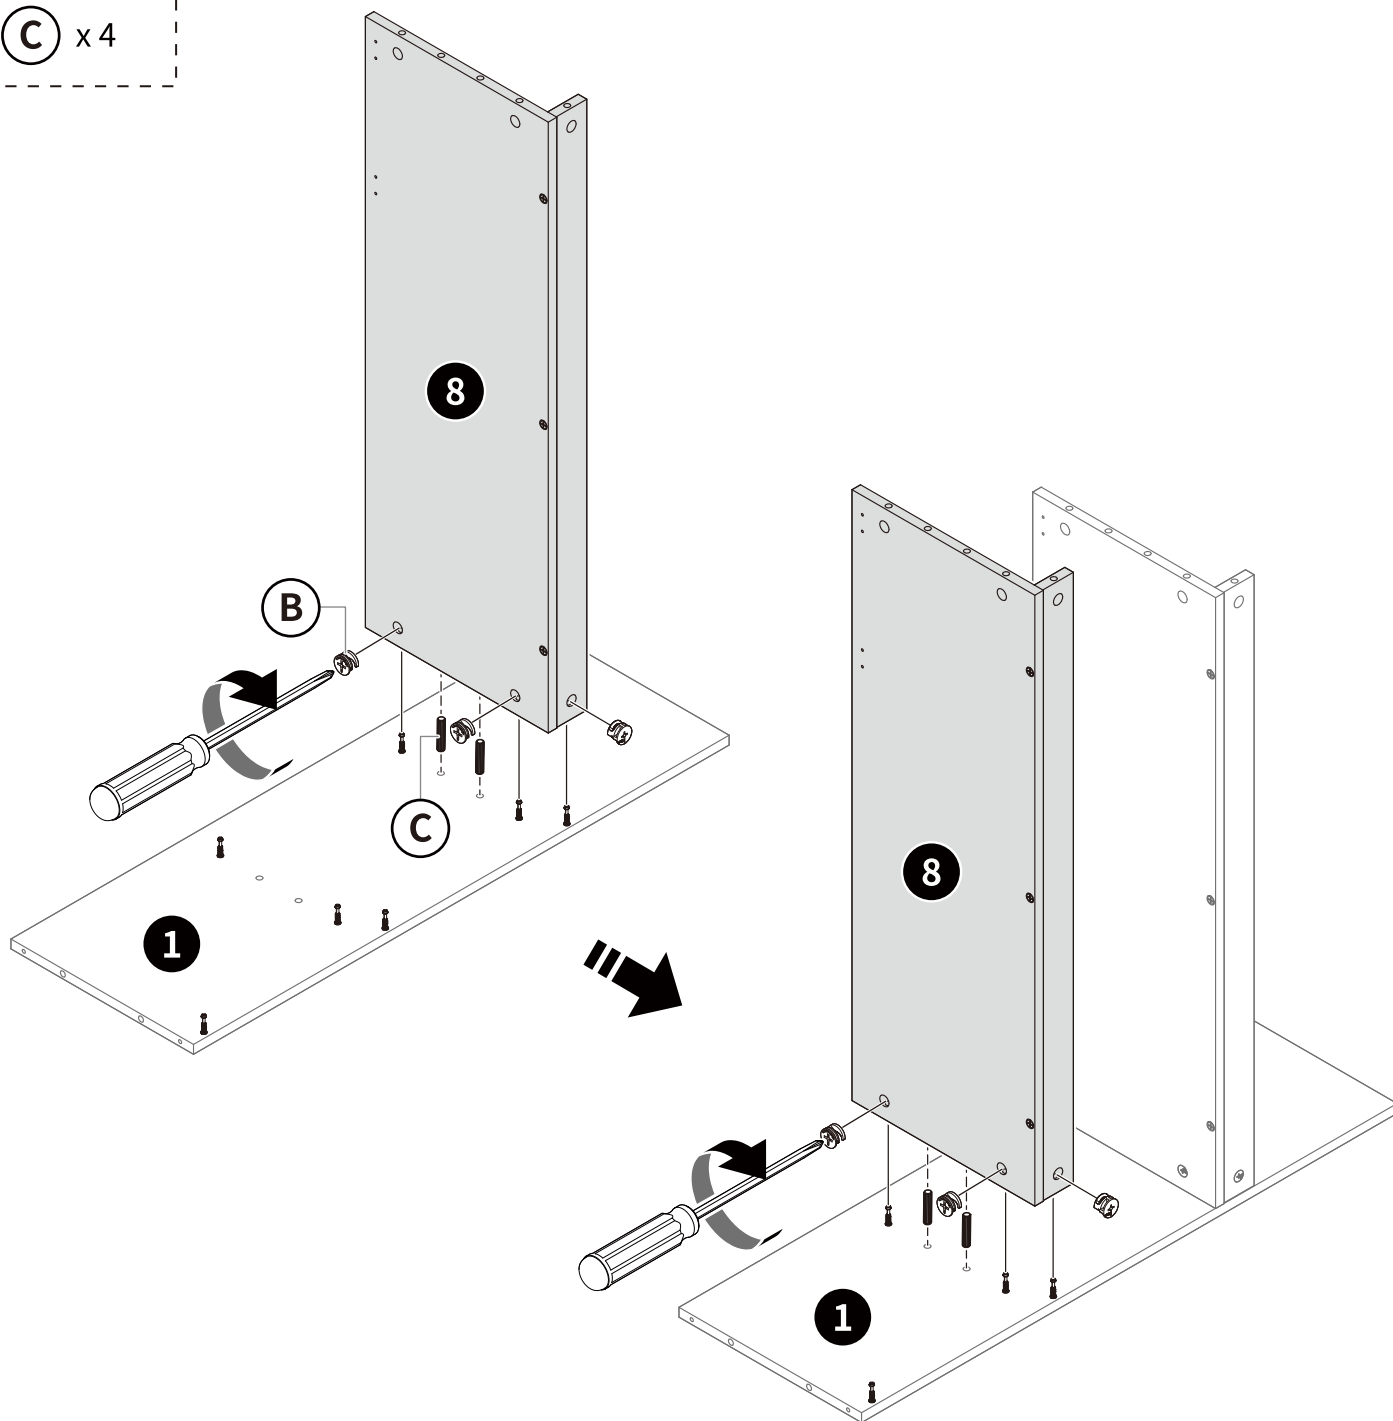
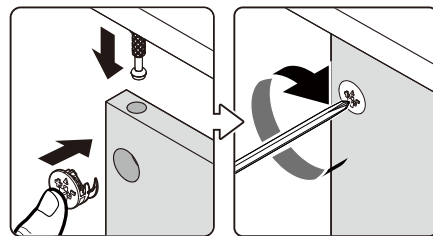
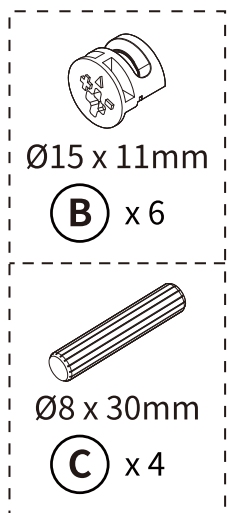





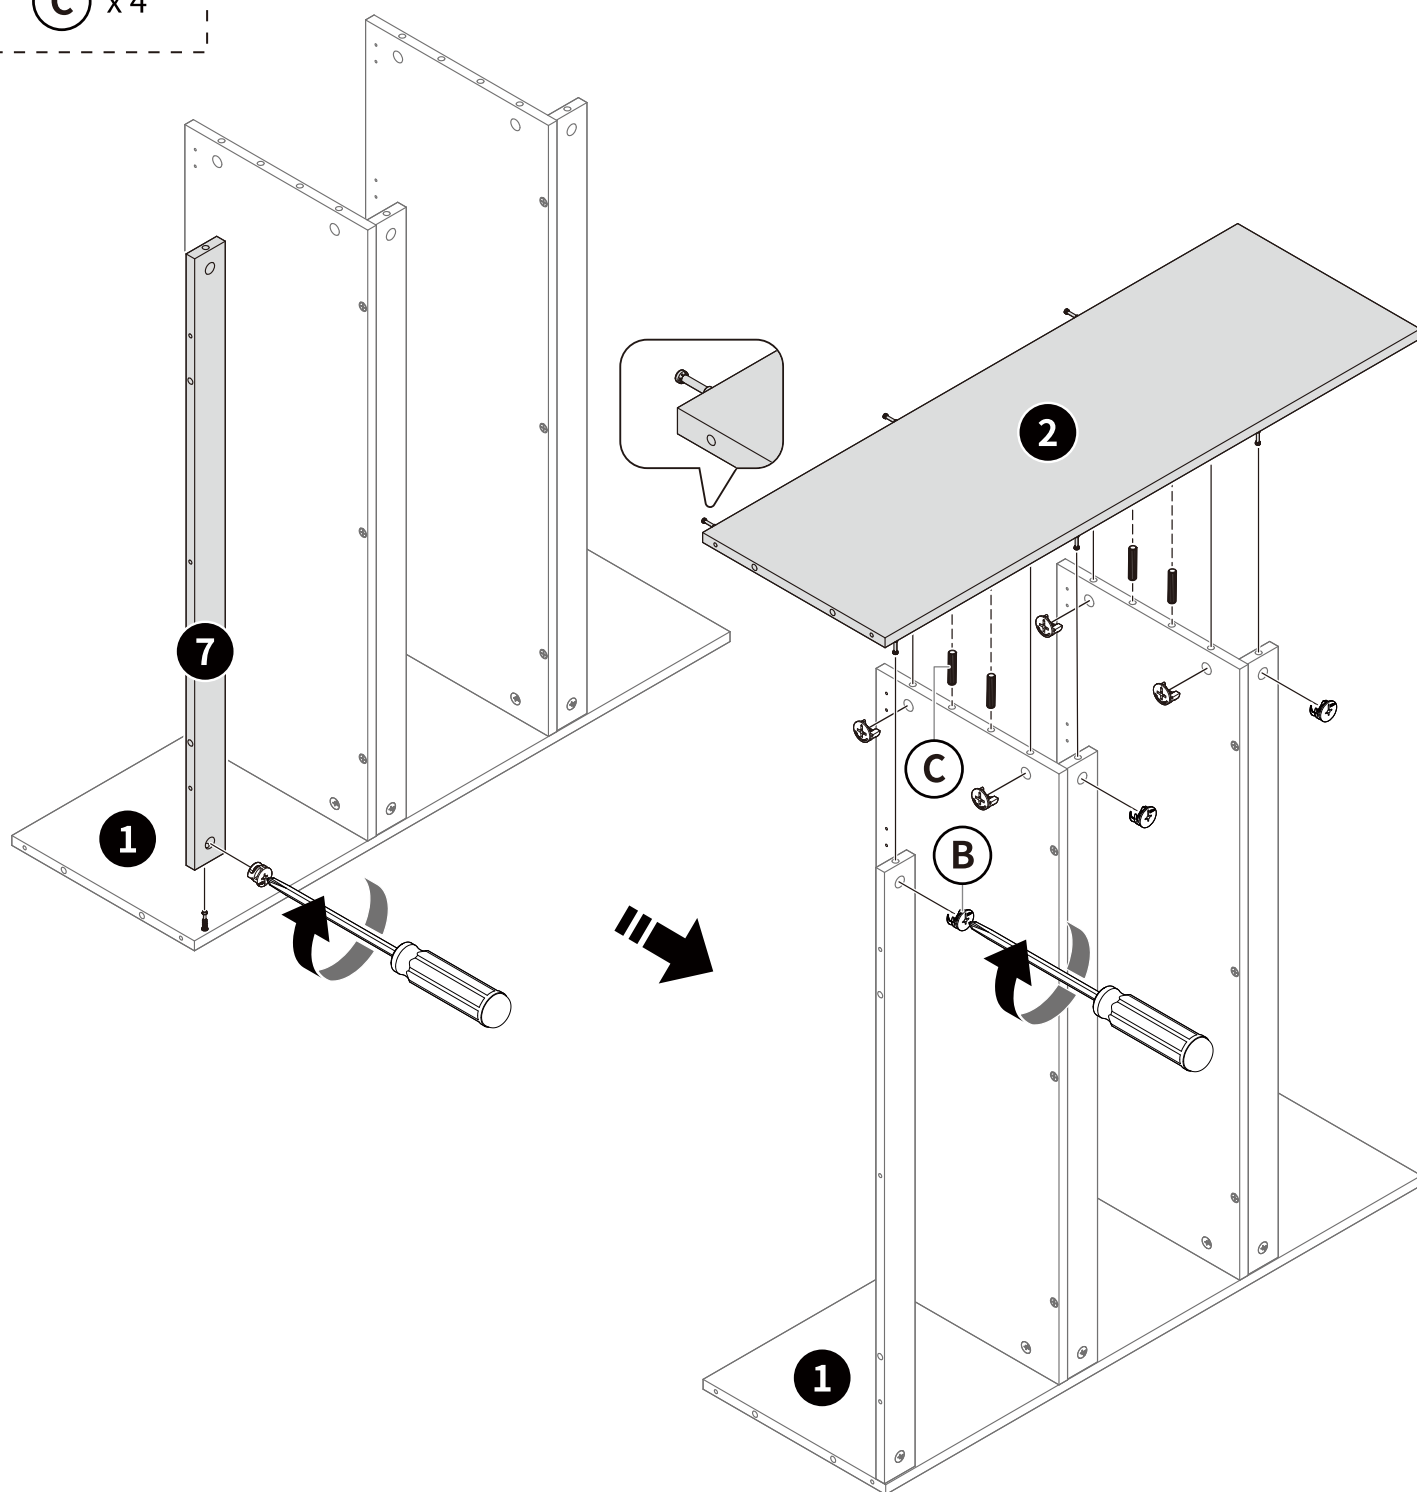
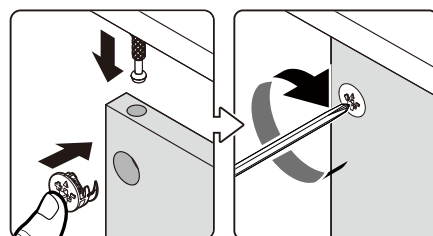
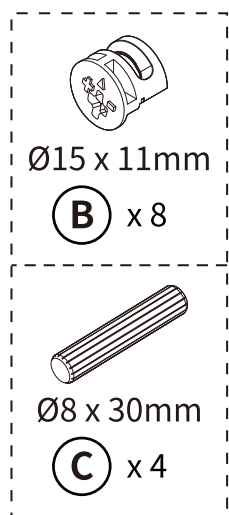




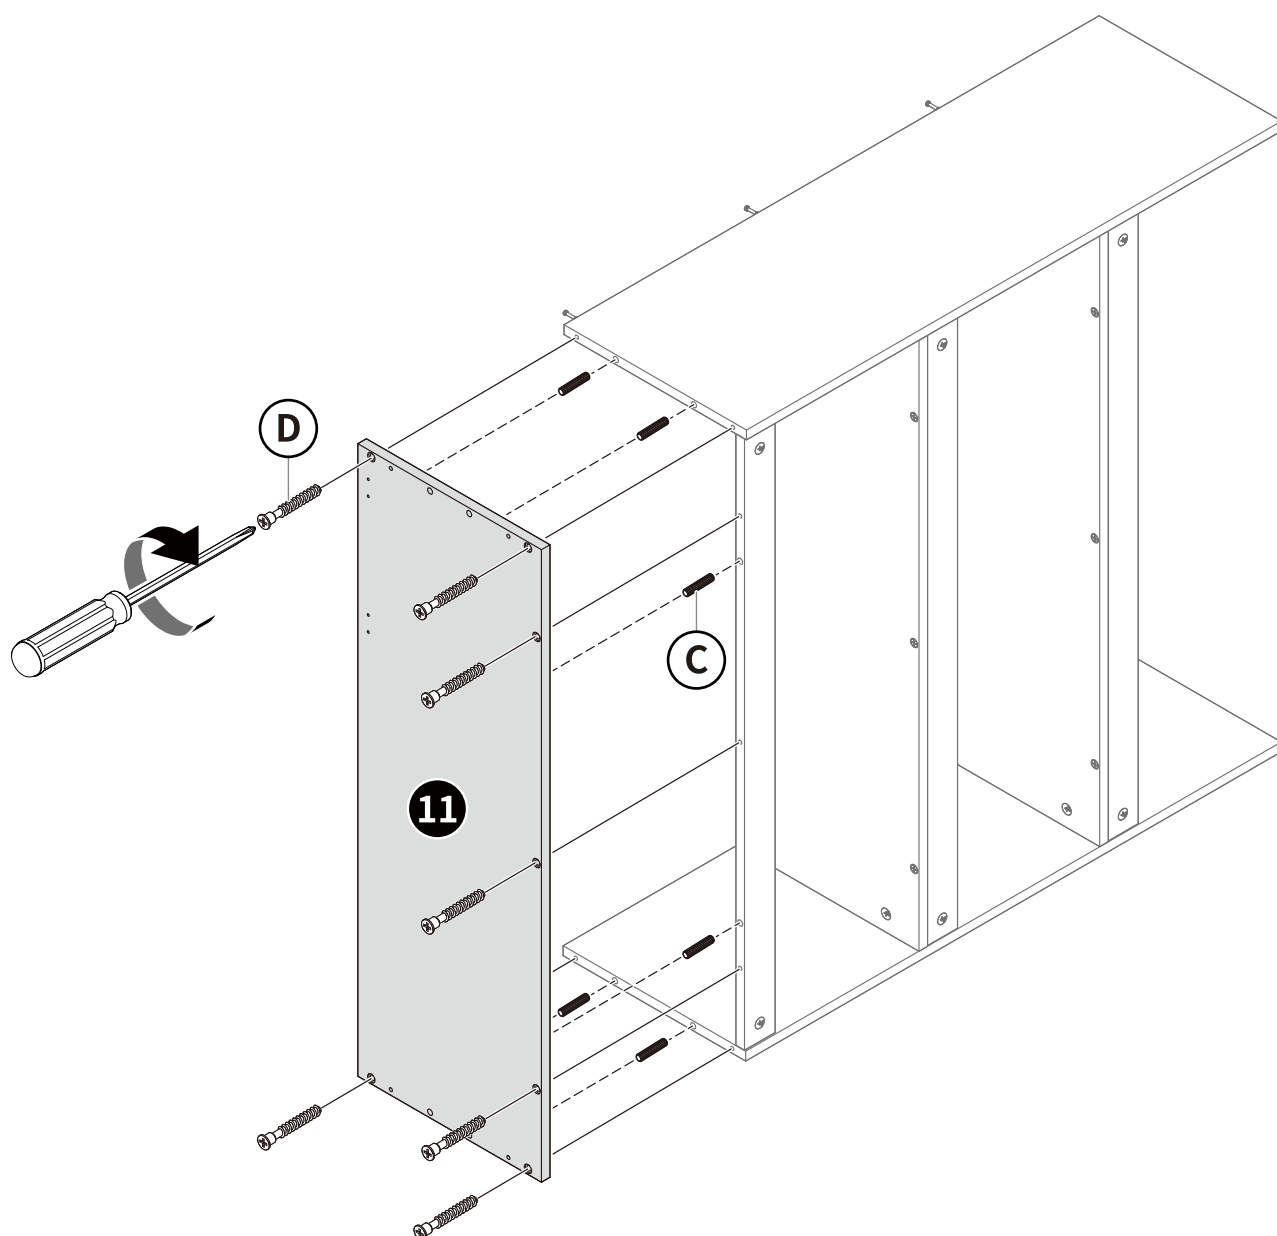
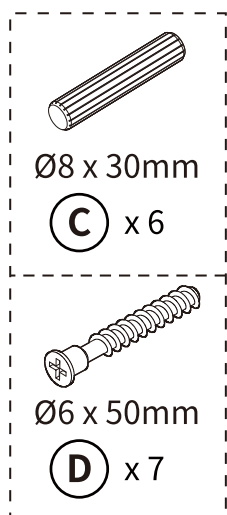


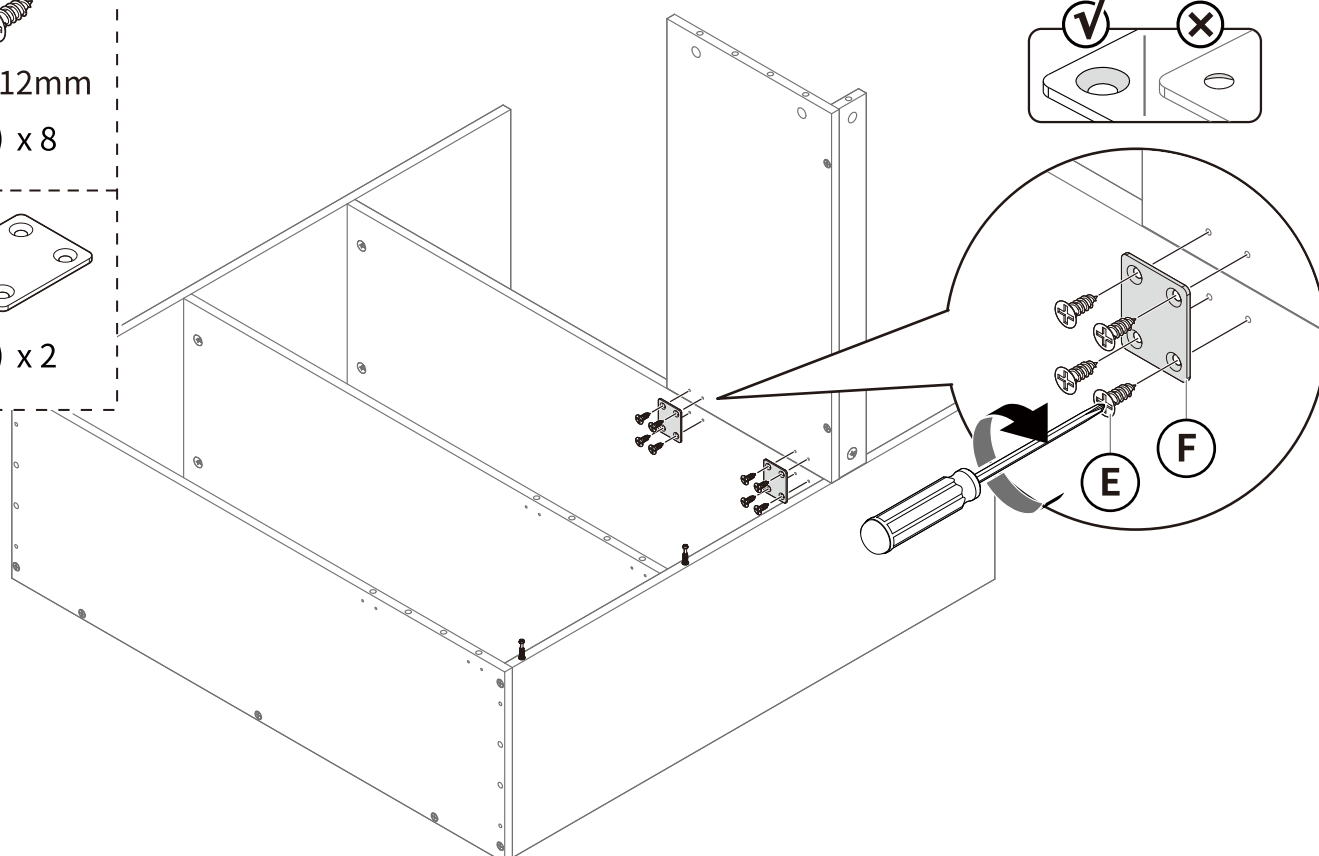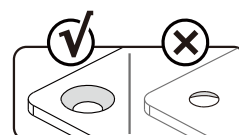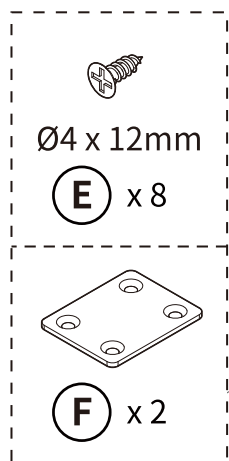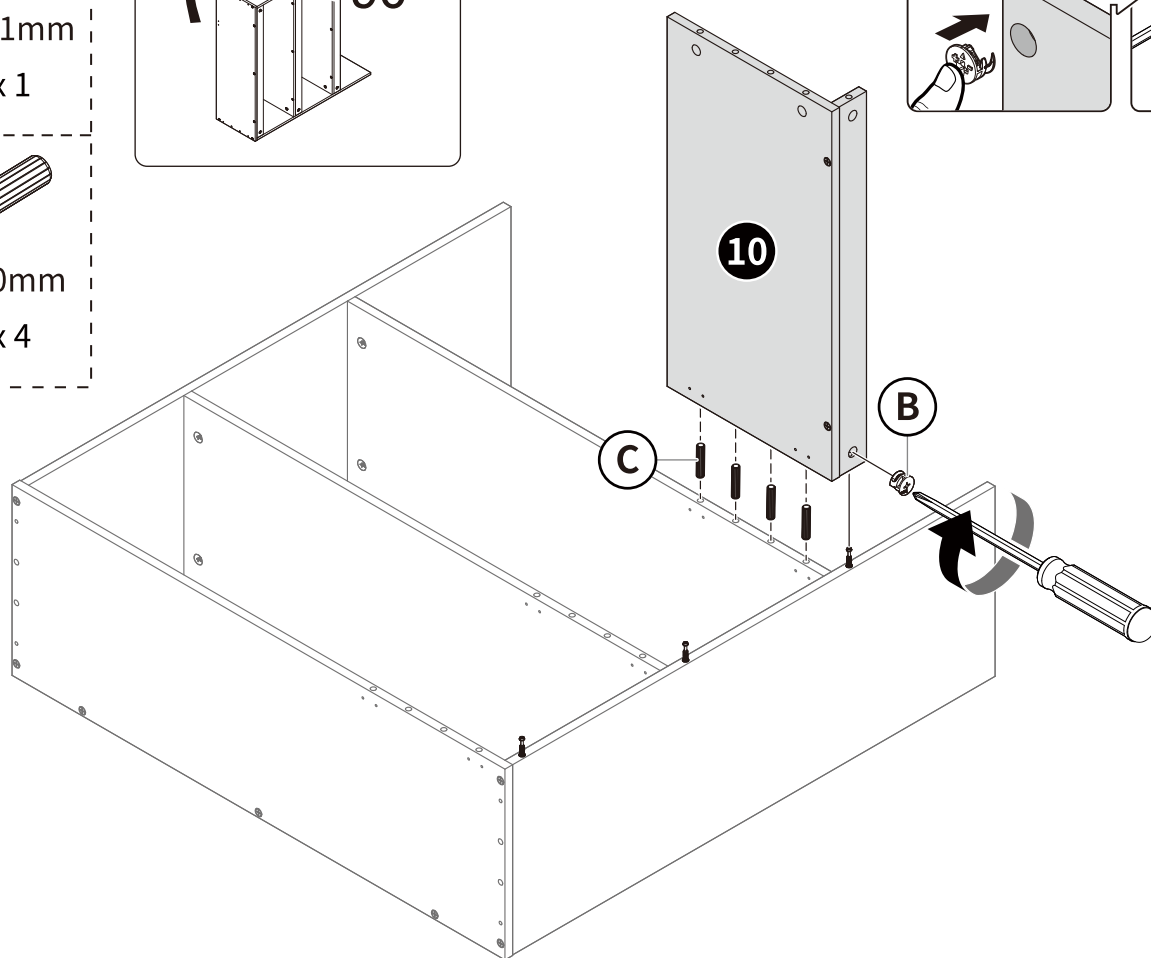
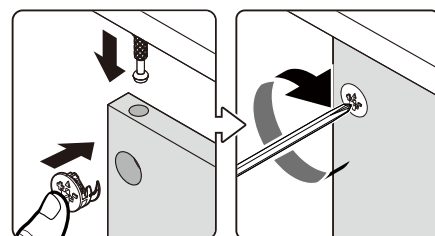
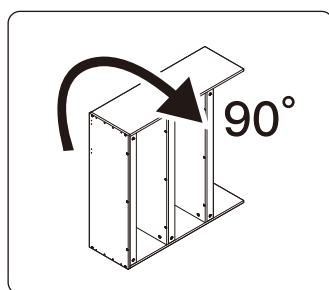
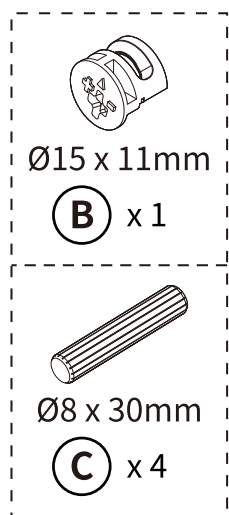


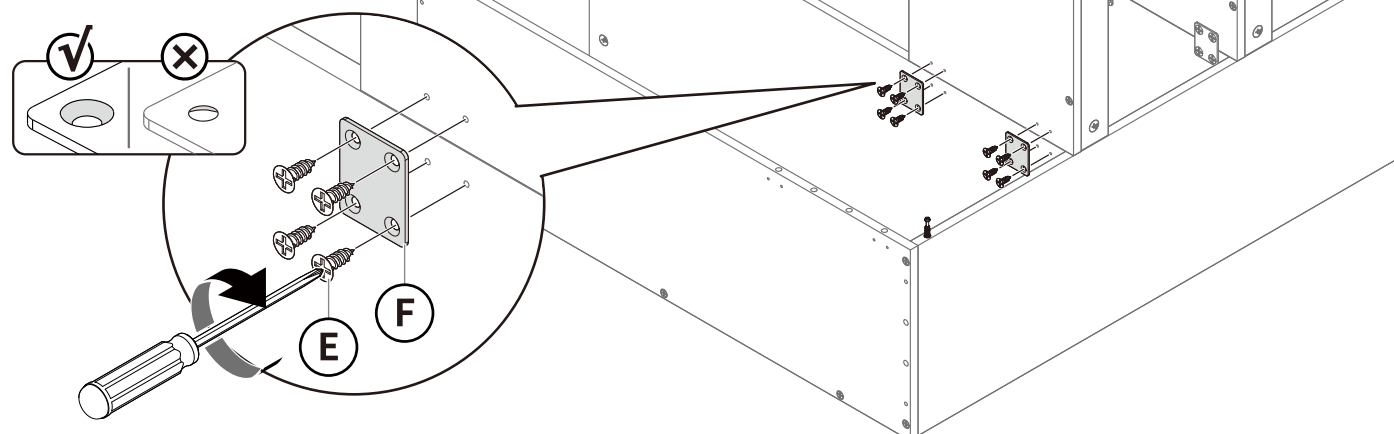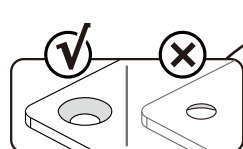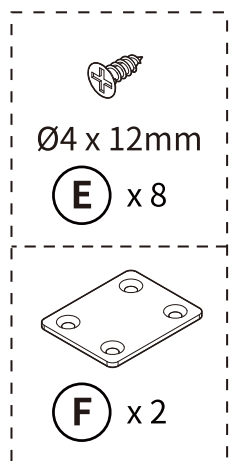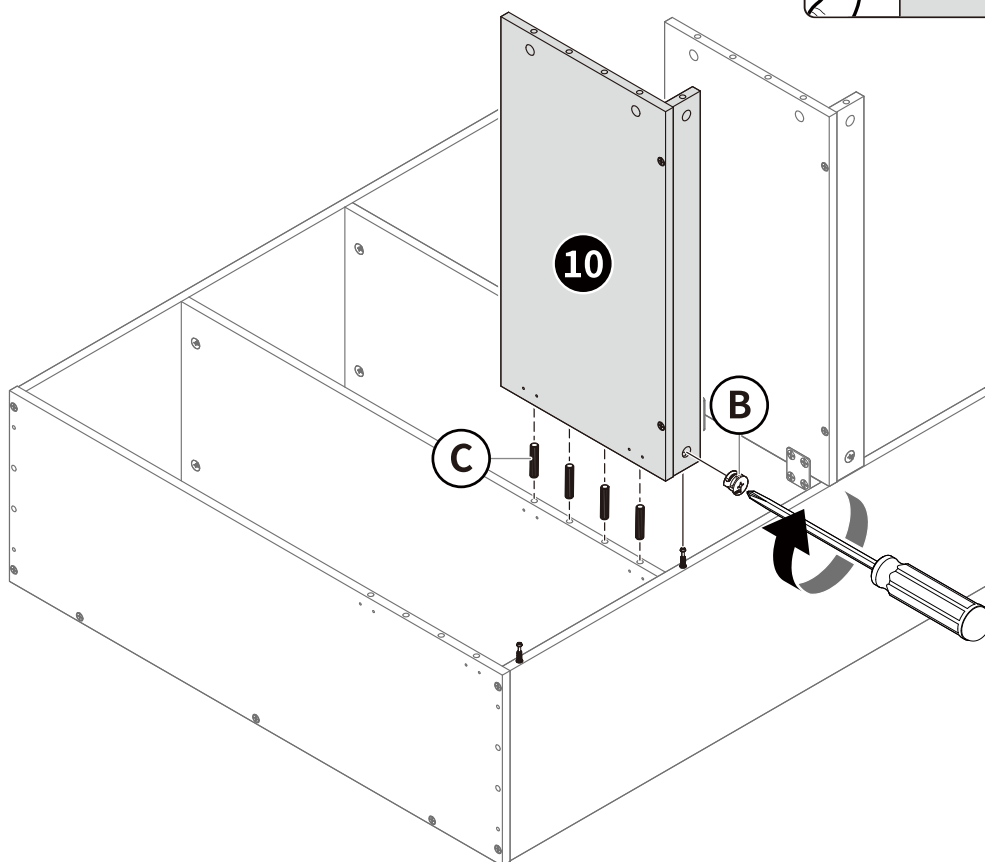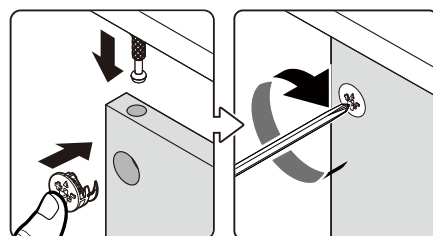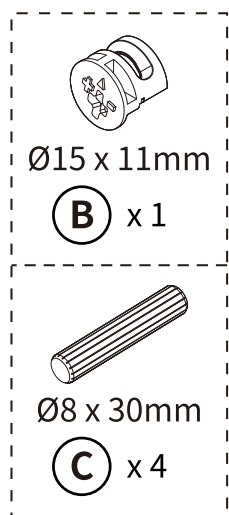

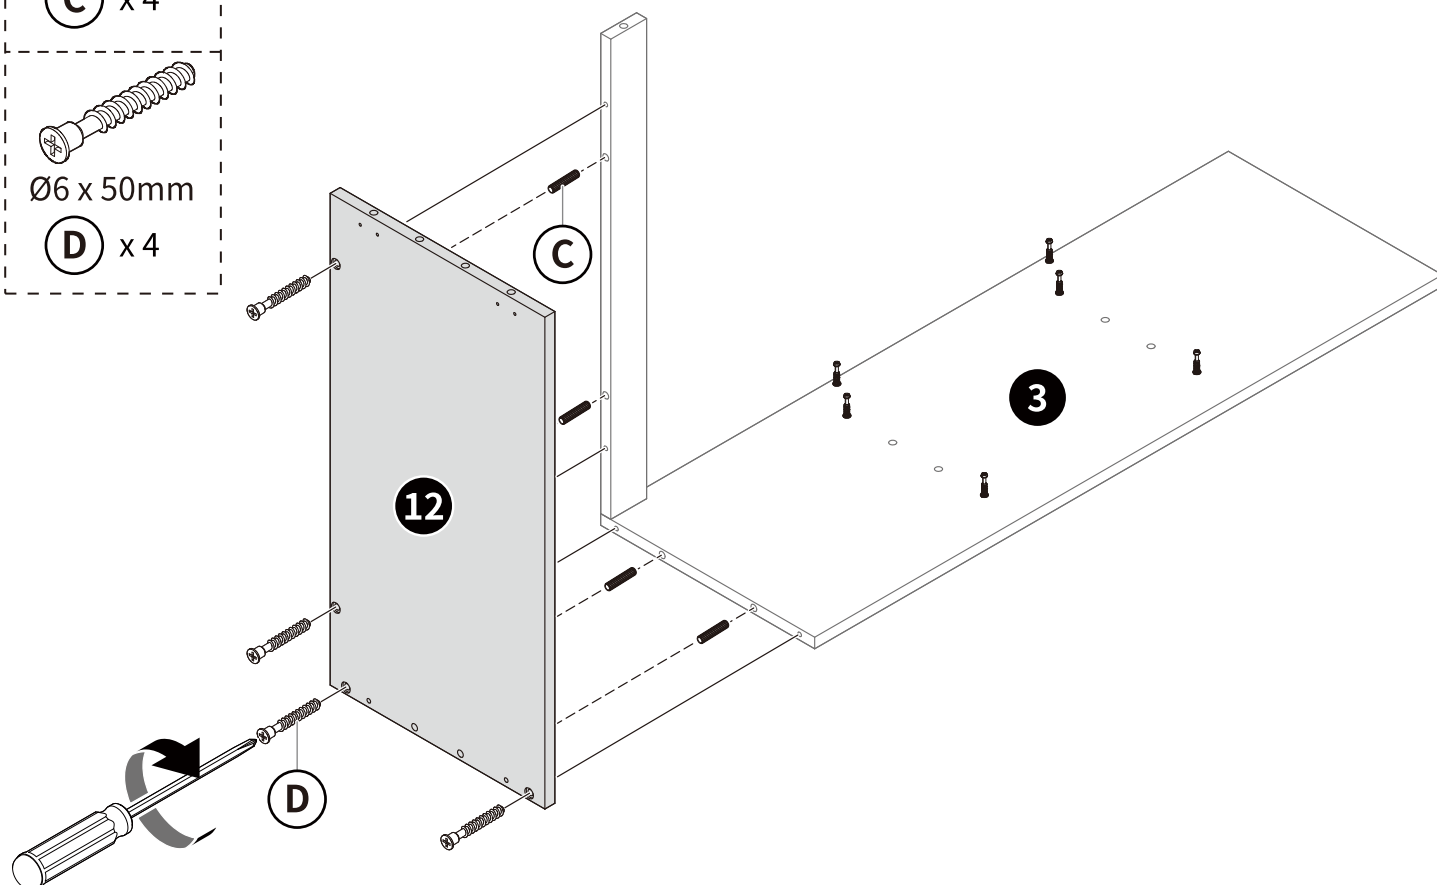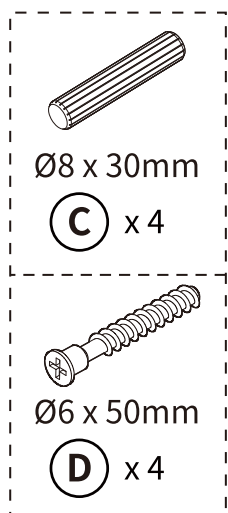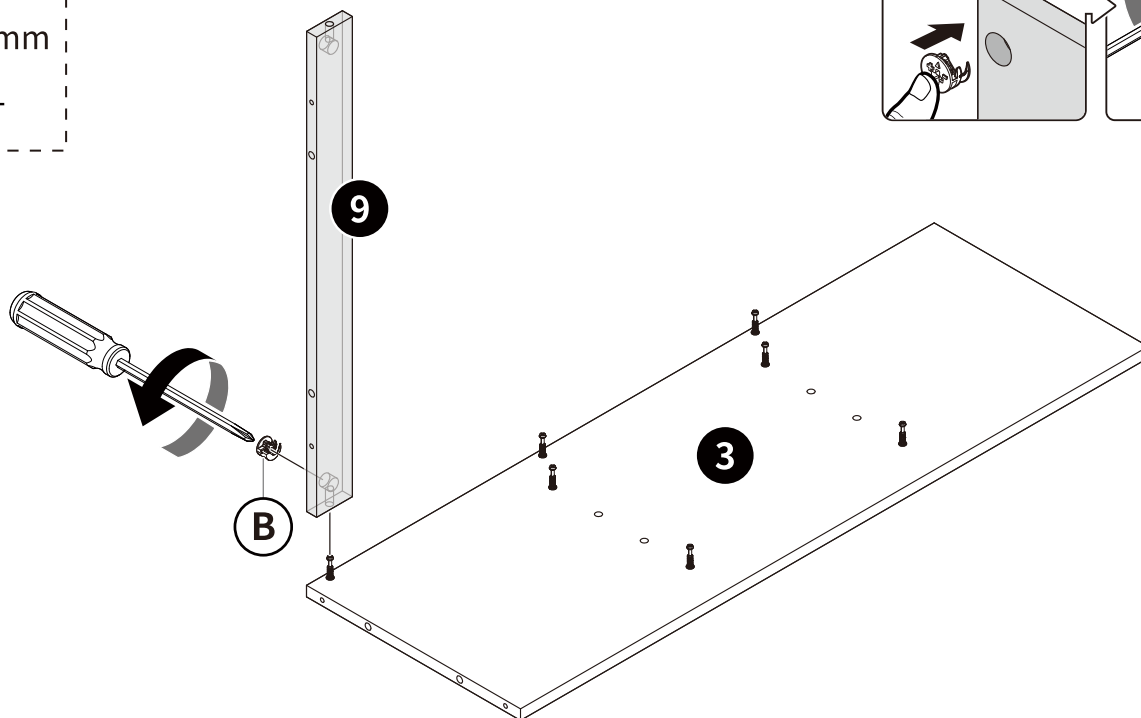
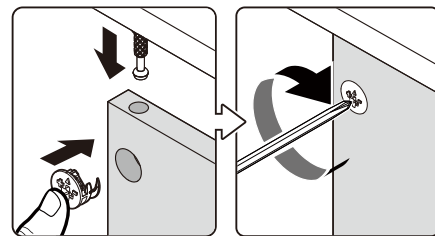
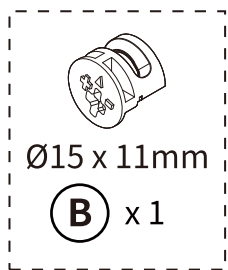


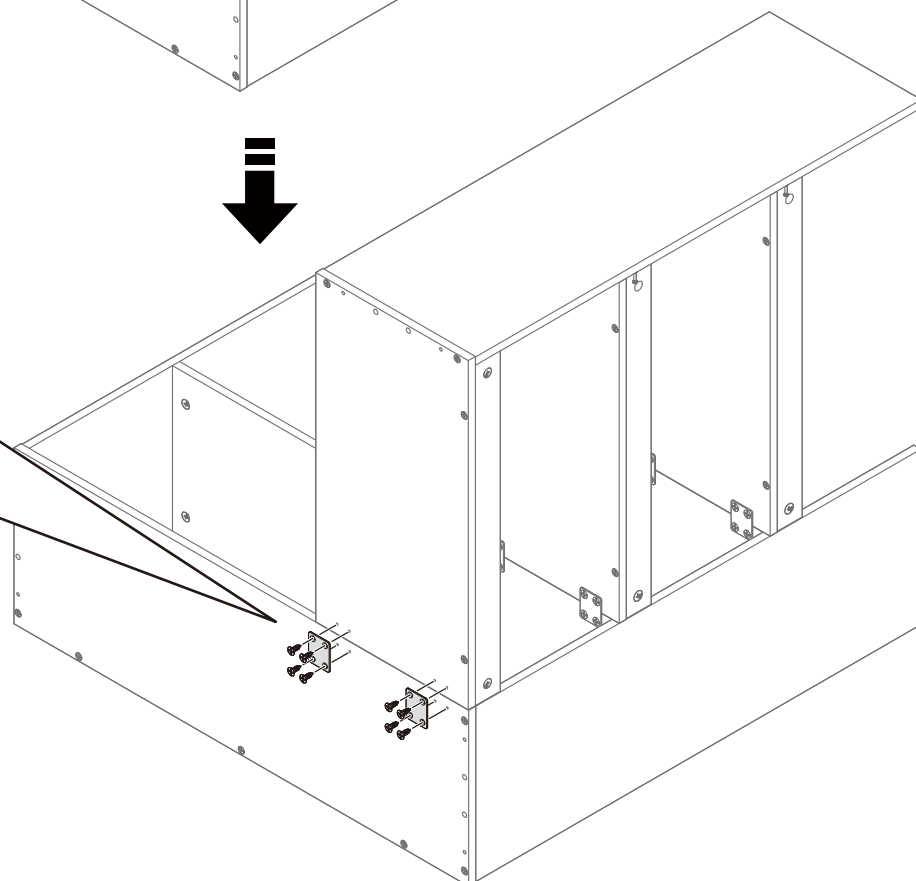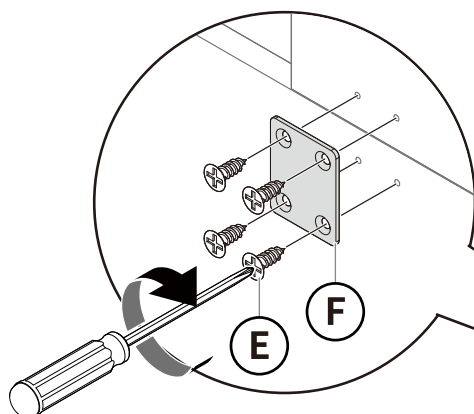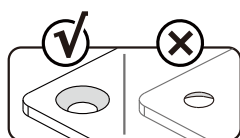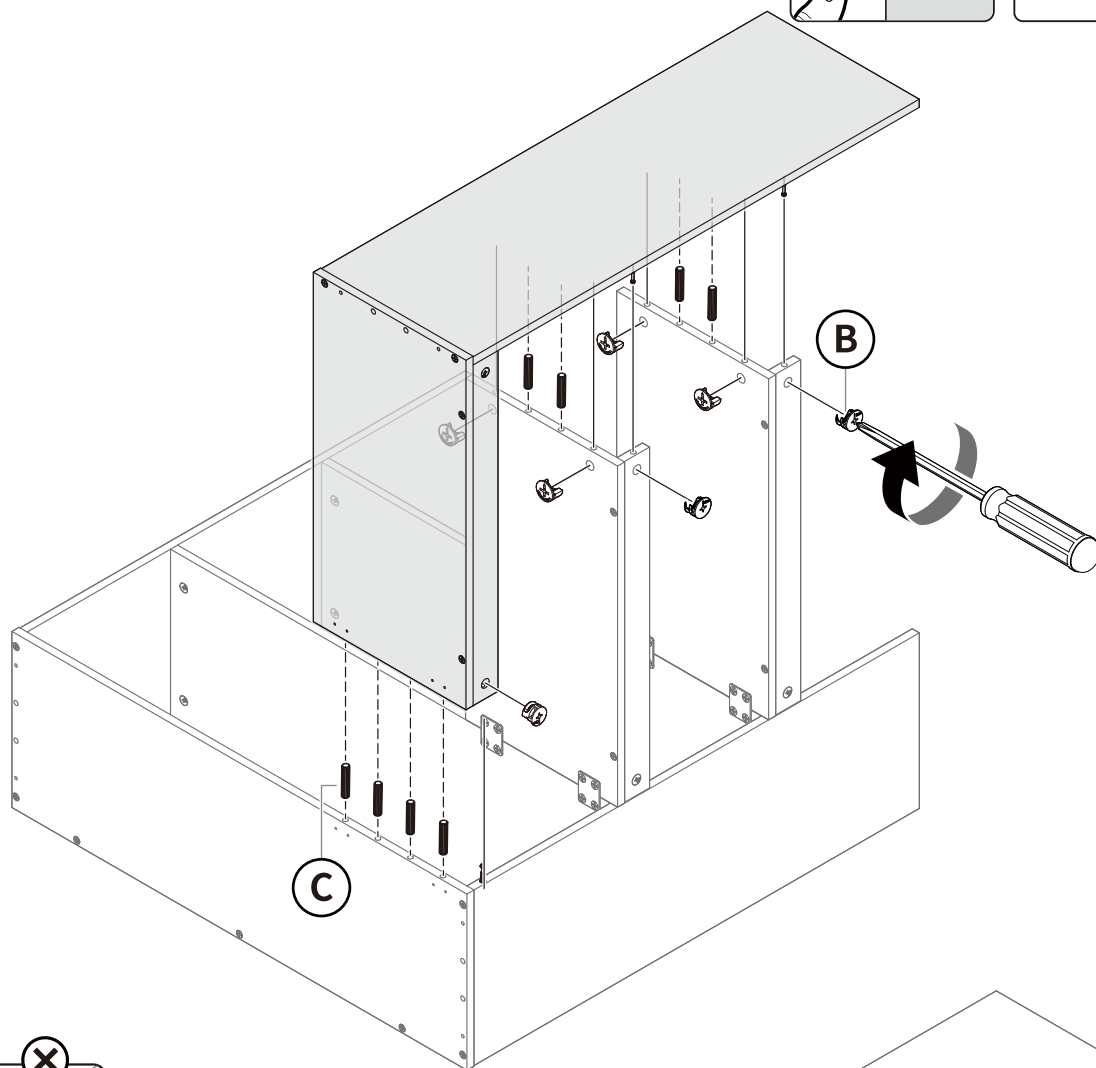
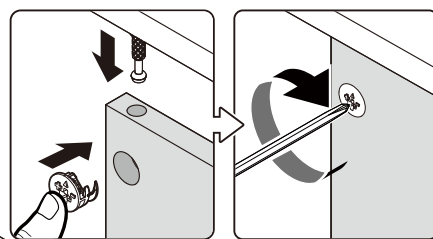
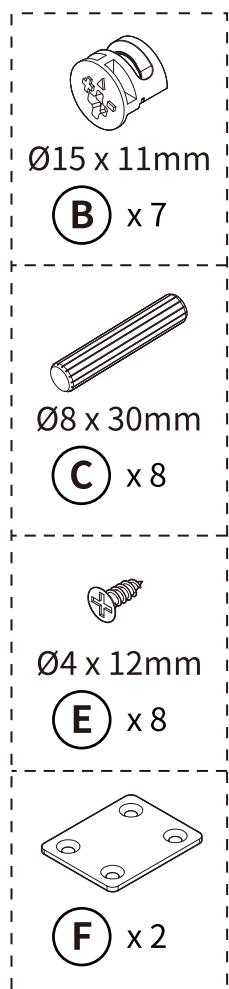


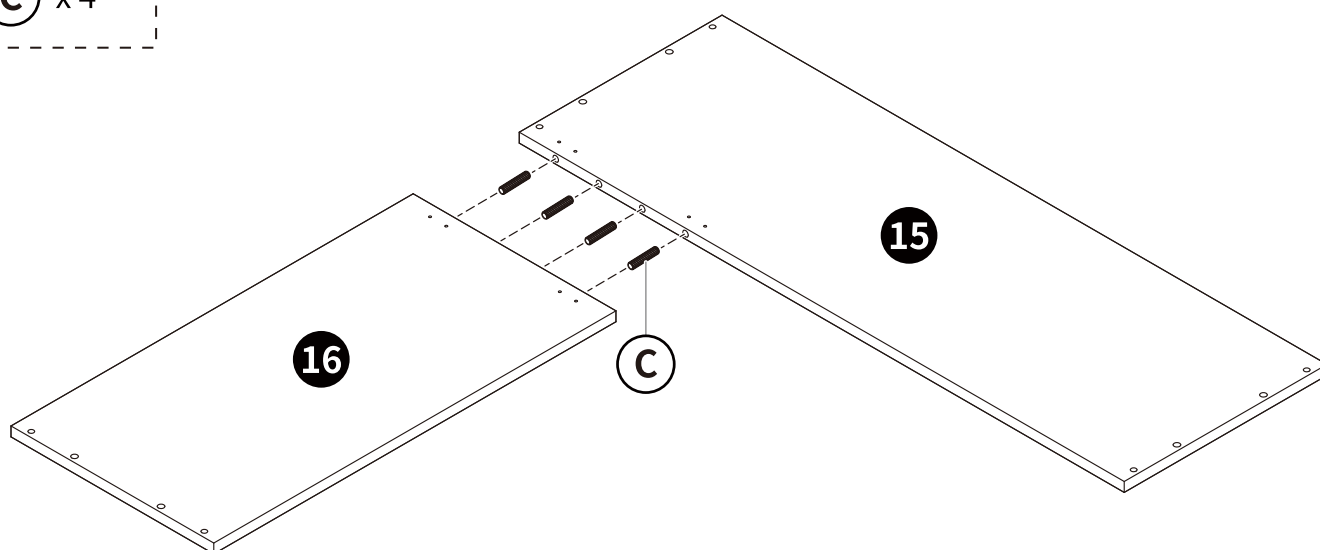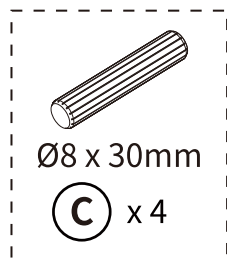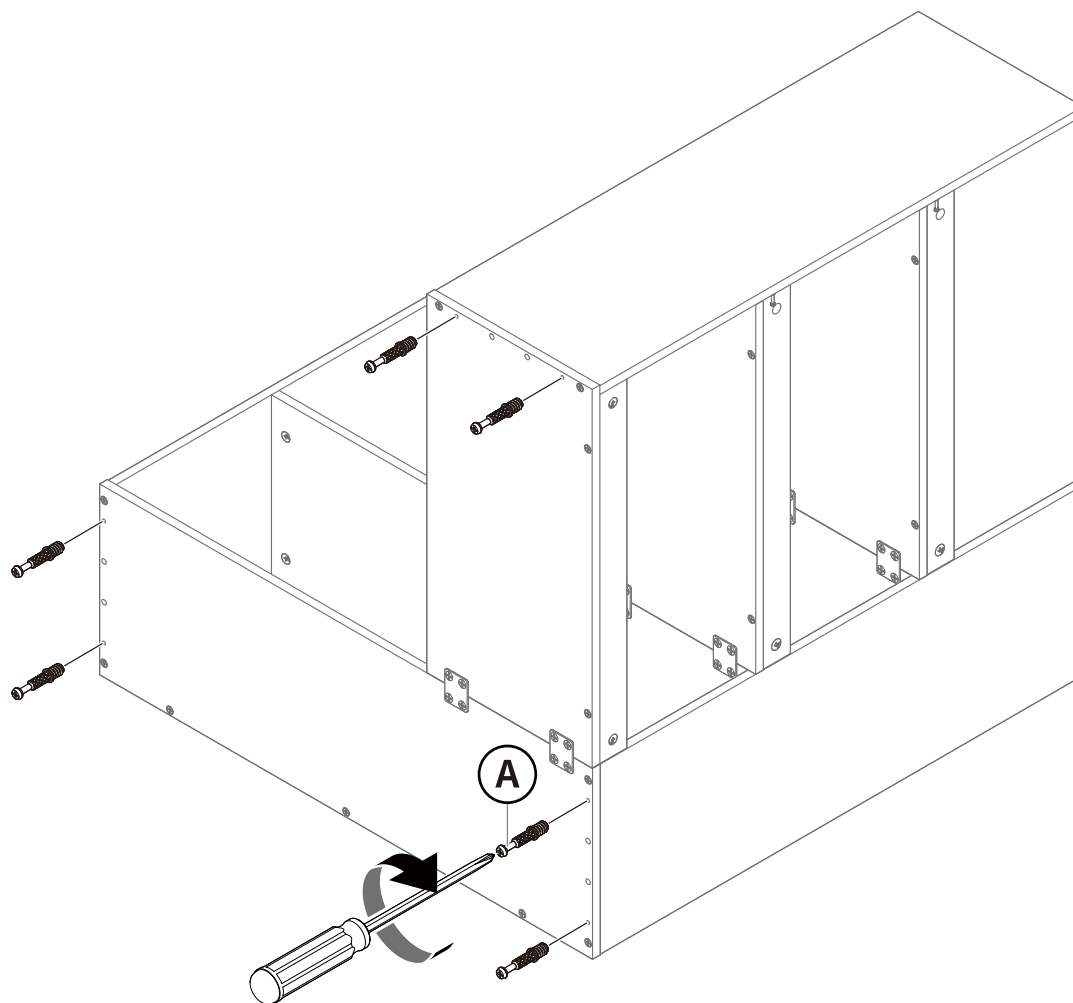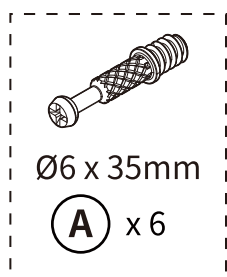


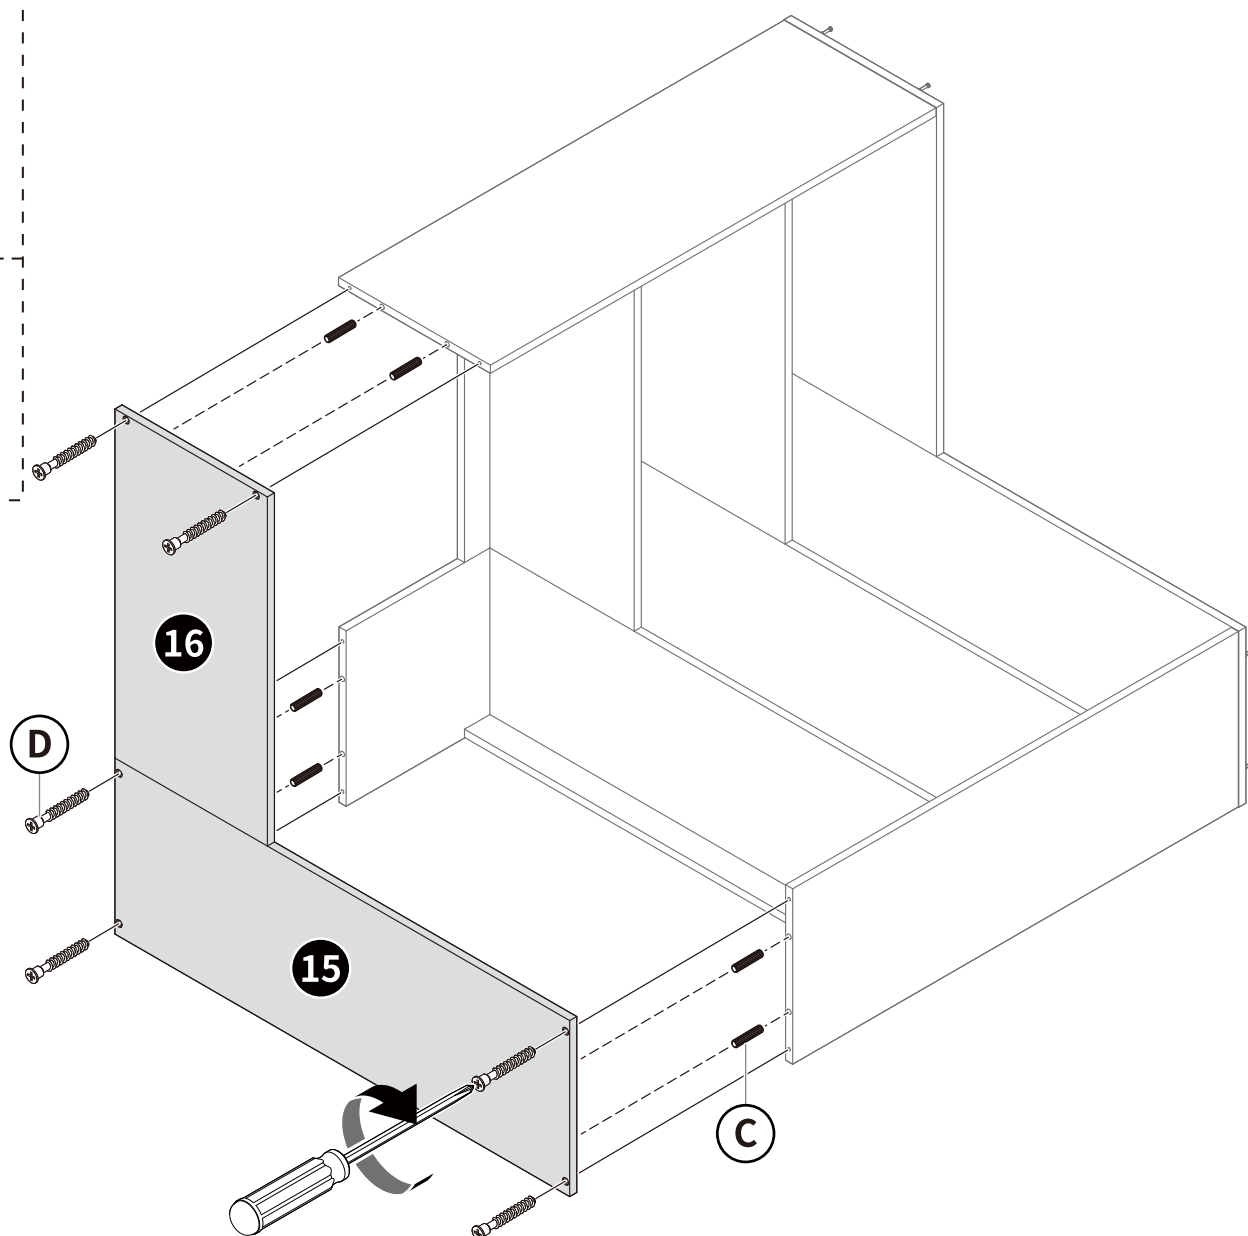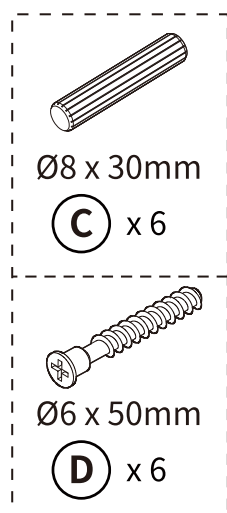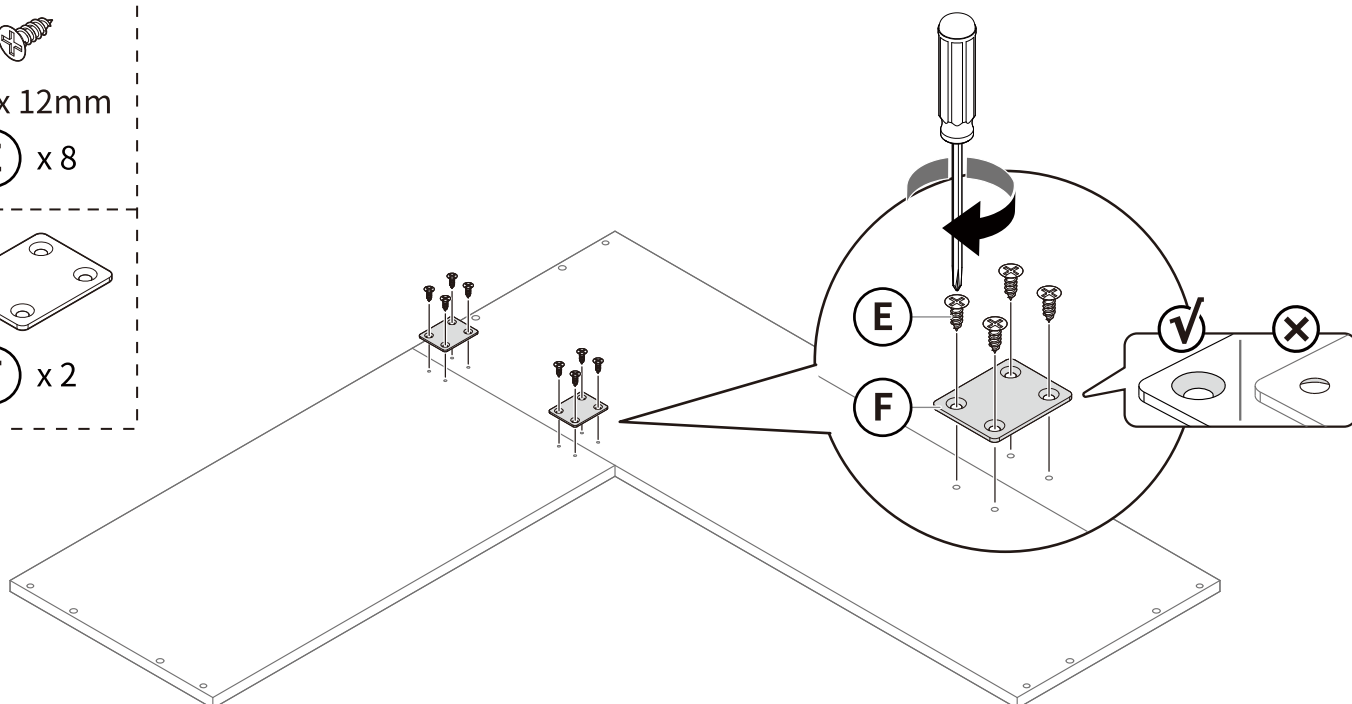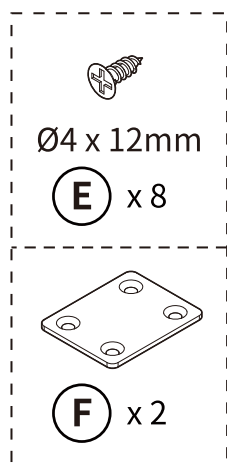

2

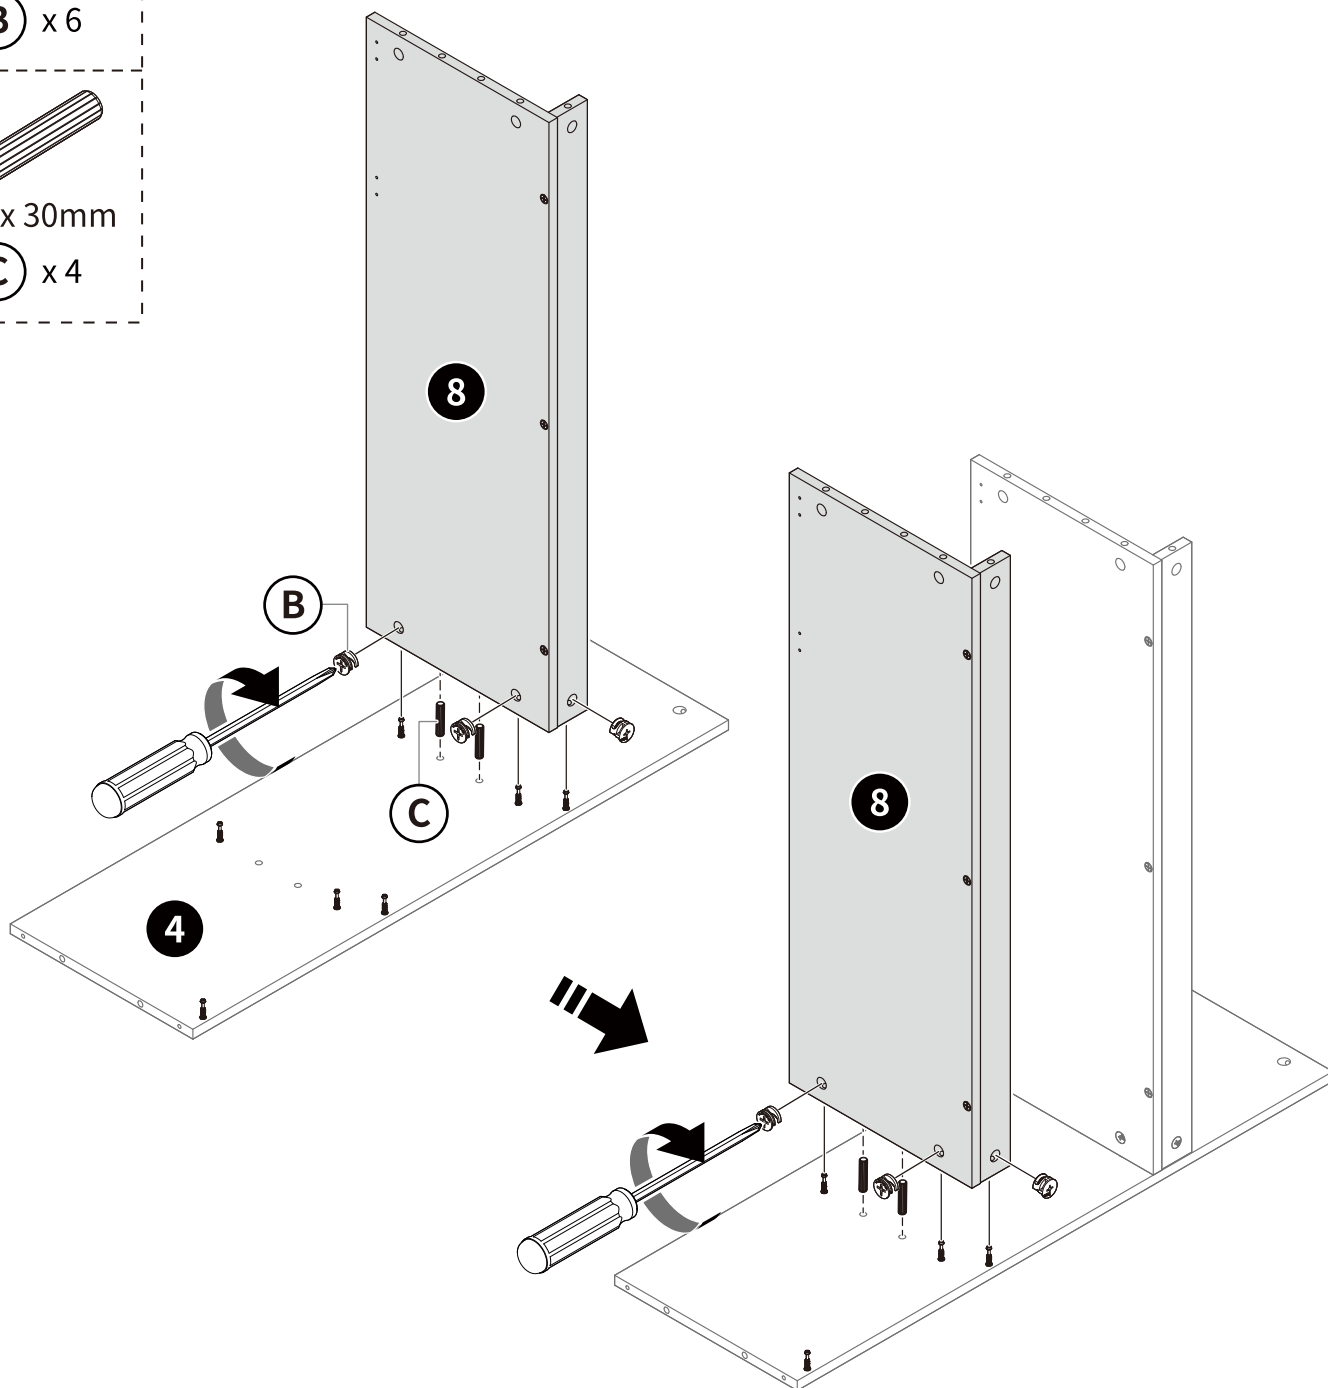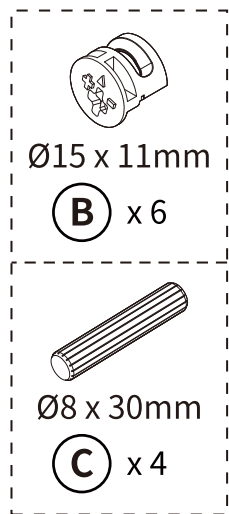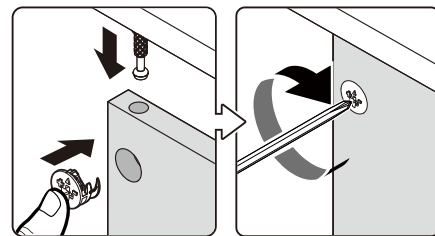


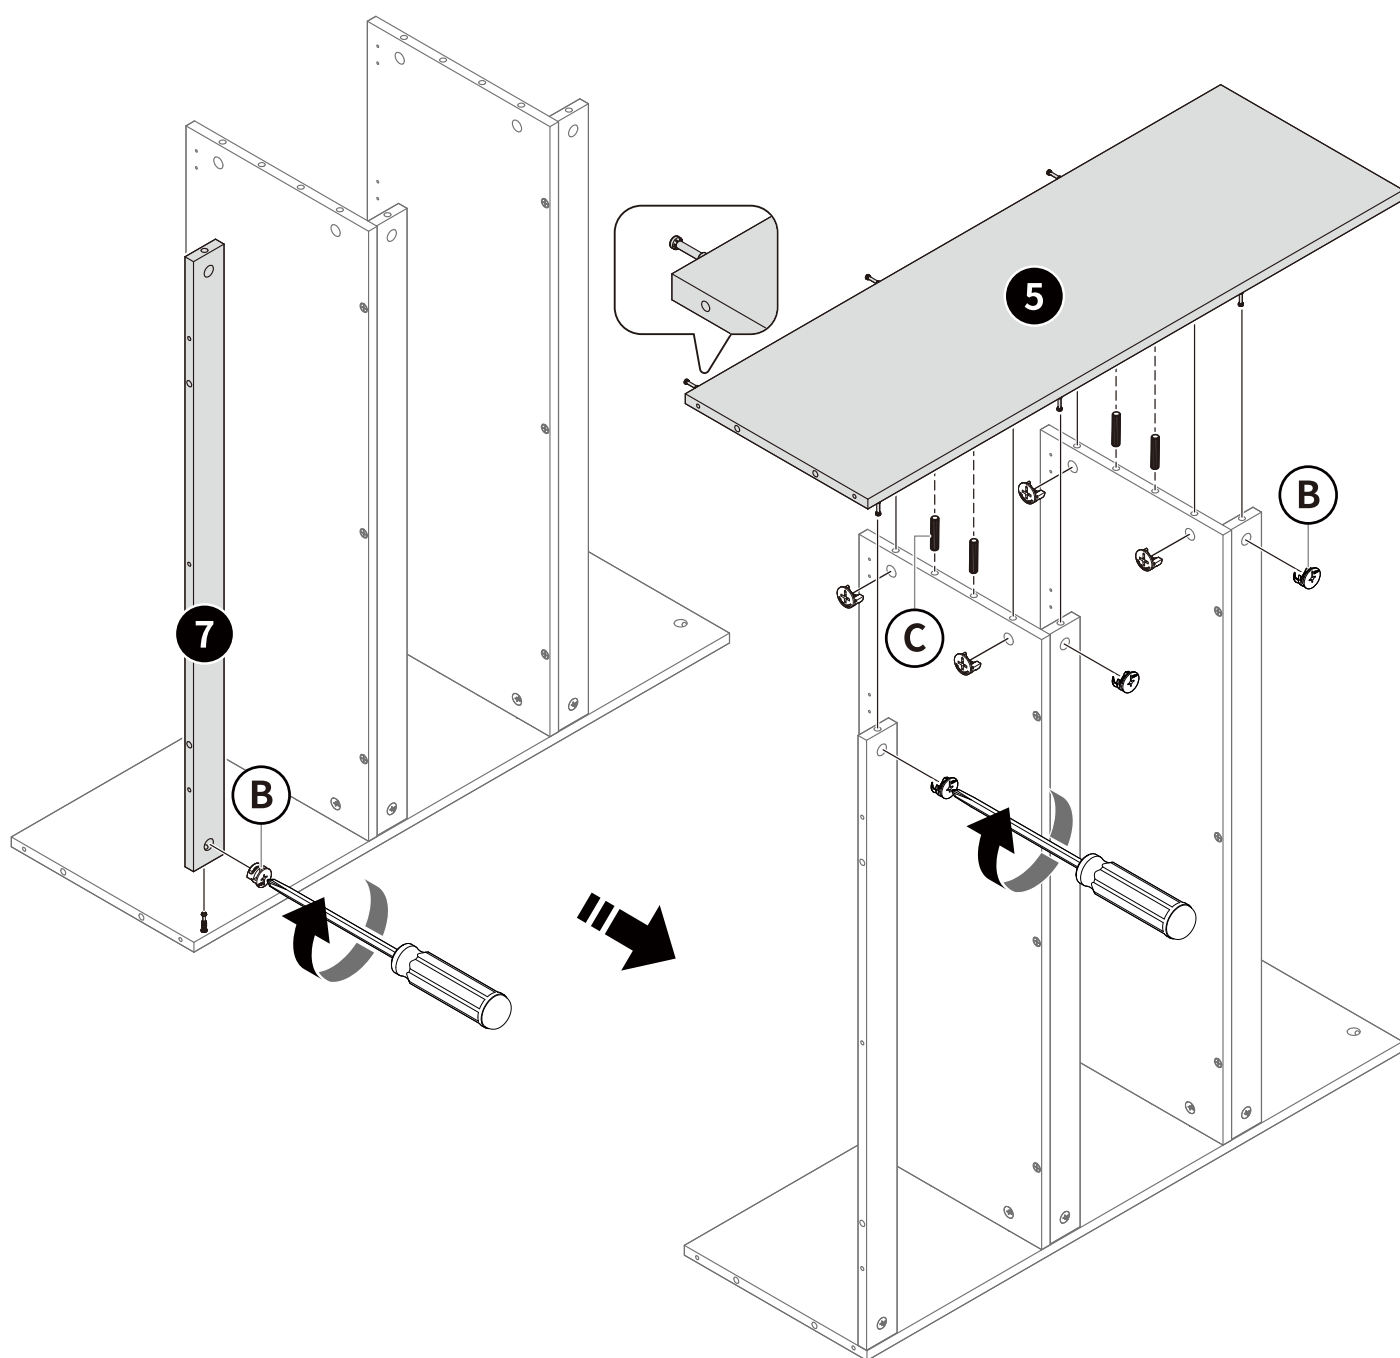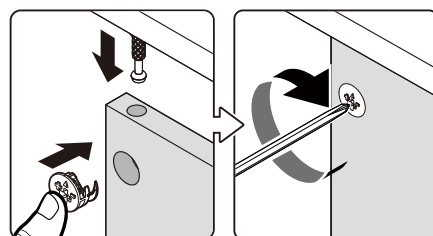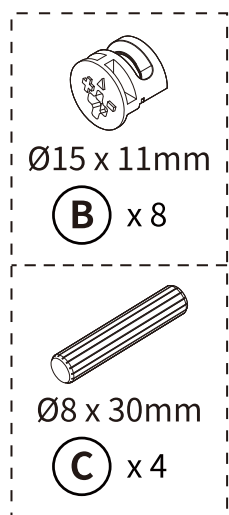




Ø8 x 30mm








(C) x 6














Ø6 x 50mm




(D) x 7




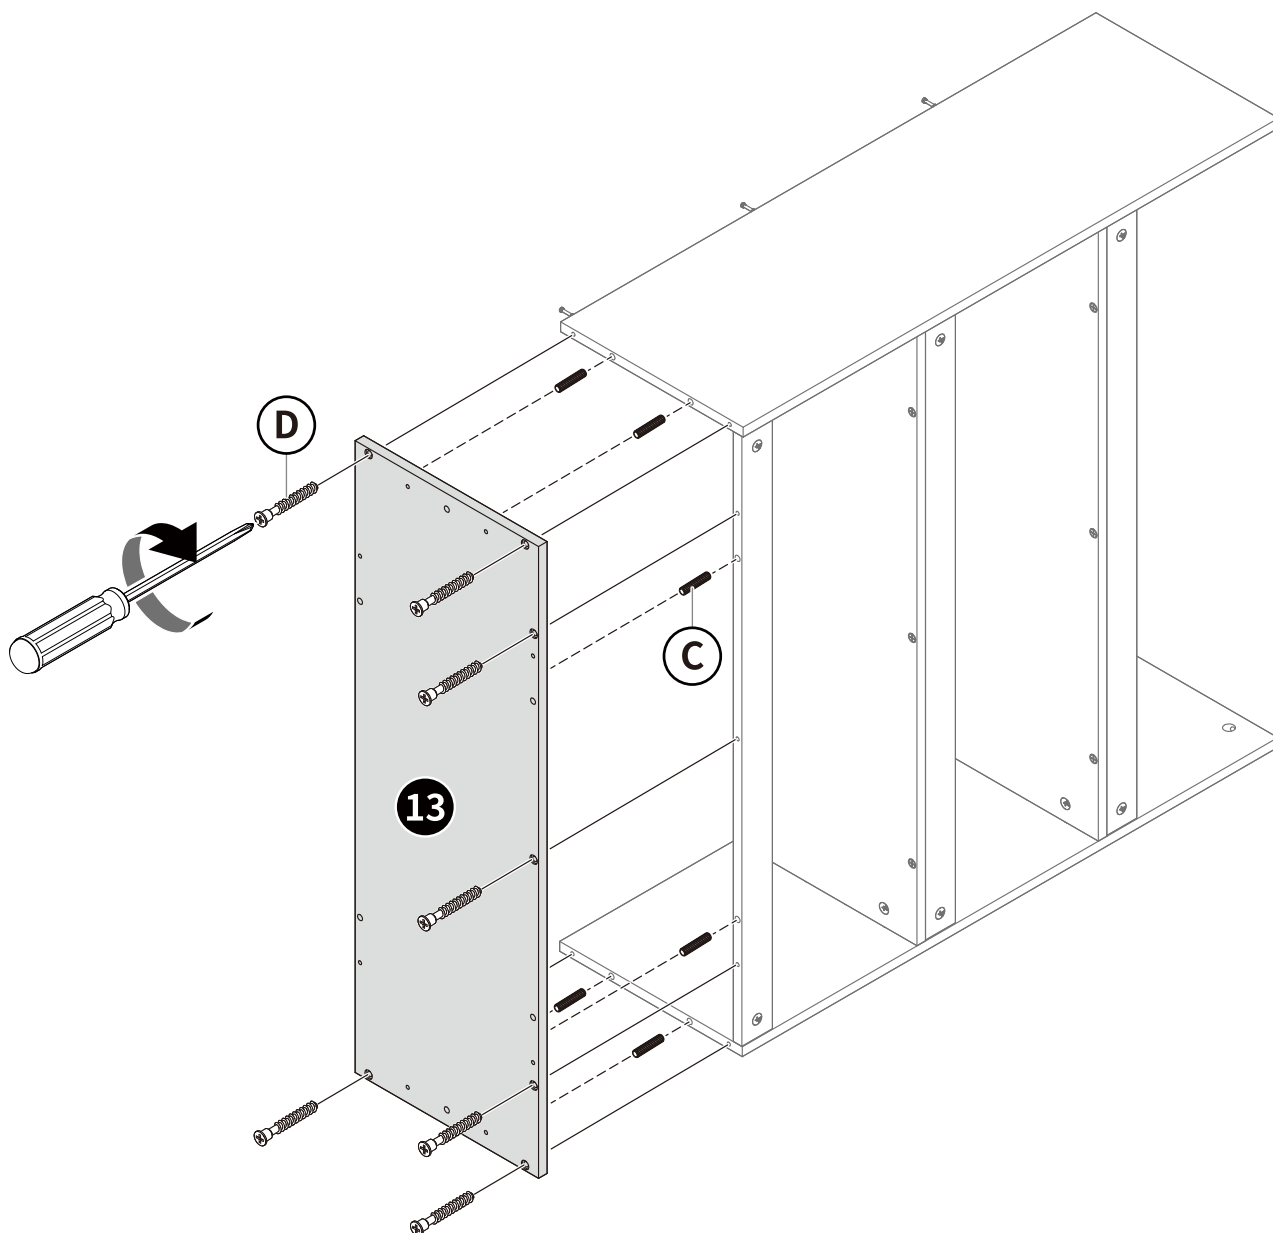


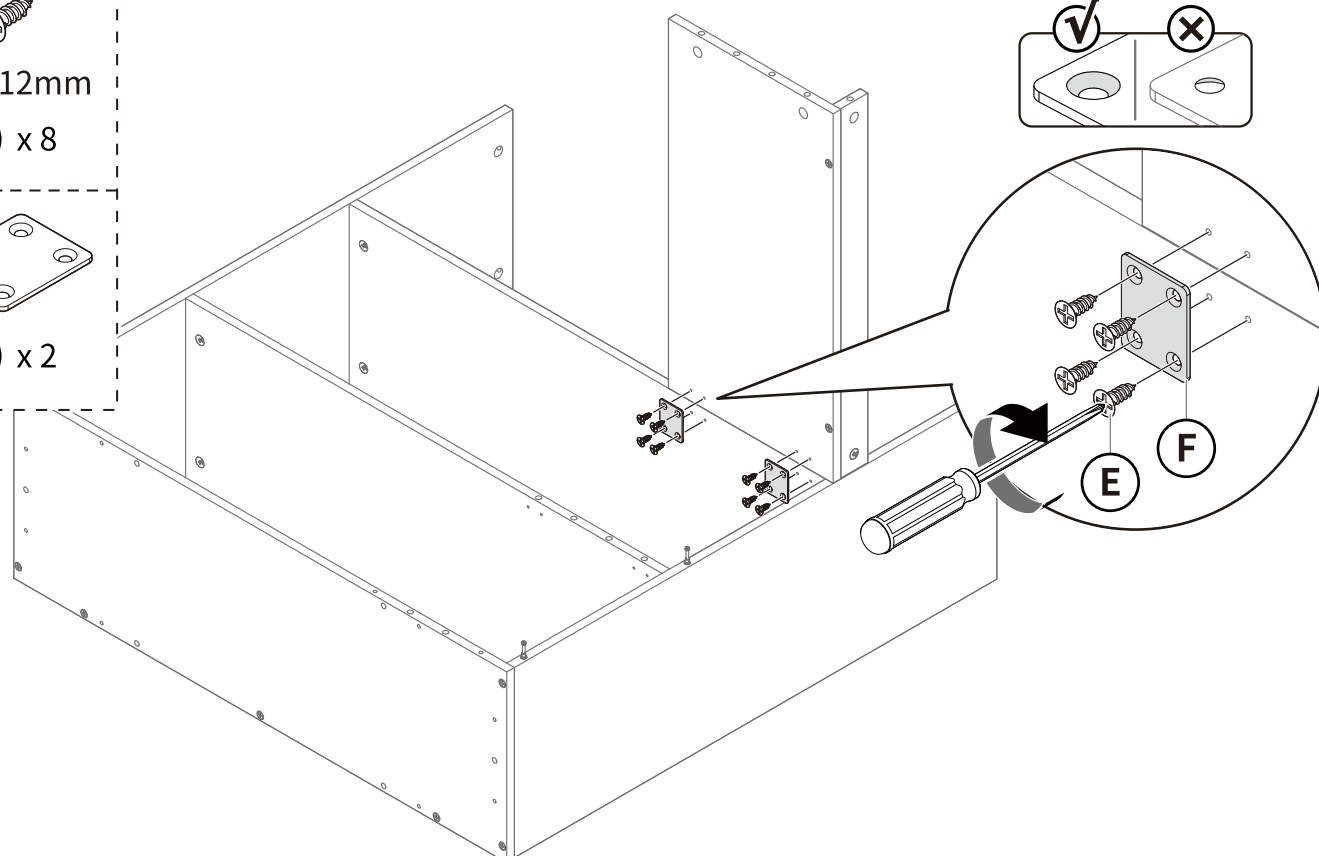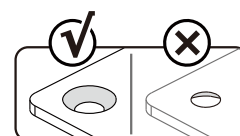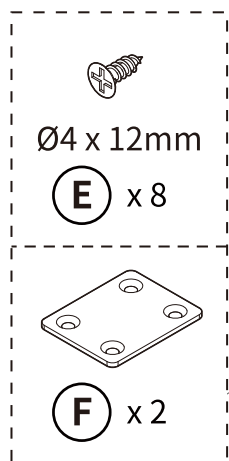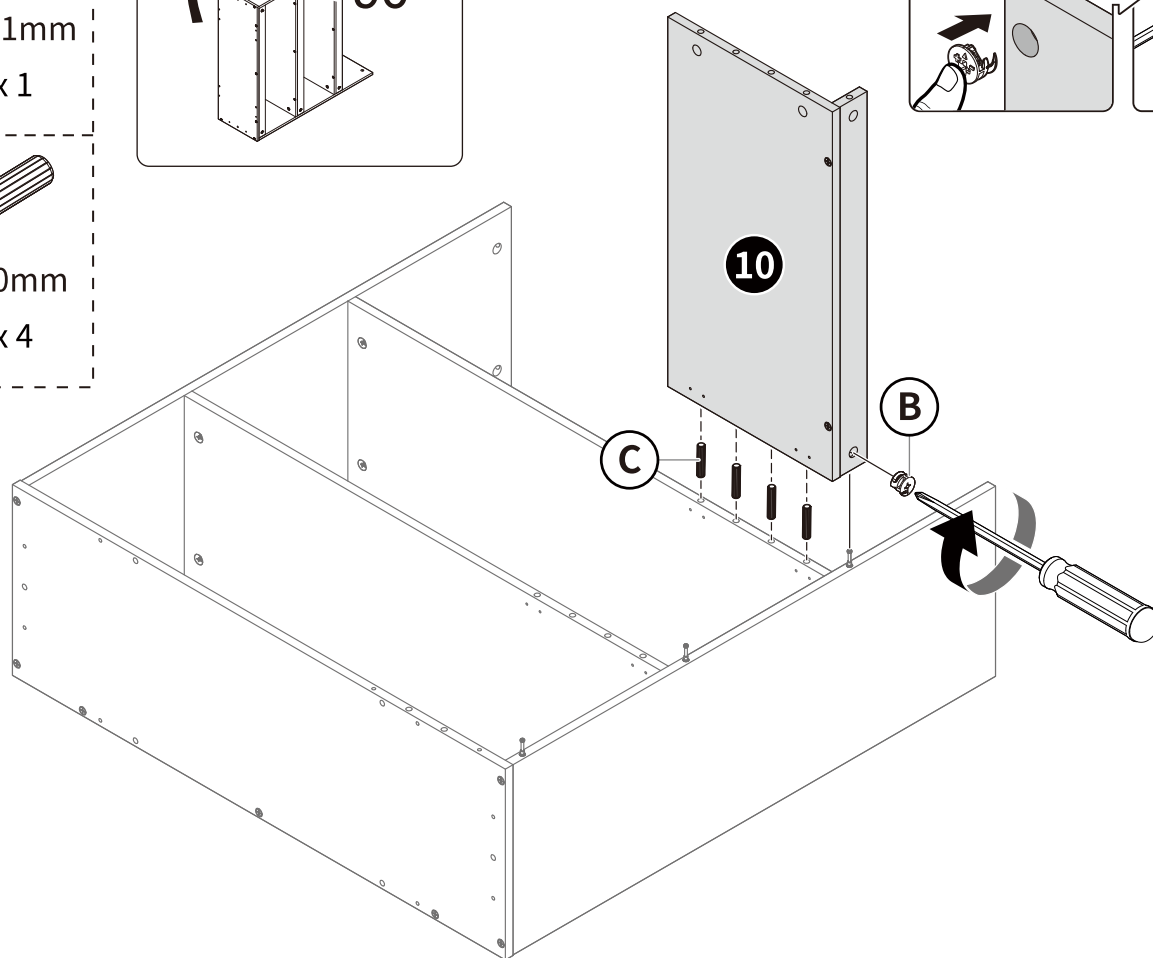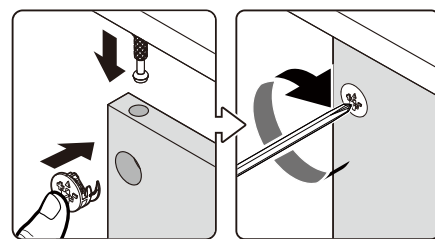
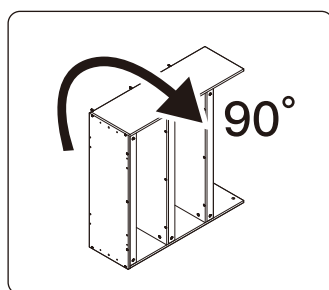
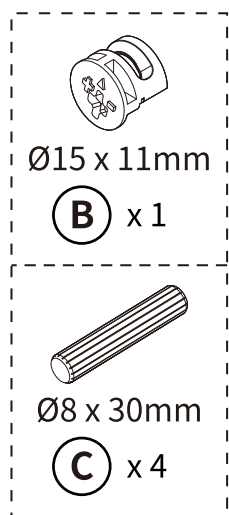


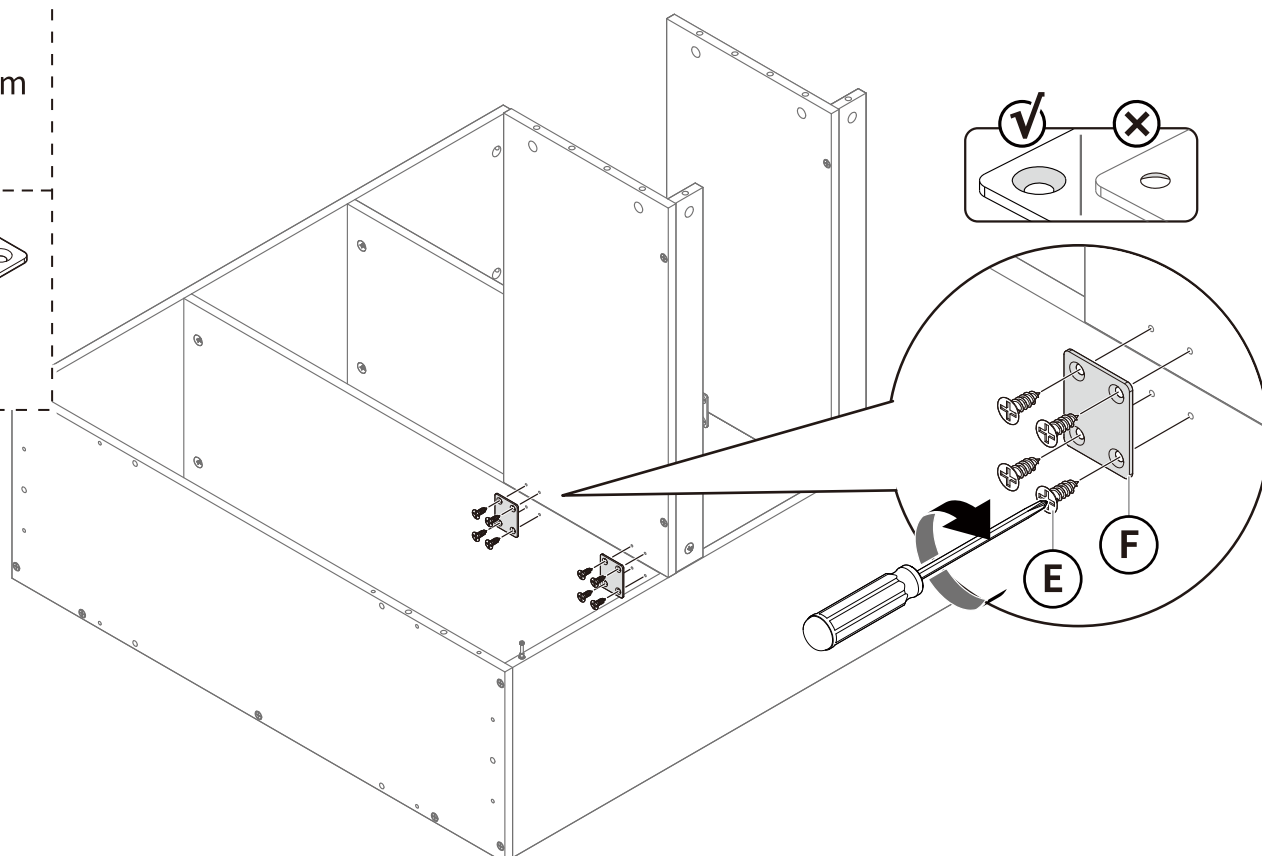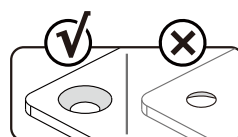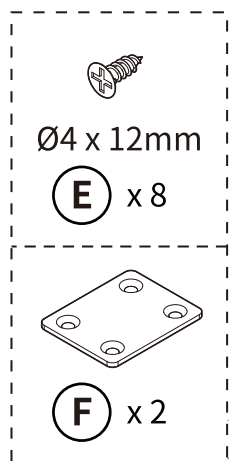
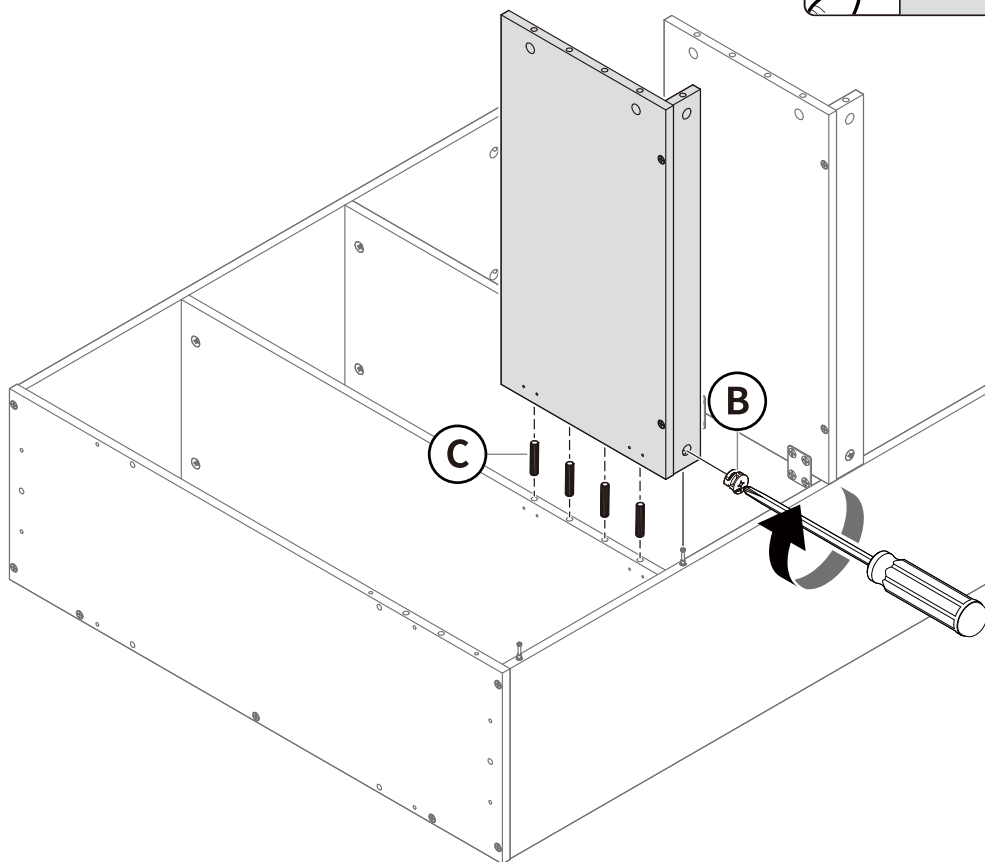
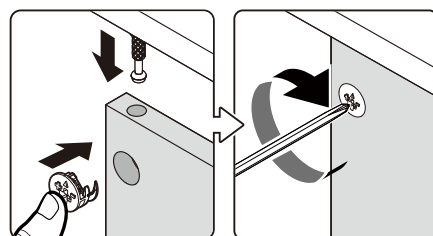
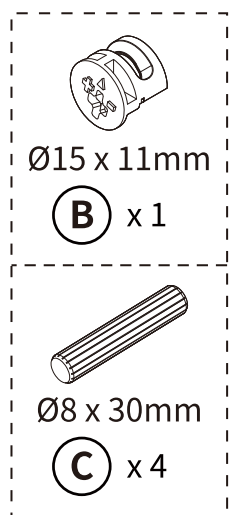


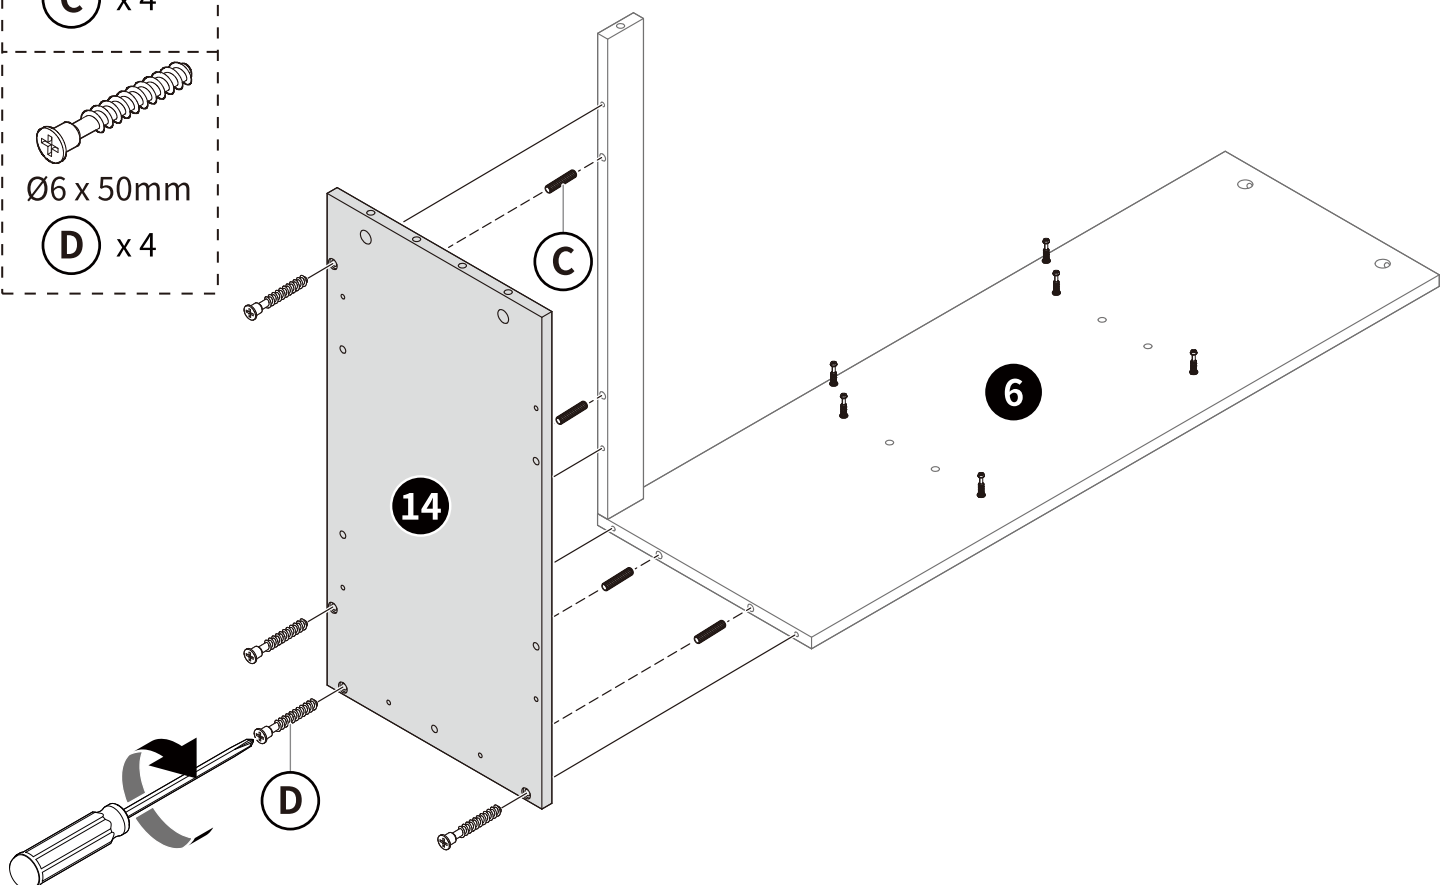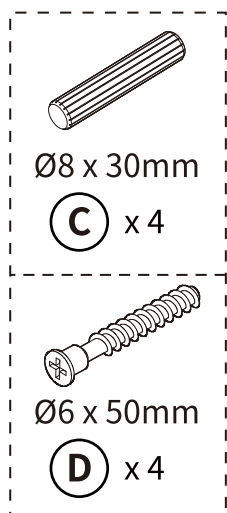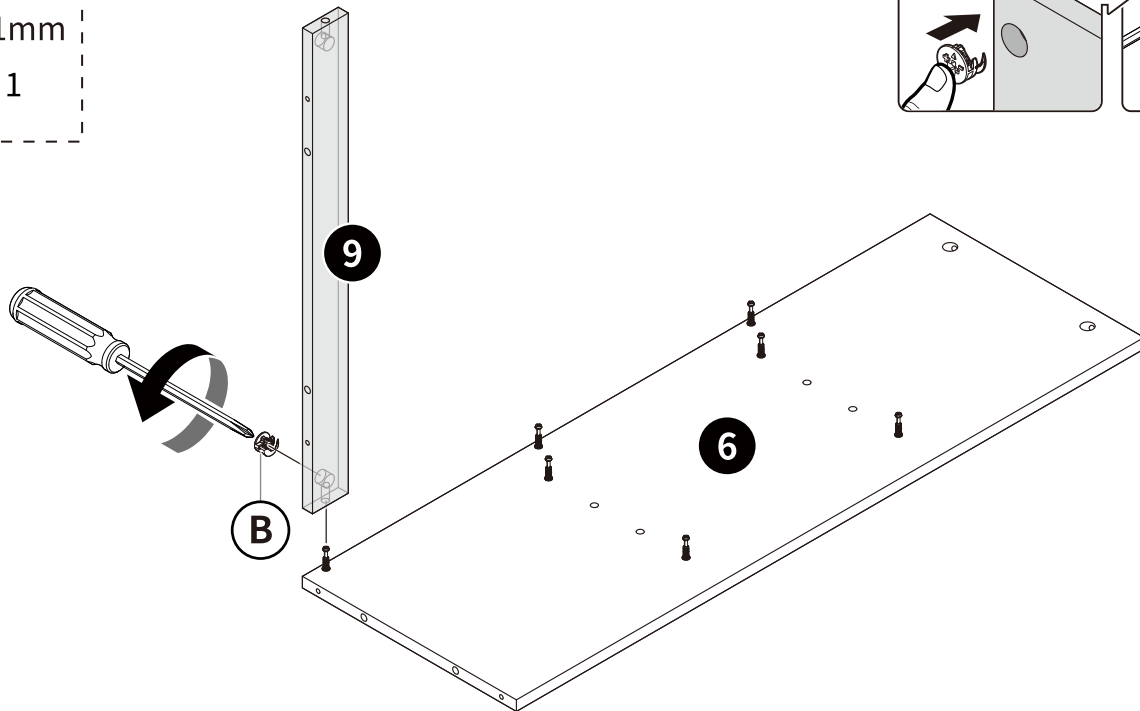
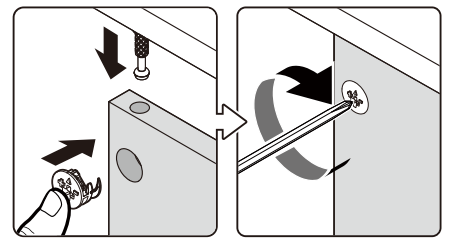
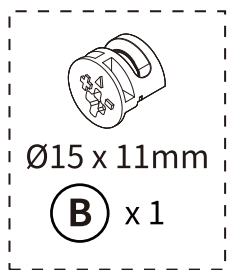


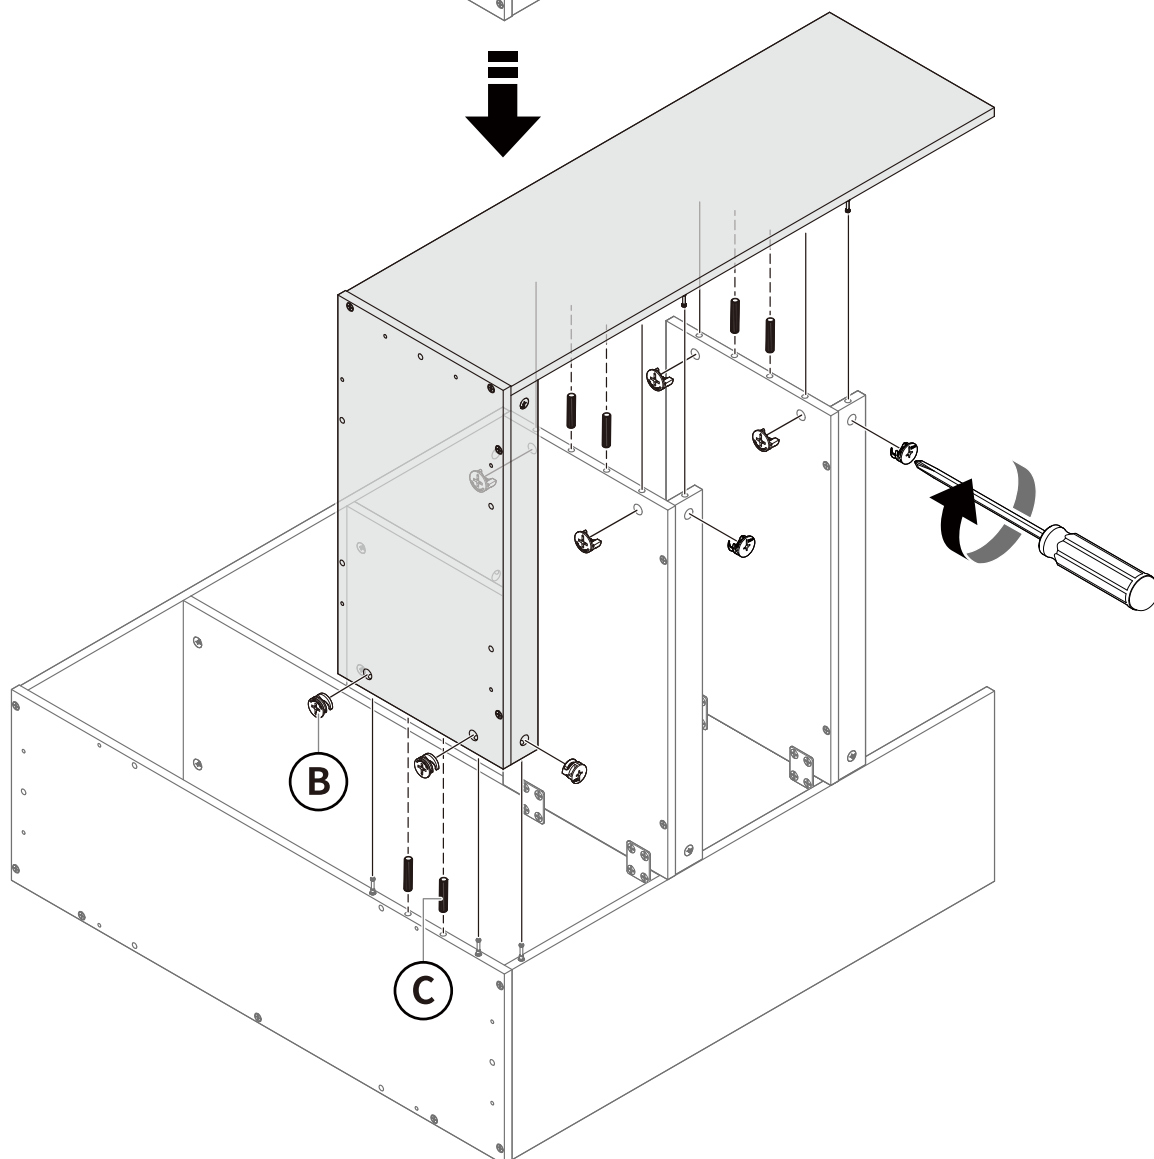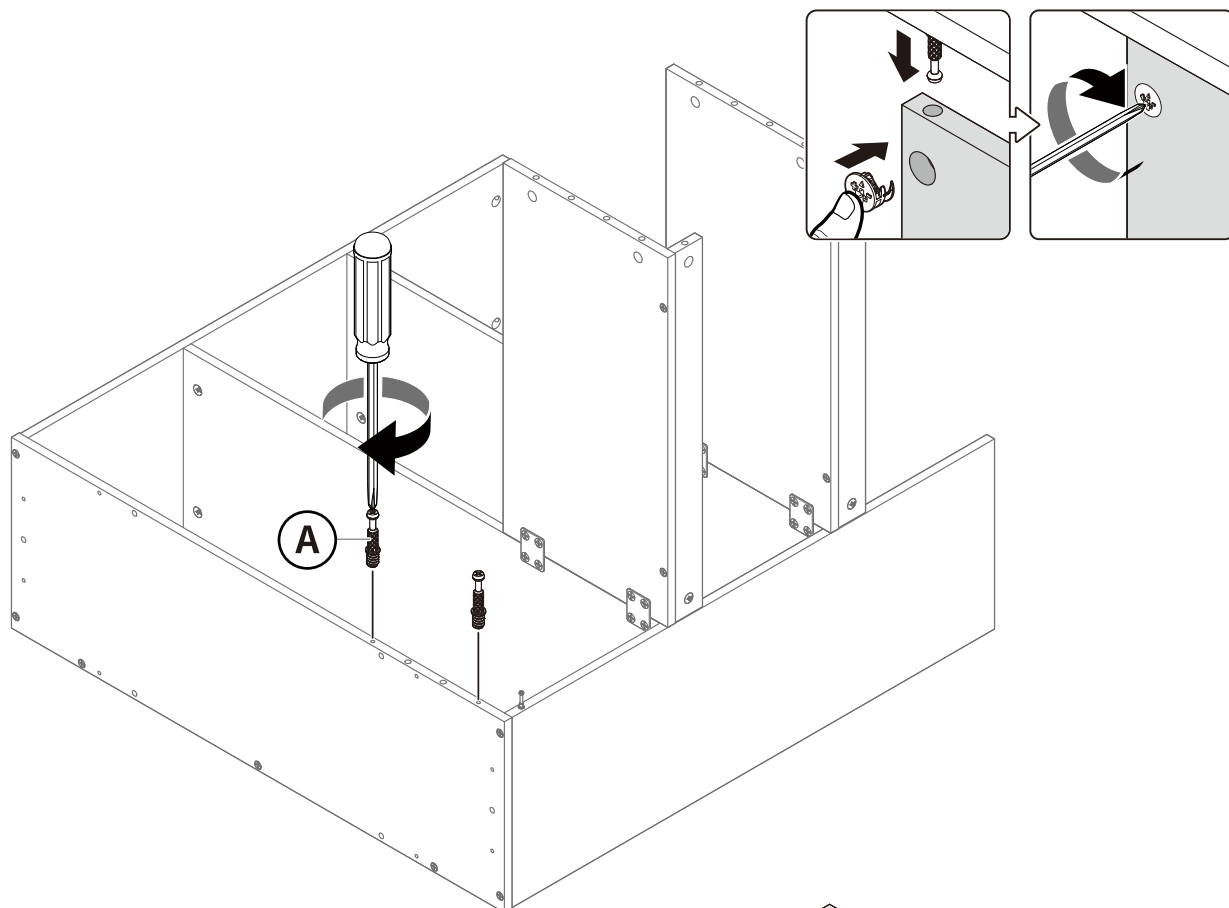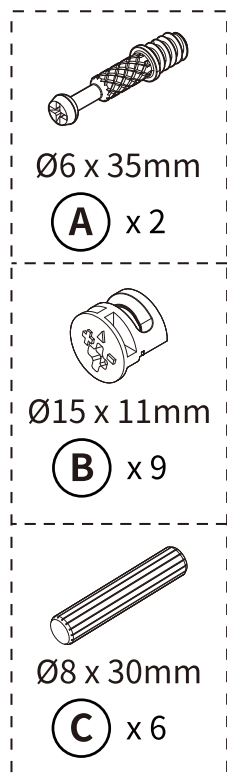

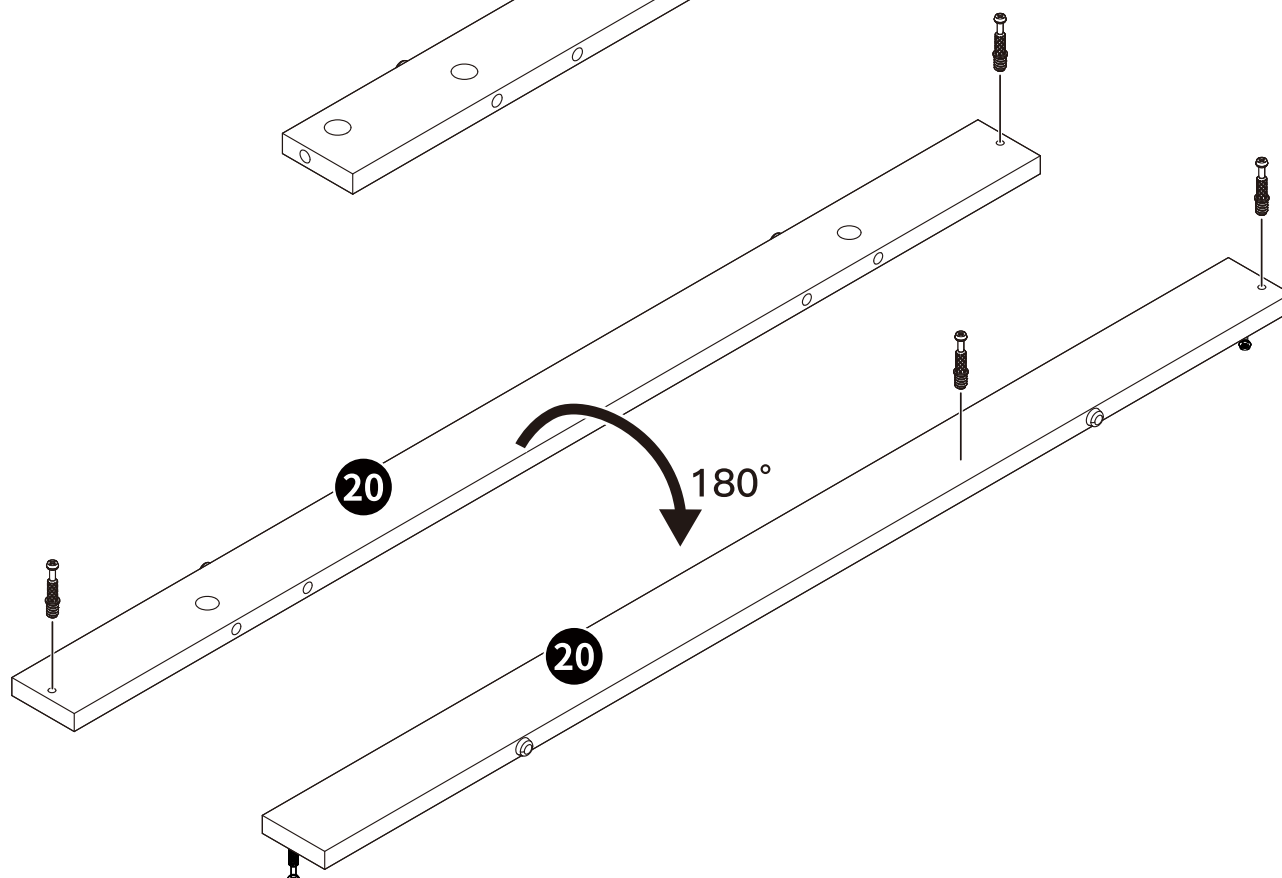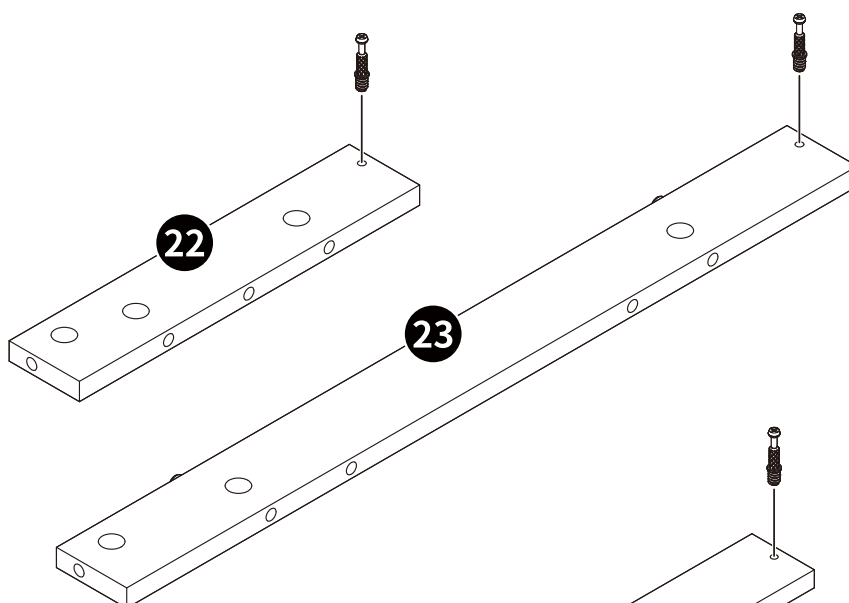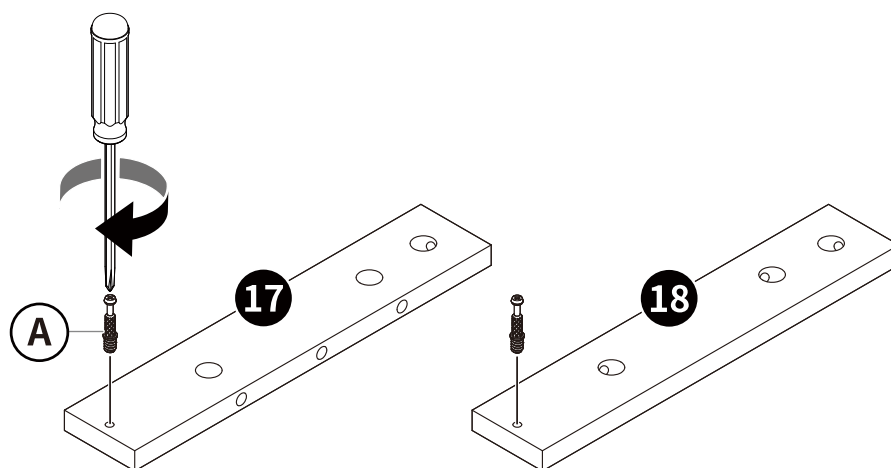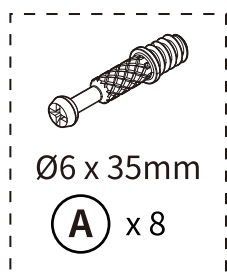


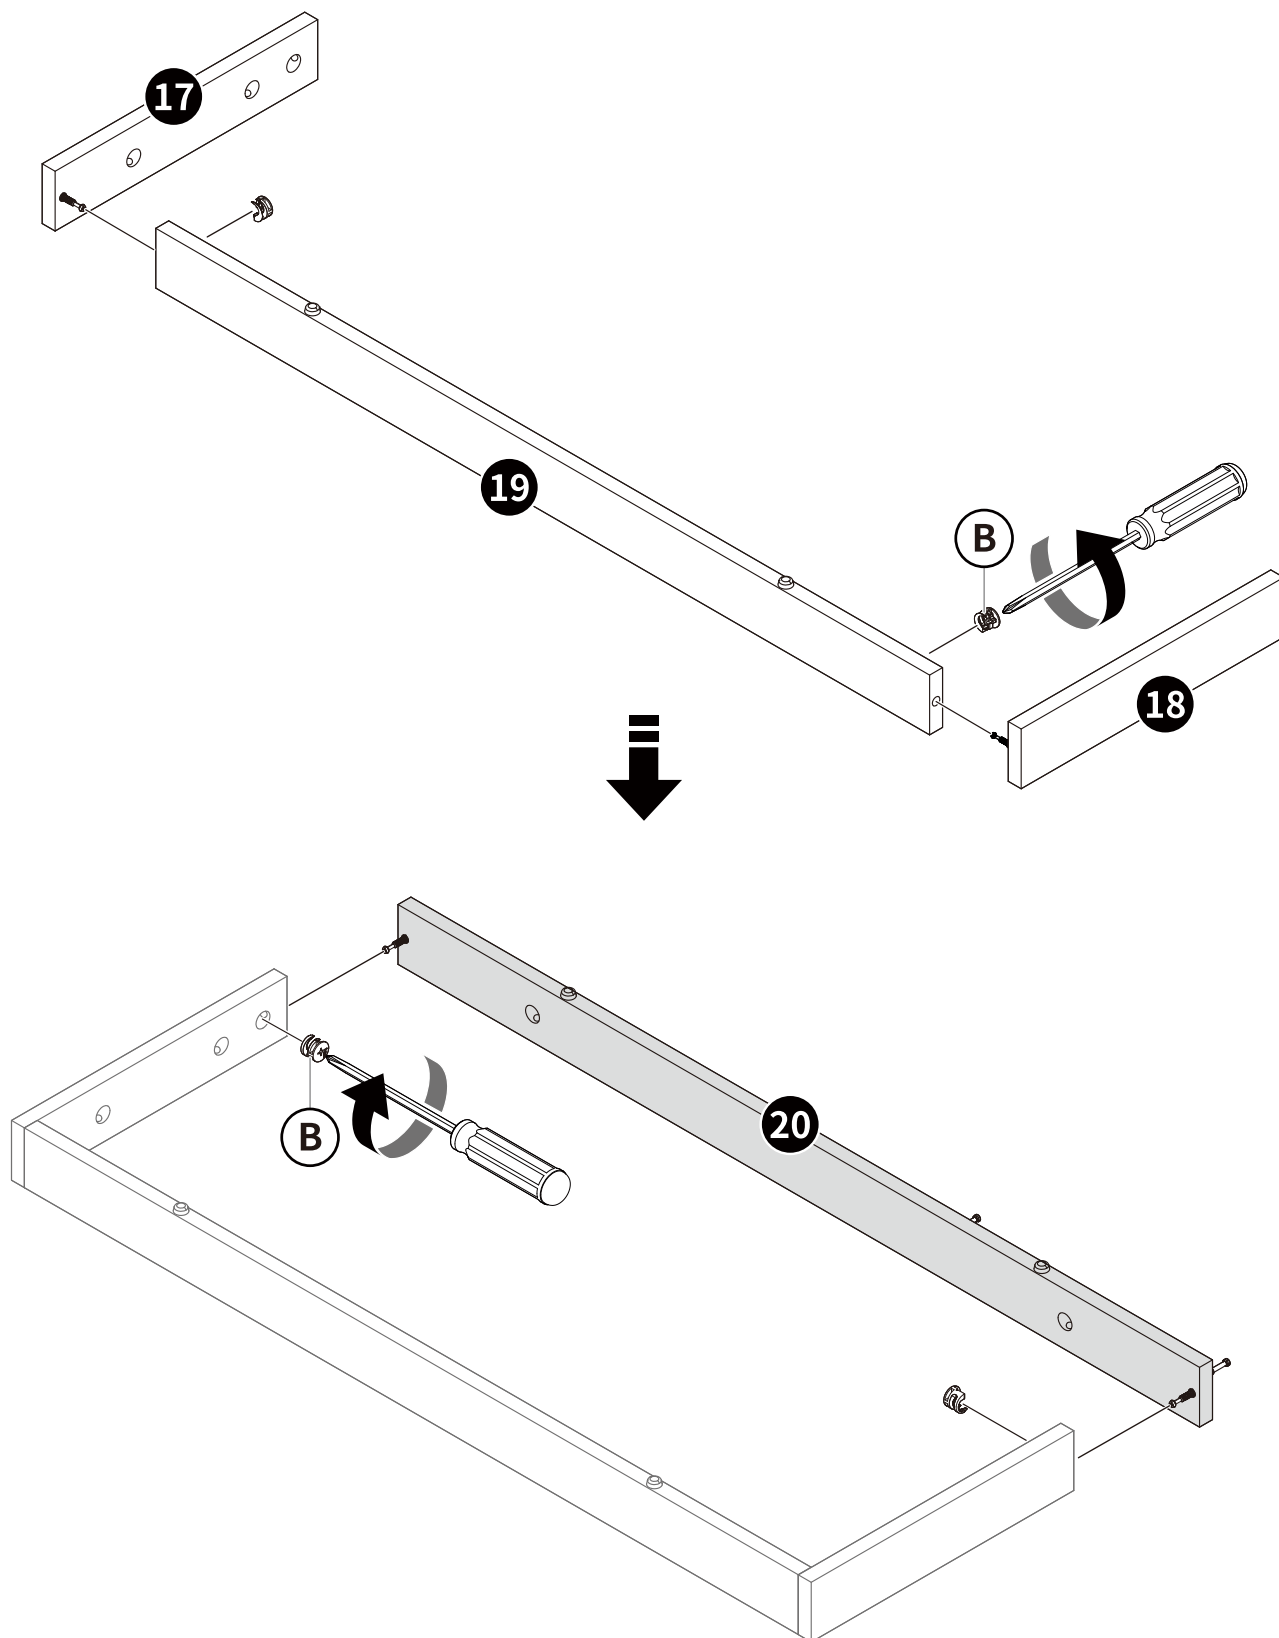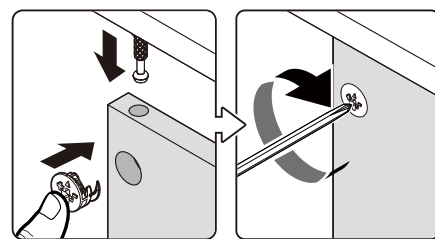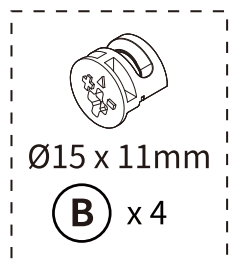

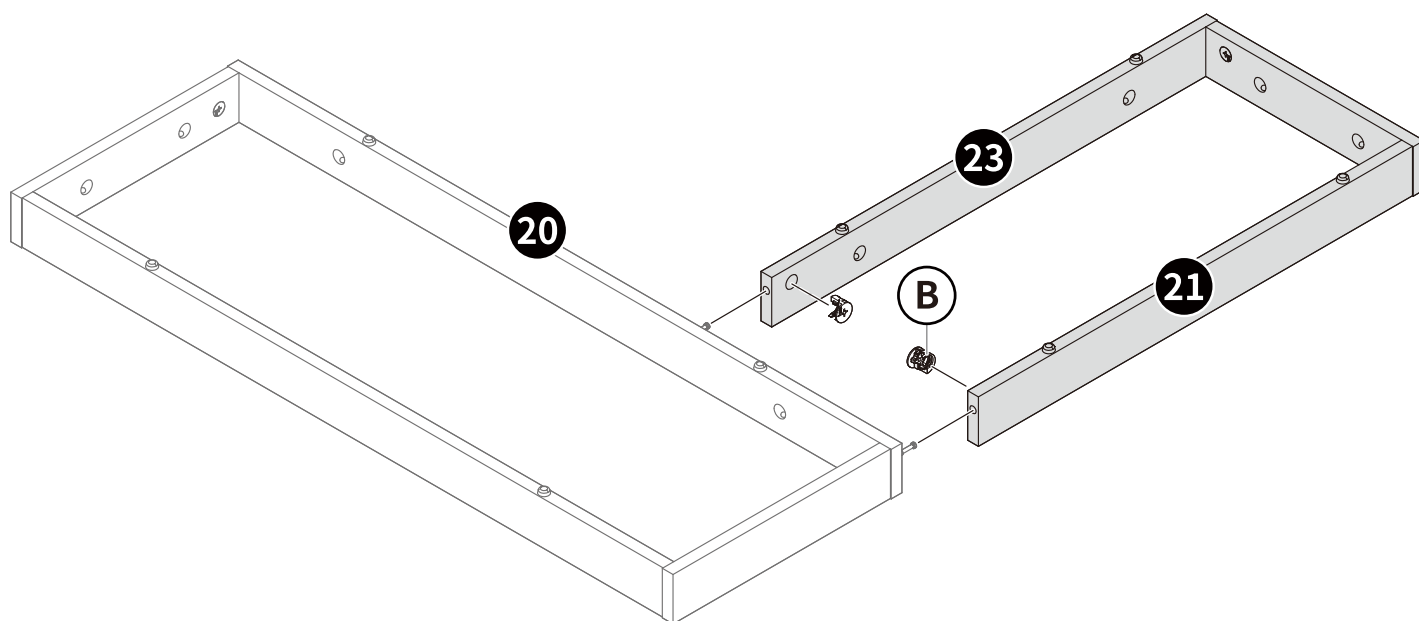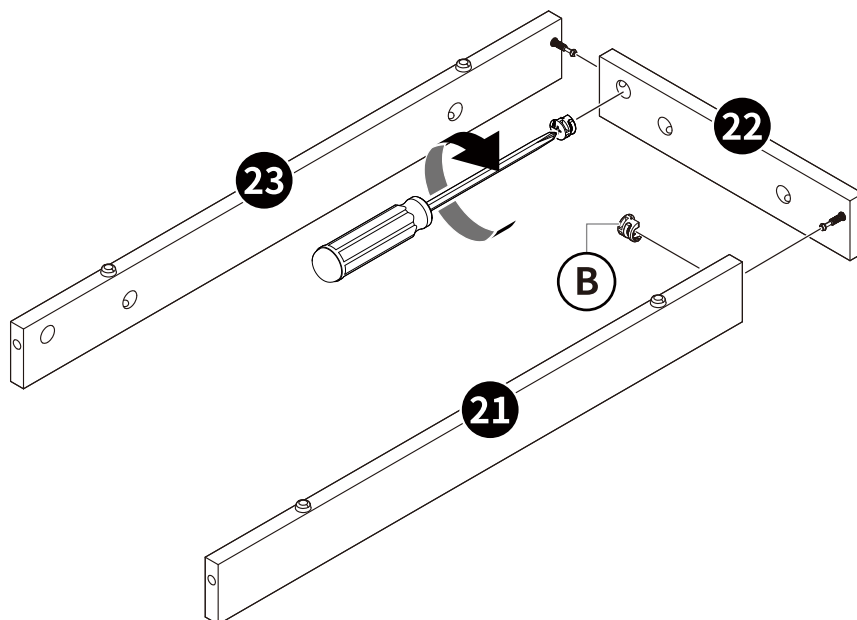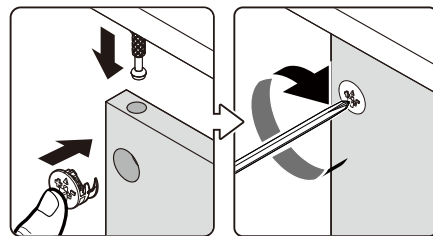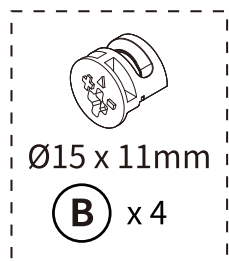

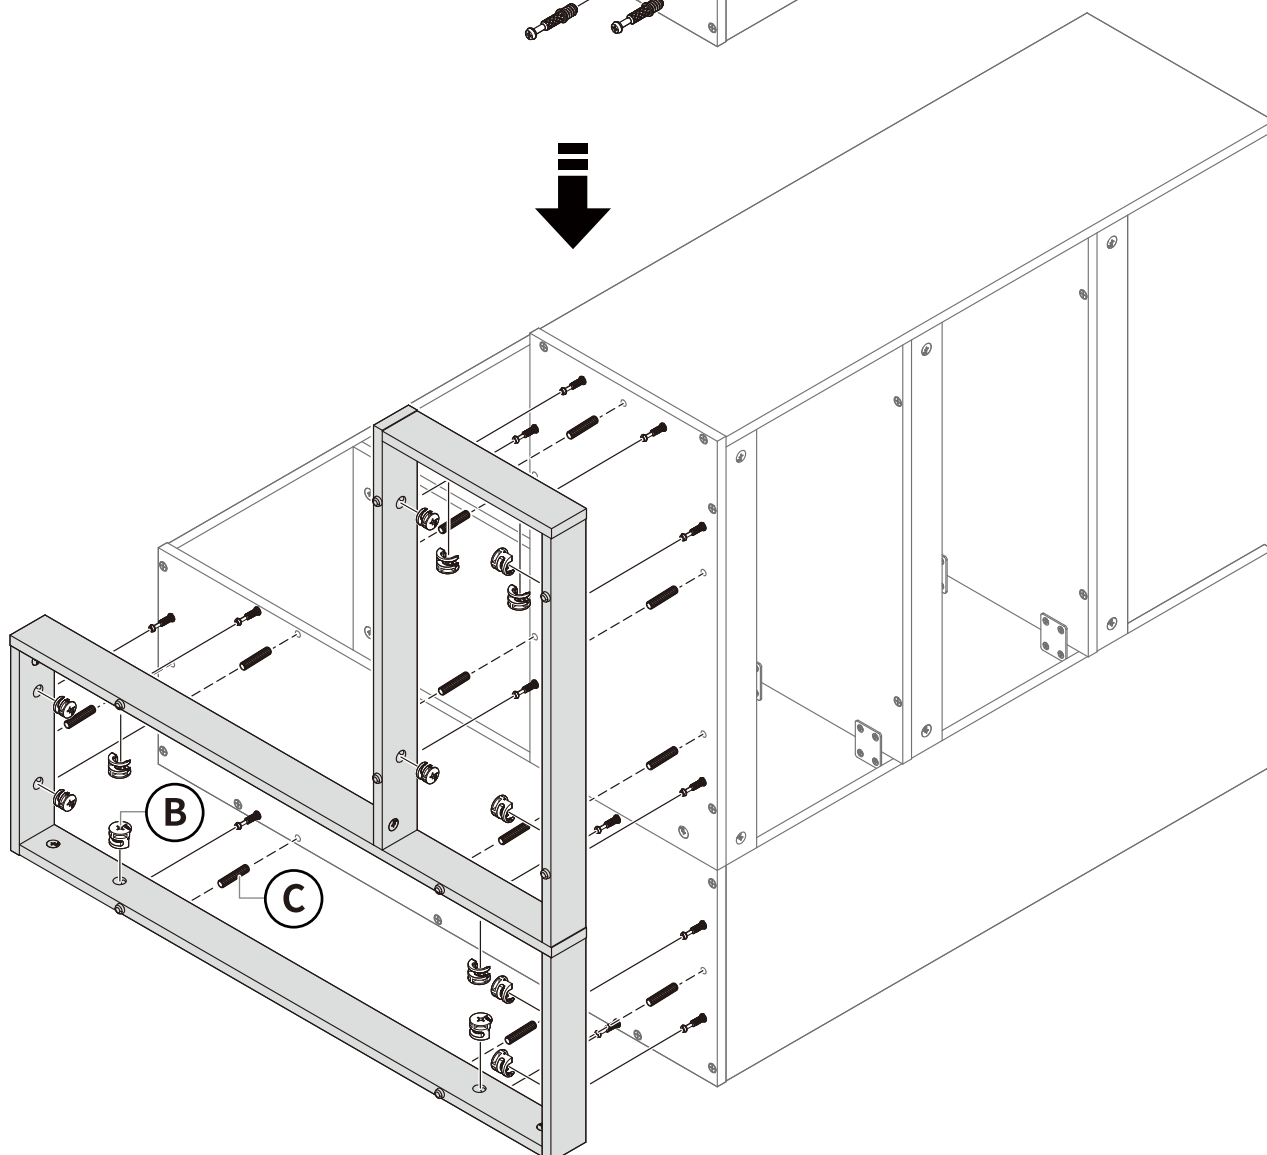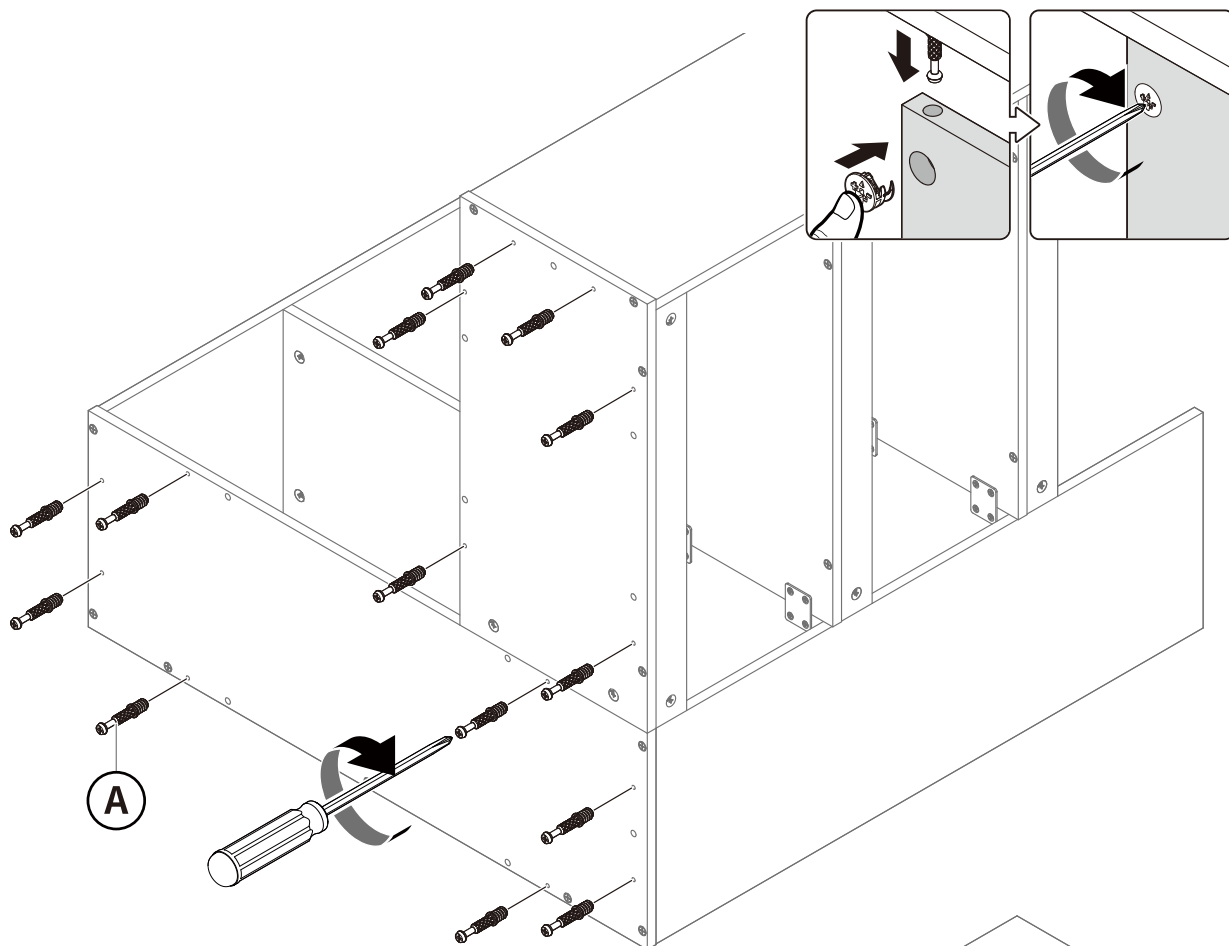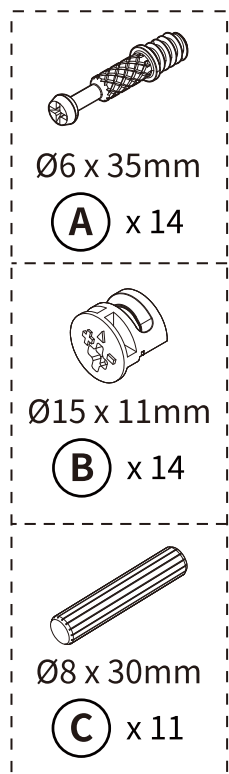


3





Ø15 x 11mm

(B) x 6




Ø8 x 30mm

(C) x 6

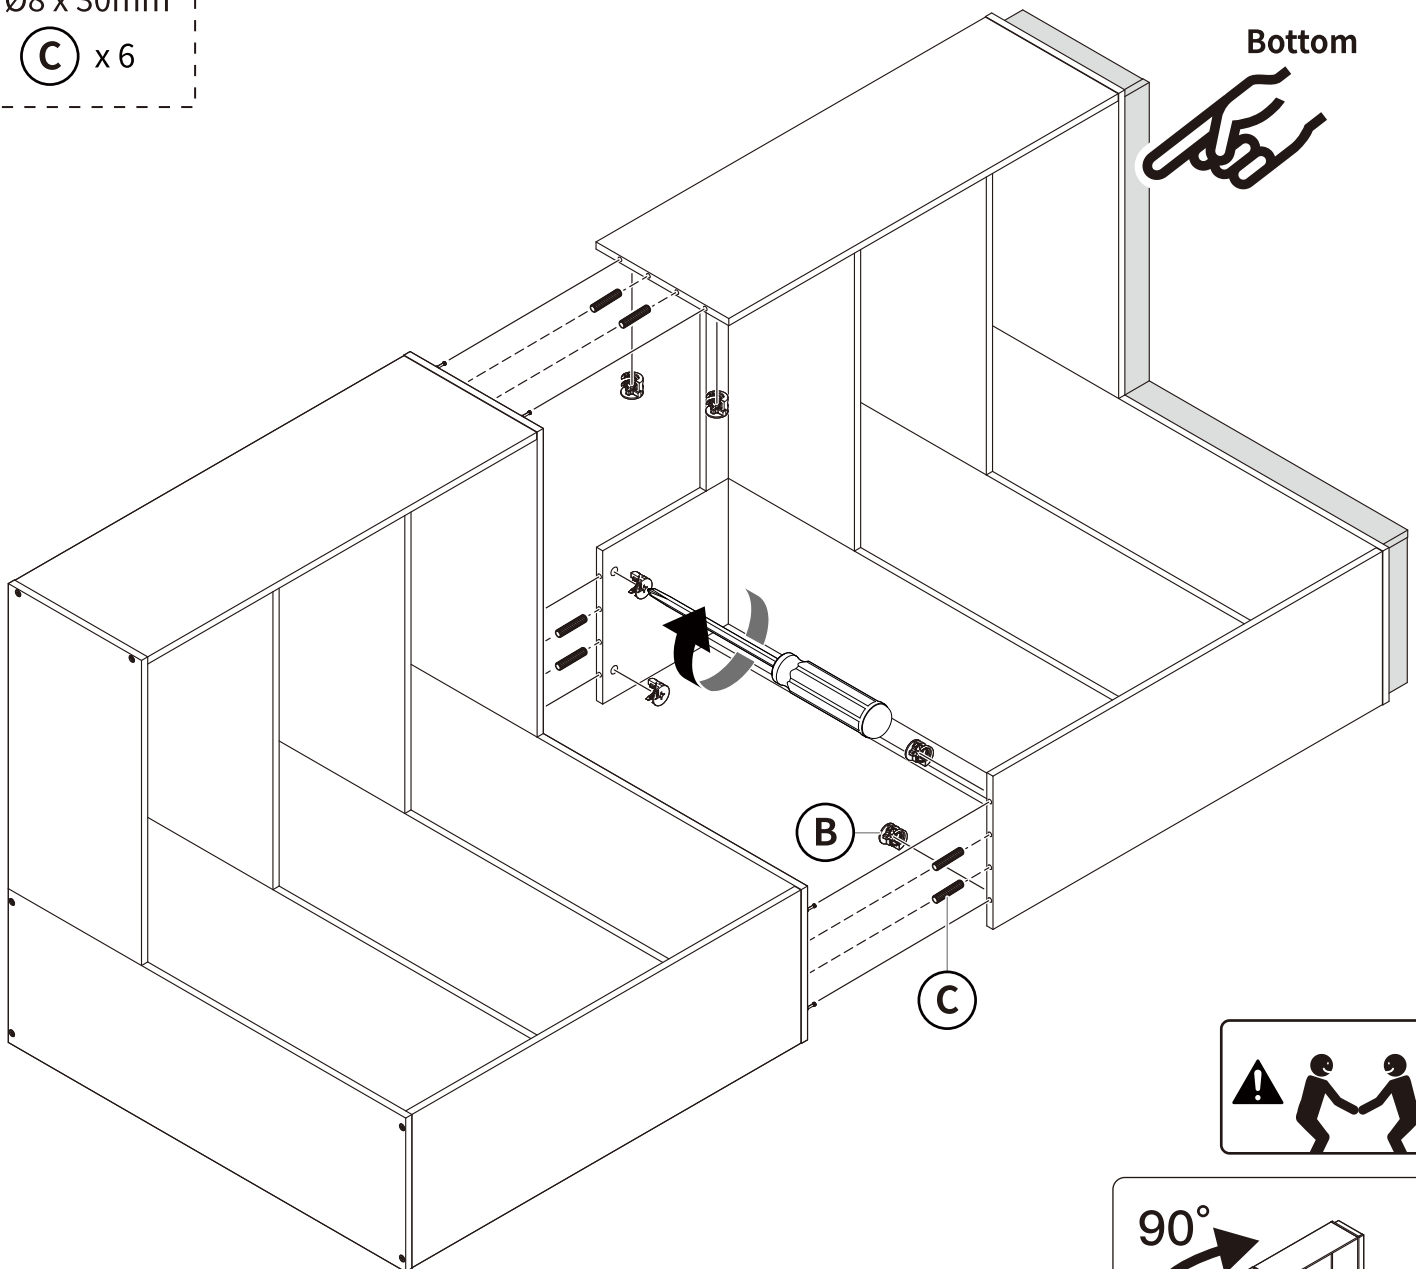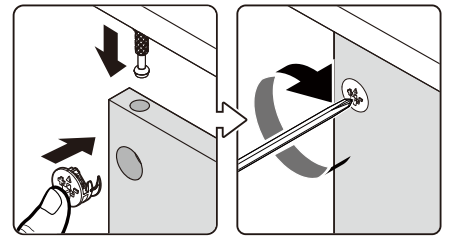




Bottom

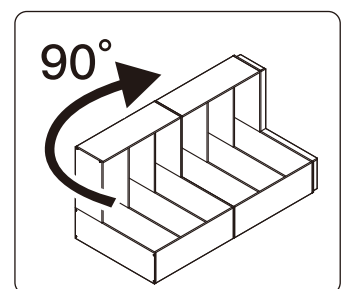



4

Installation Instructions:

1. Secure the anti-tip brackets to the top of the unit using short screws.
2. Determine where the unit is to be placed. If you have a wood stud wall, locate a stud using a stud finder and mark the centerline.
3. Drill pilot holes in the wall at the appropriate height.
4. Secure the anti-tip brackets to the wall using long screws. Use wall anchors for solid concrete. Do not use them on wood studs.

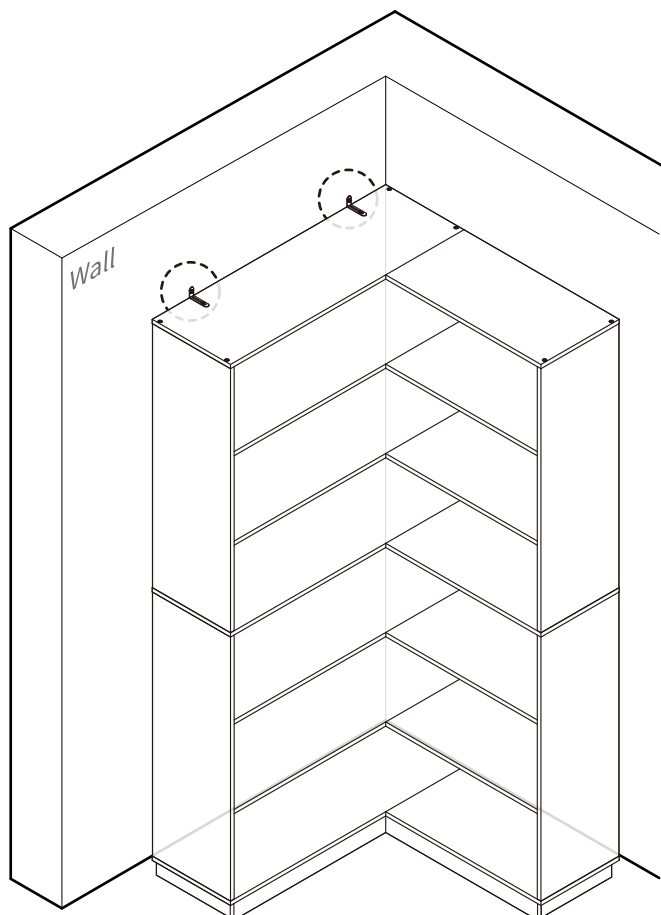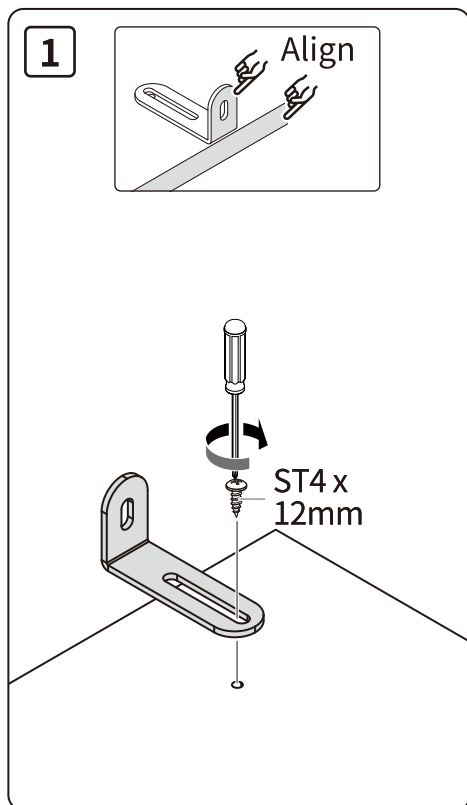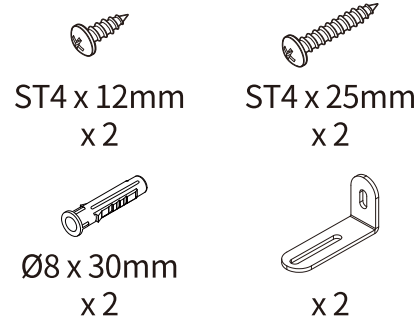

2 A. Wood Studs

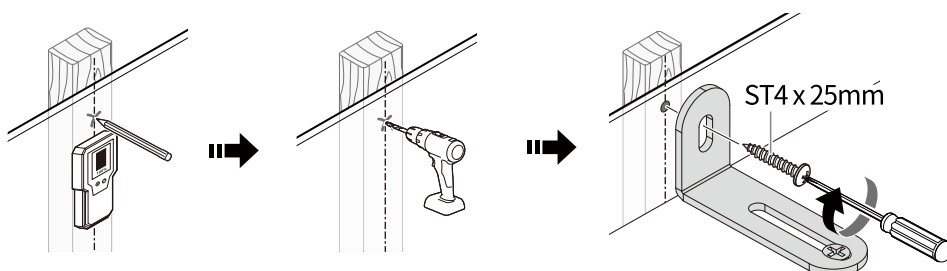

B. Solid Concrete

