


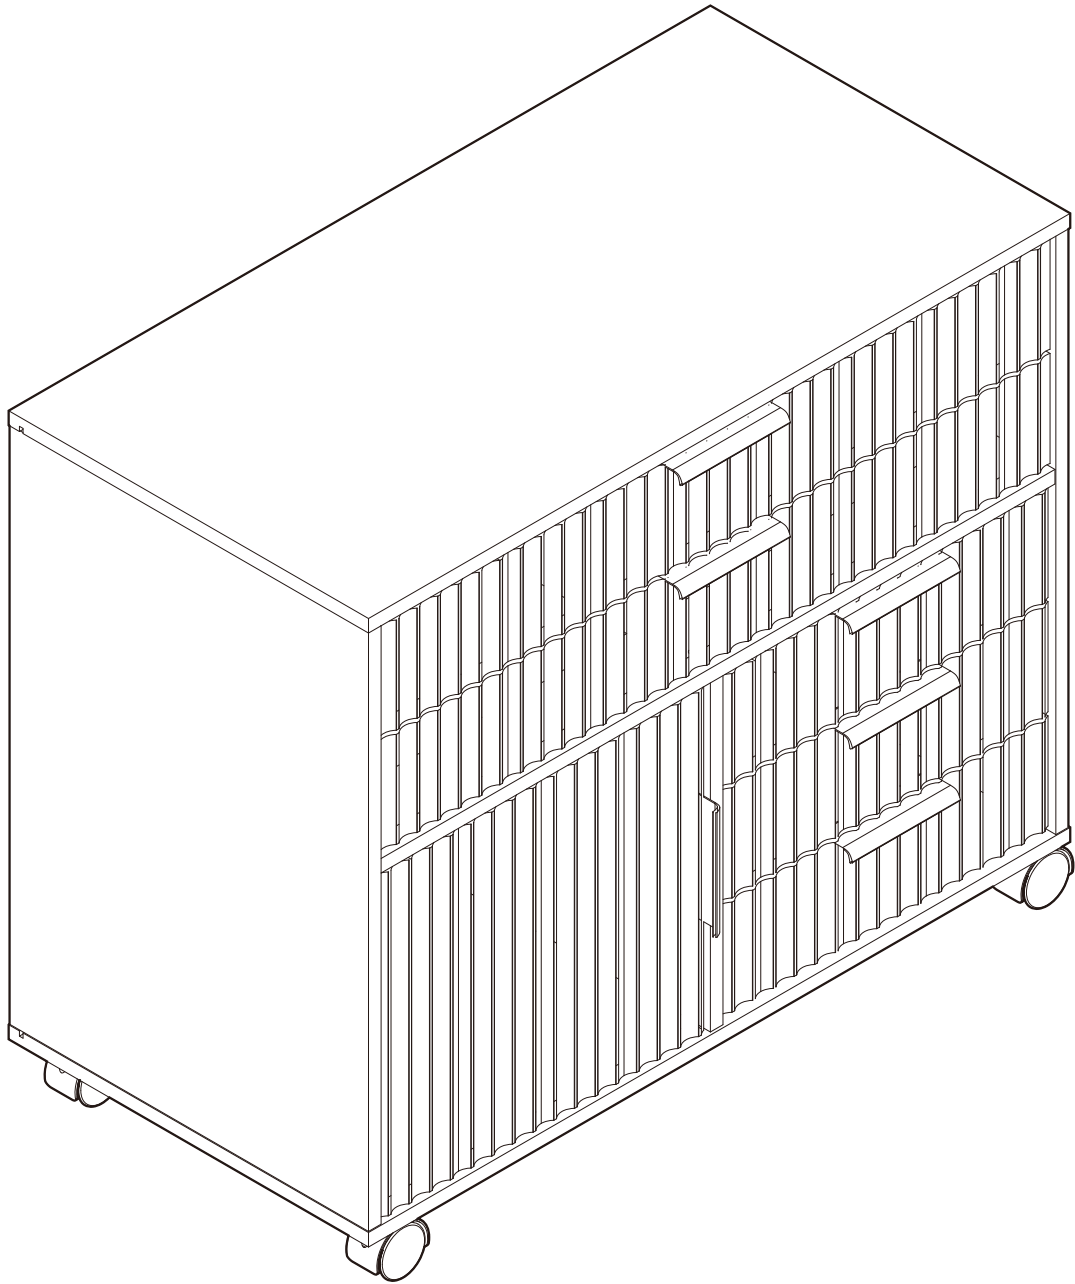
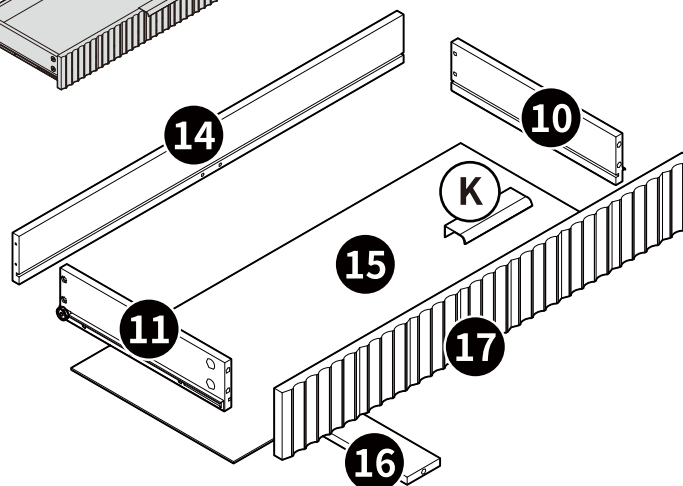
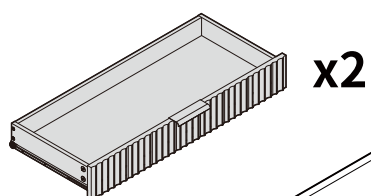
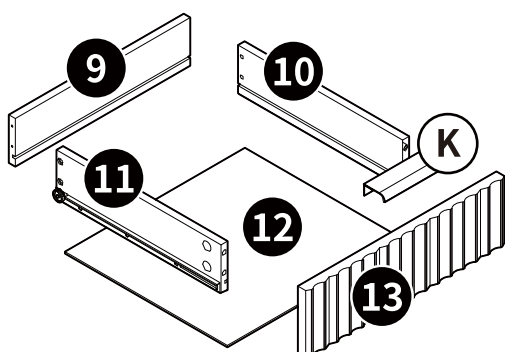
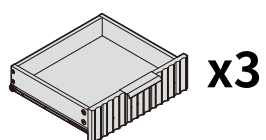
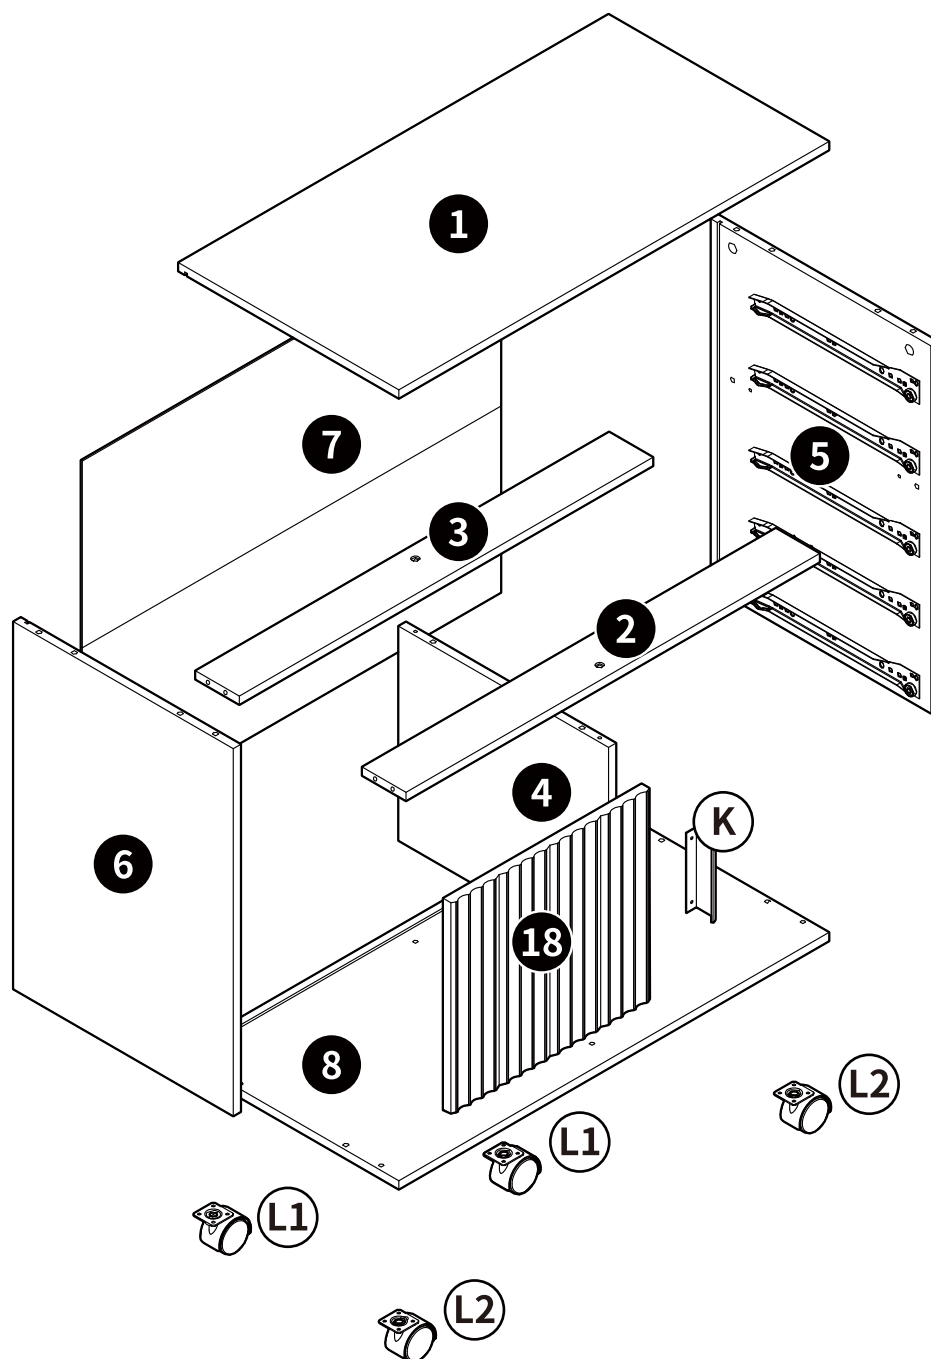
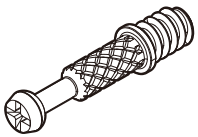
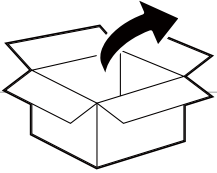


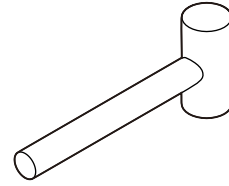

PDBFC03

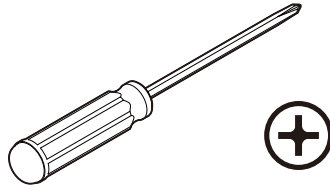

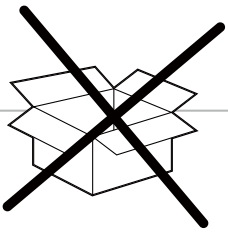

Ø6 x 35mm

(A) x 30




Ø15 x 11mm

(B1) x 8




Ø15 x 9mm

(B2) x 22

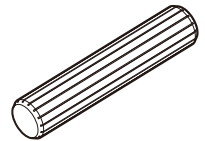


Ø8 x 30mm

(C) x 16

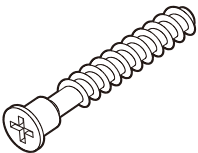

Ø6 x 50mm

(D) x 8




Ø4 x 12mm

(E) x 20




Ø3 x 17mm

(F) x 10



(G) x 10

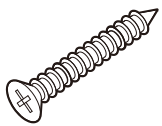

Ø4 x 38mm

(H) x 24




Ø3.5 x 12mm

(I) x 12




Ø3.5 x 15mm


(J) x 12

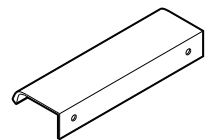


(K) x 6

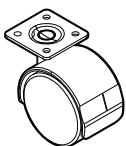


(L1) x 3

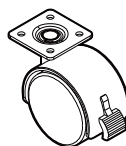

(L2) x 2

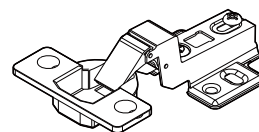





(M) x 2

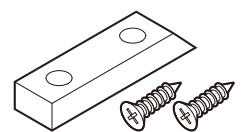



Ø3 x 12mm





(N) x 1







Installation Guide


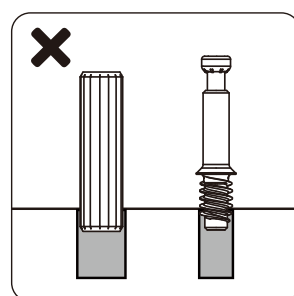
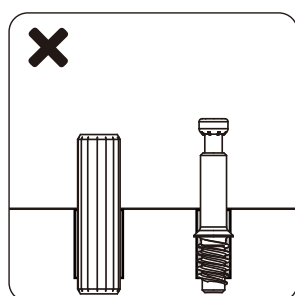
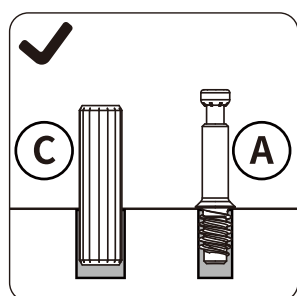
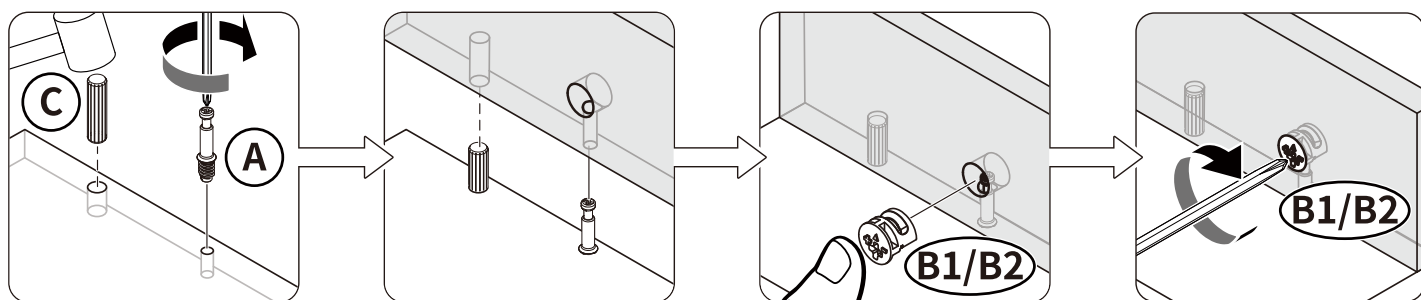








1





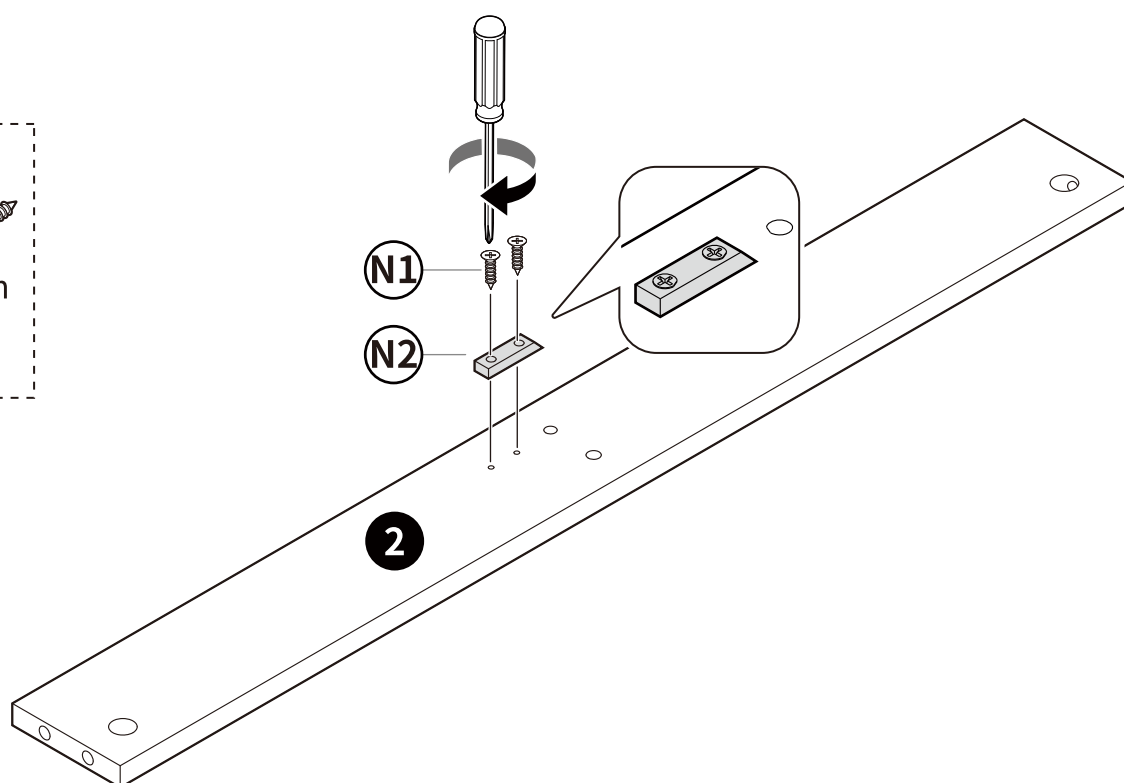
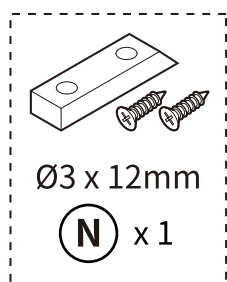


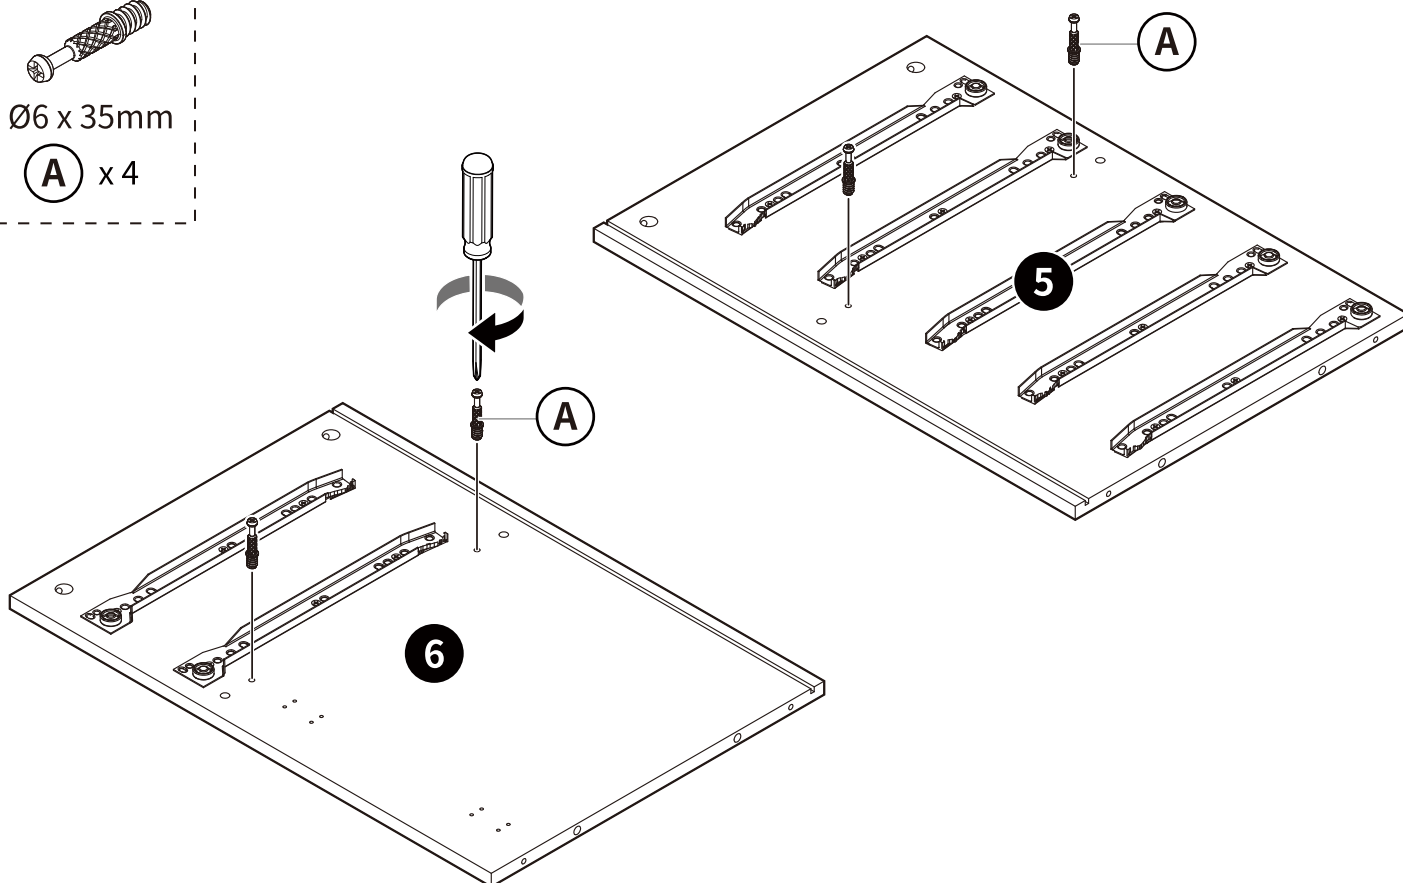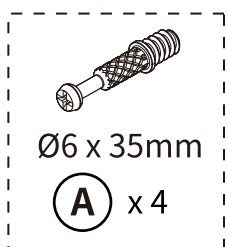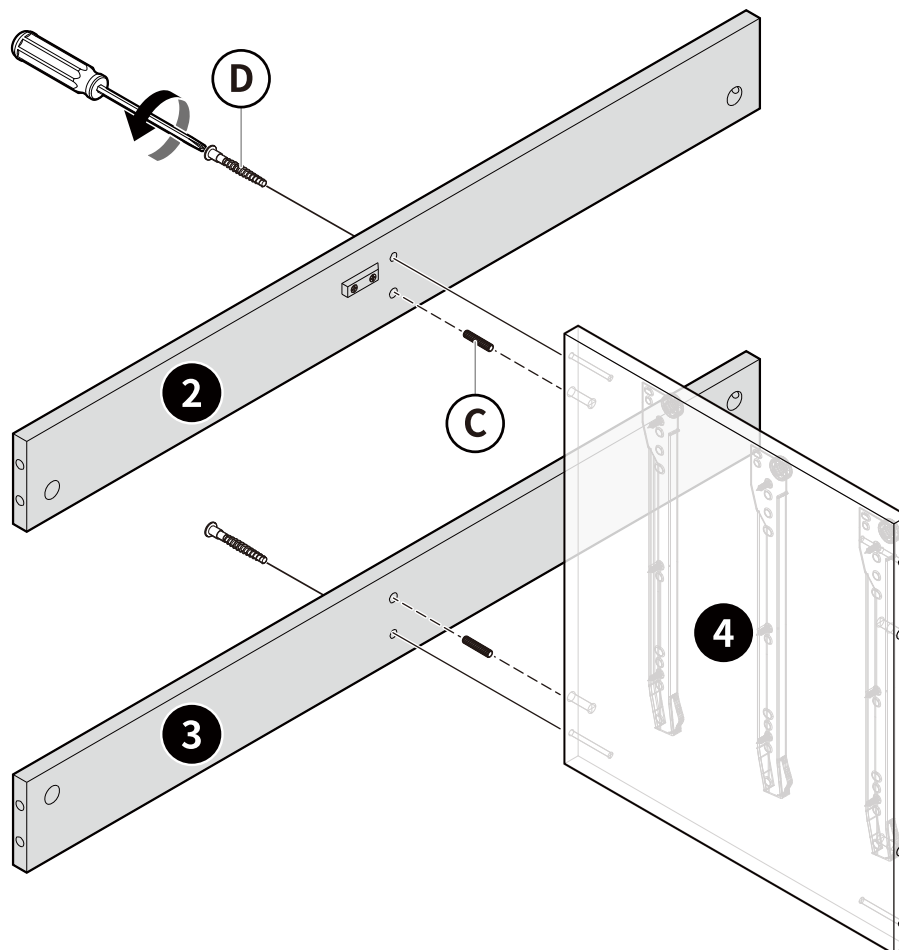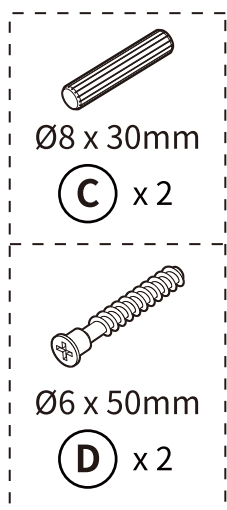

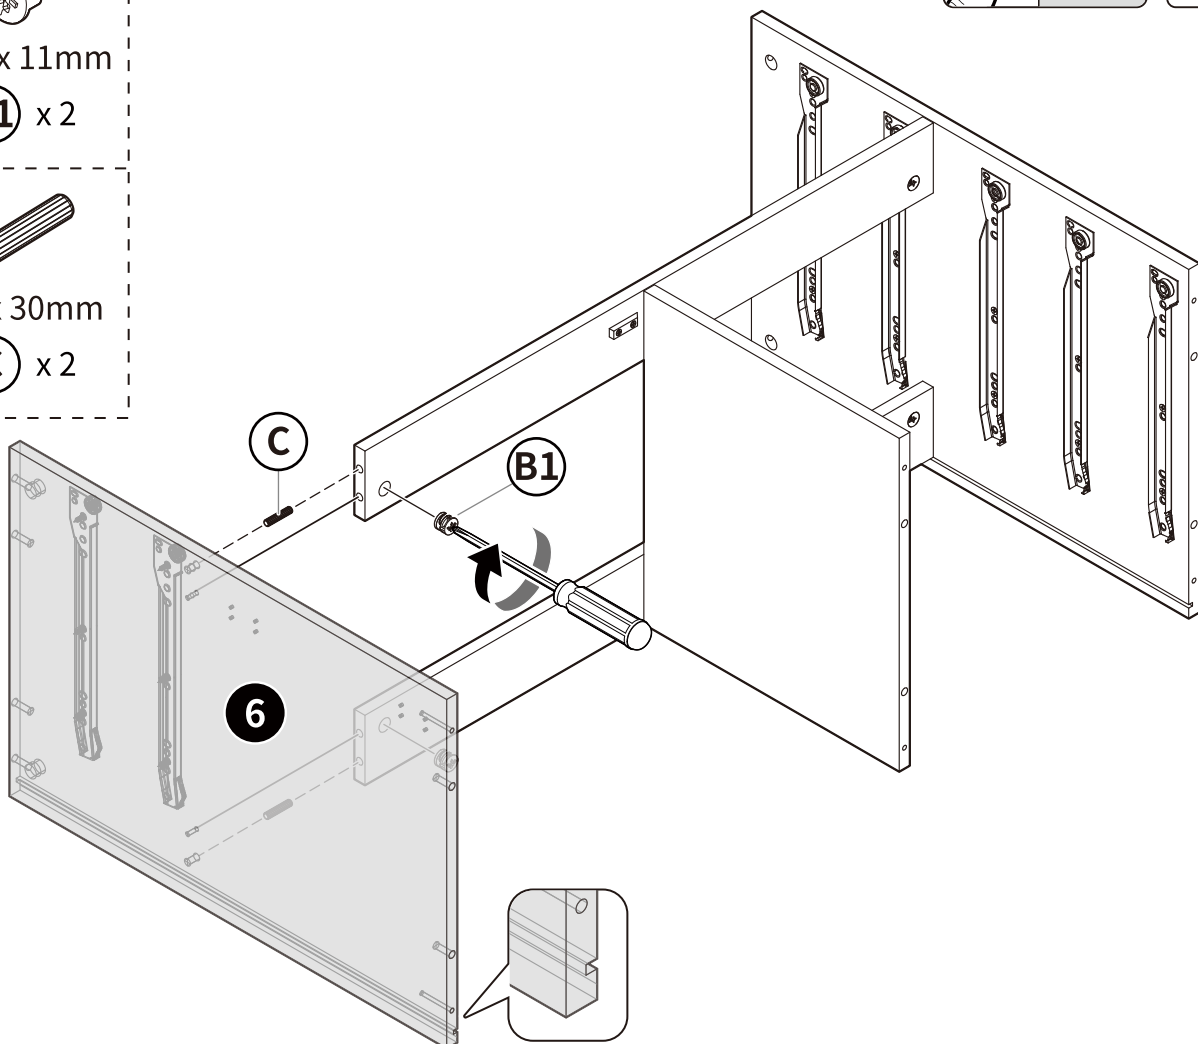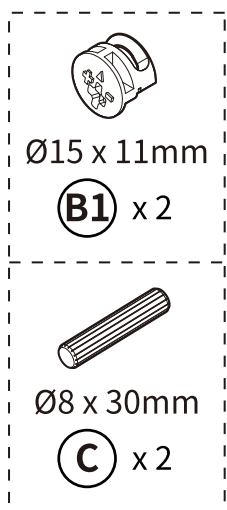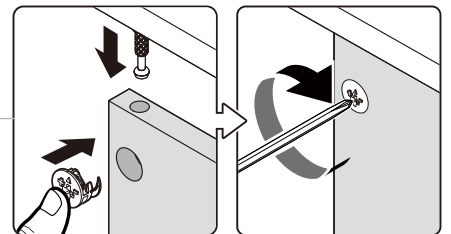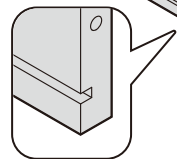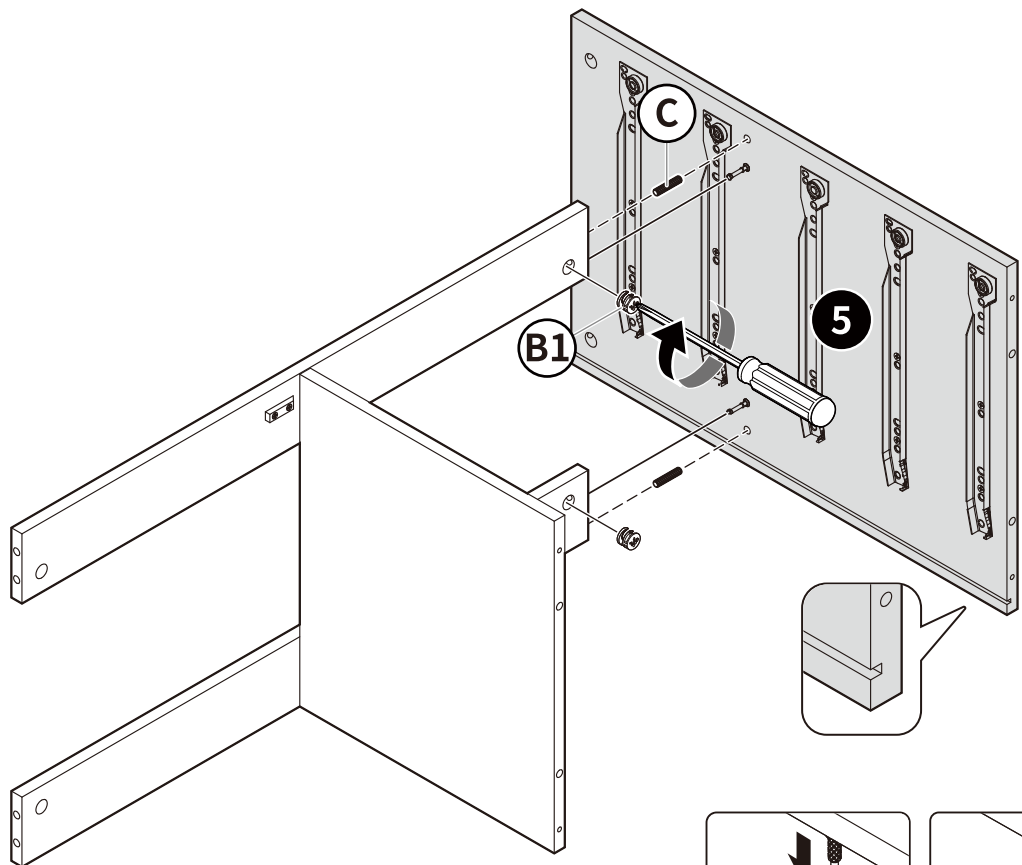
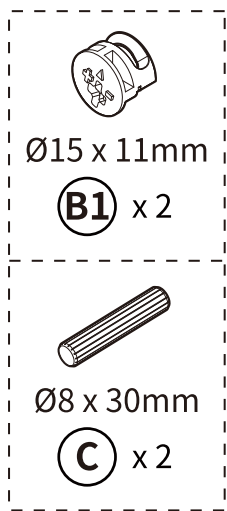


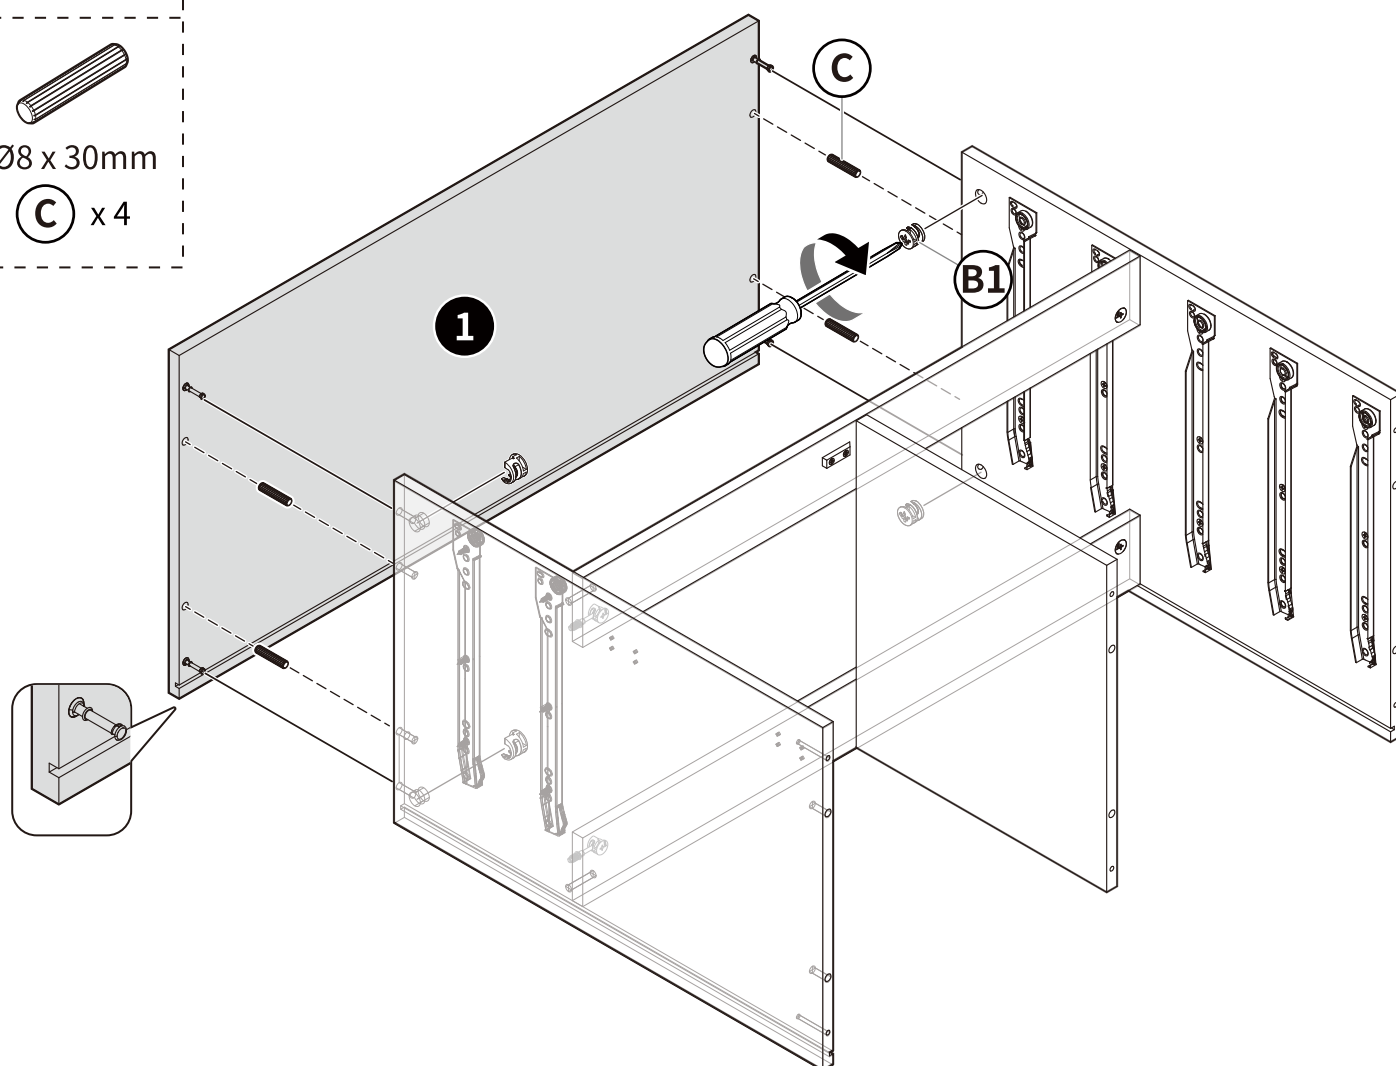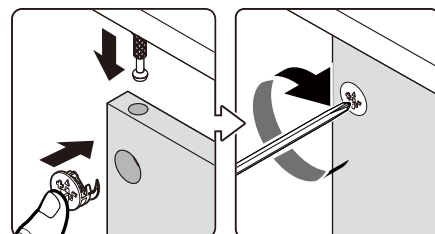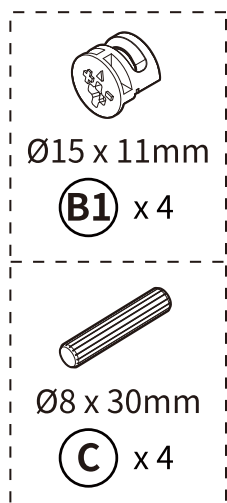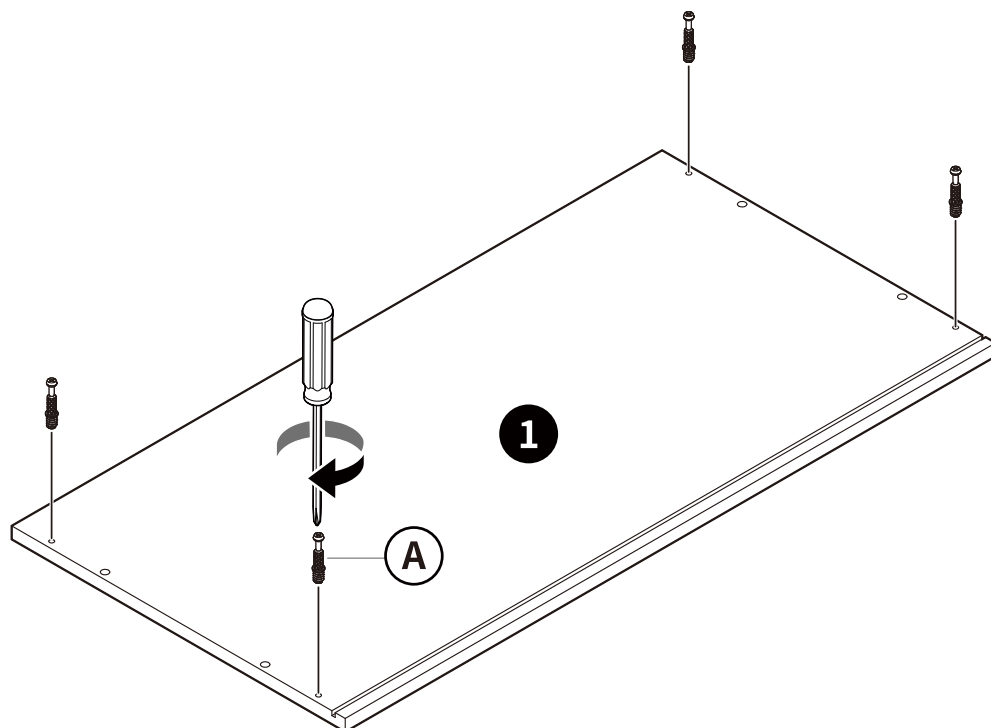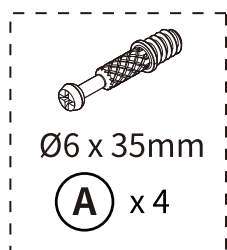

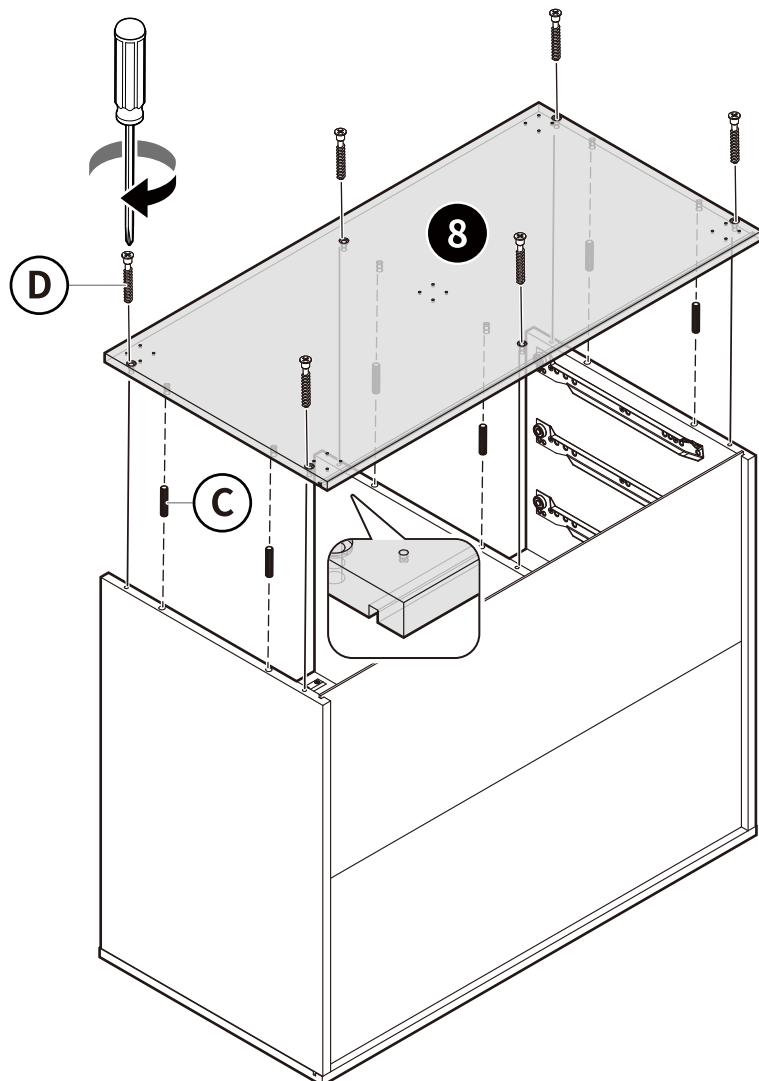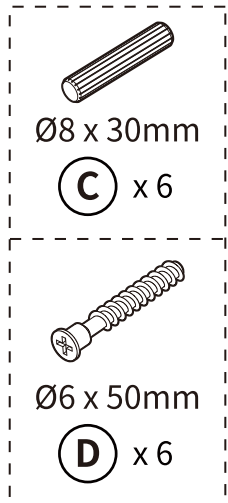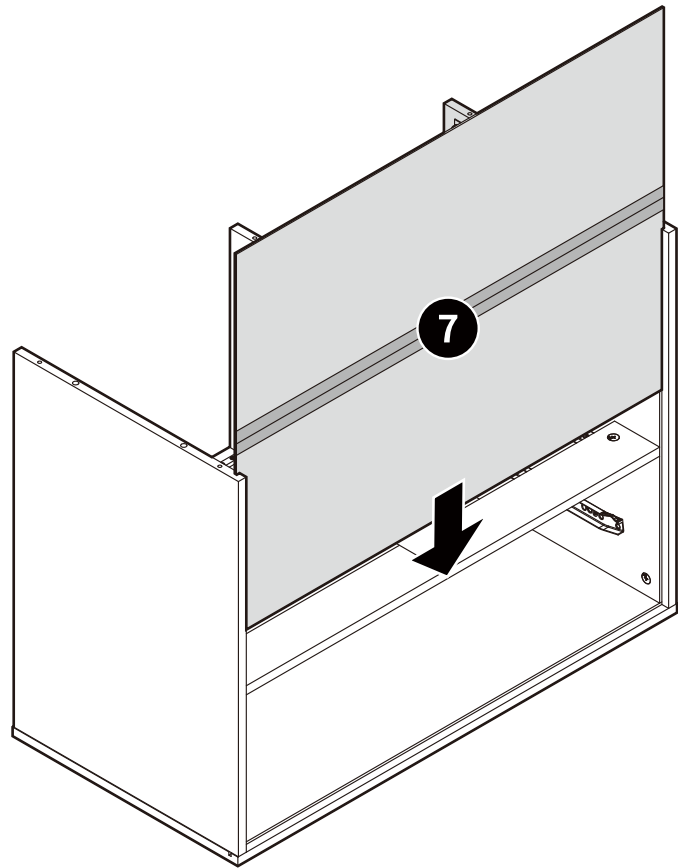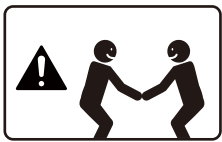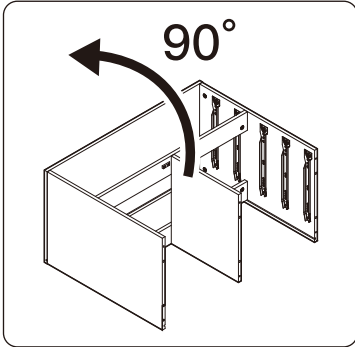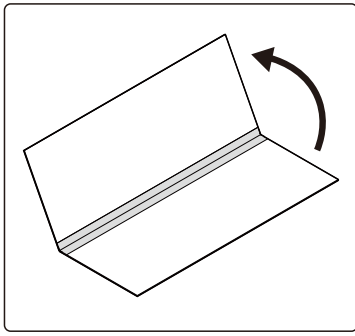


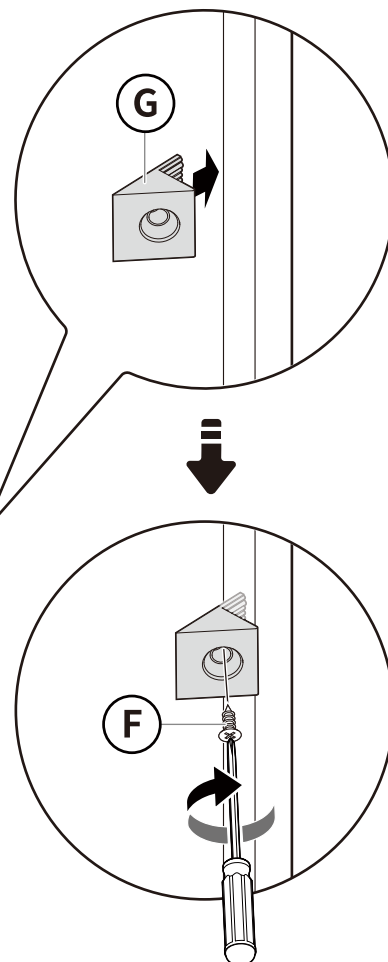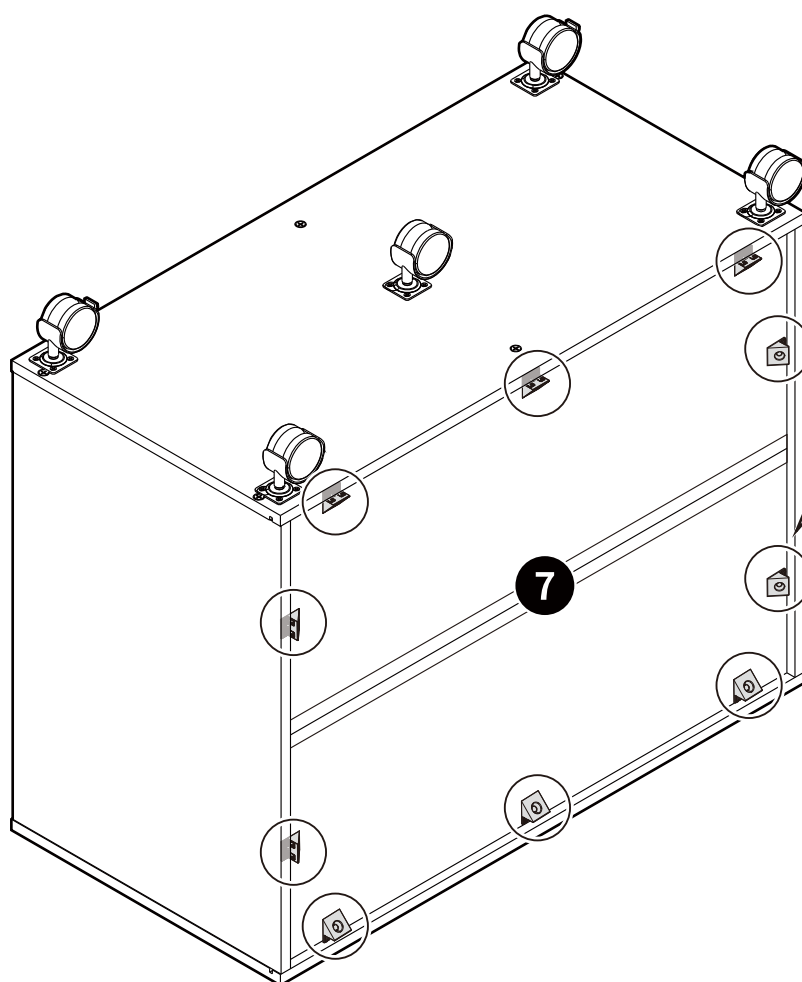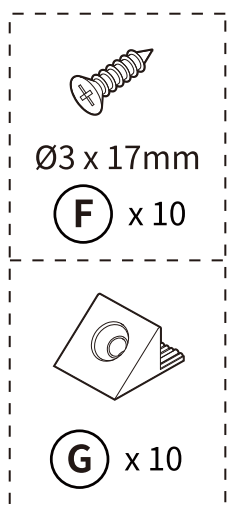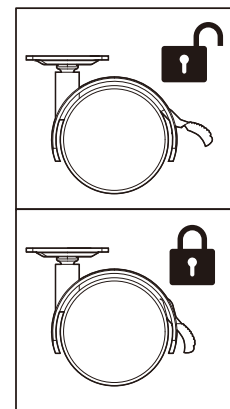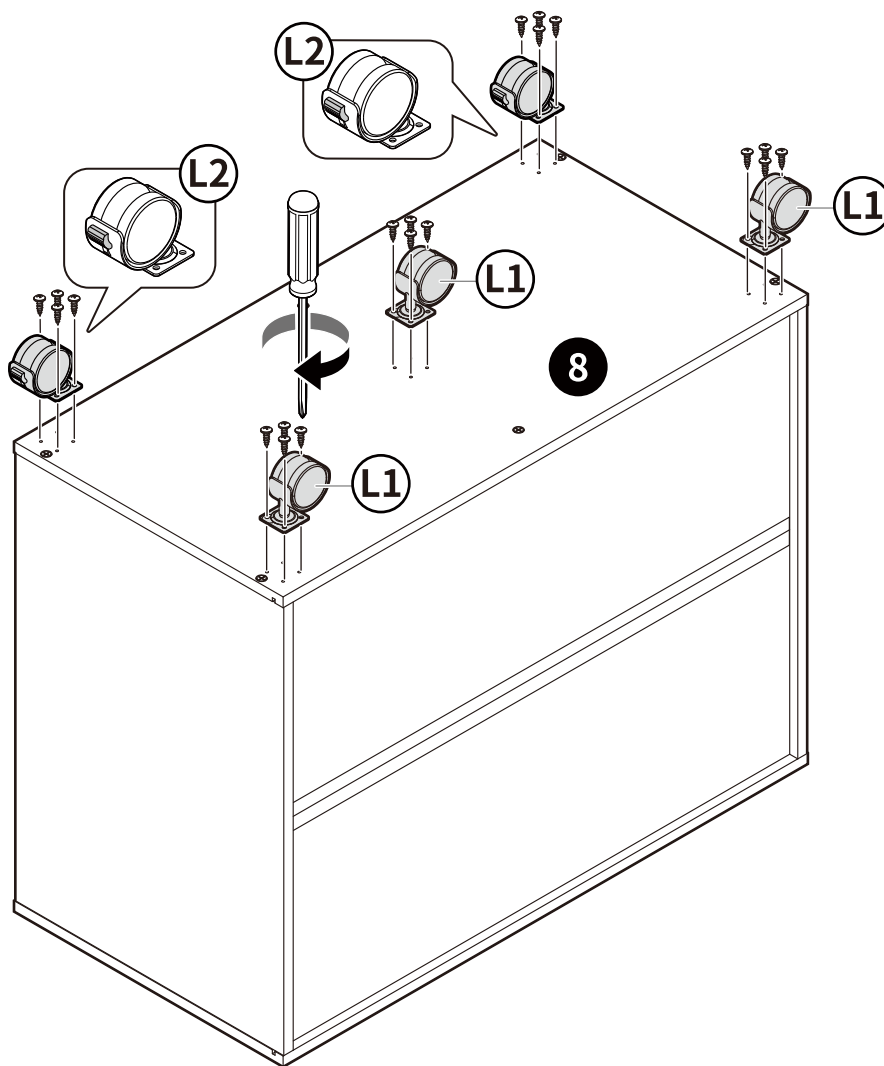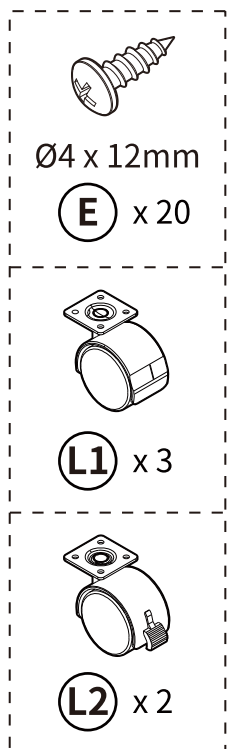



2

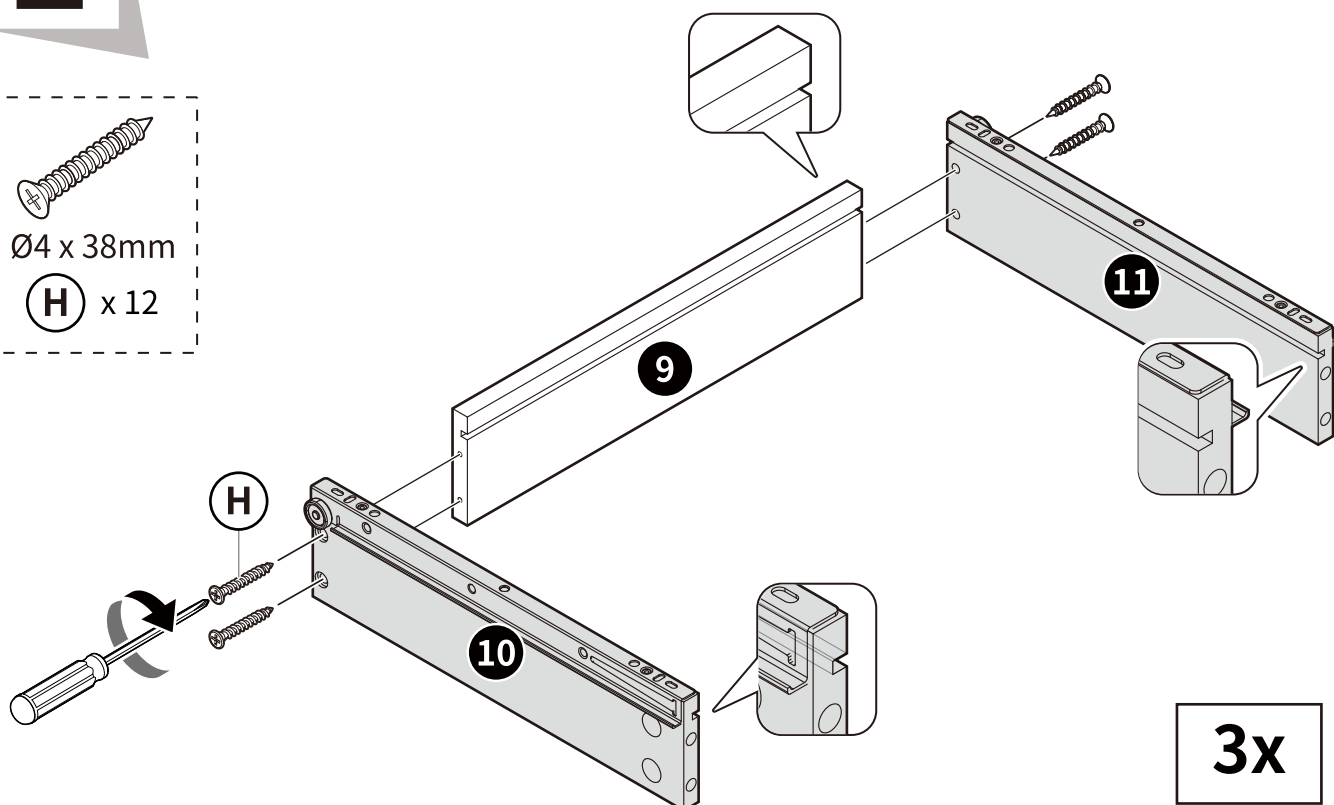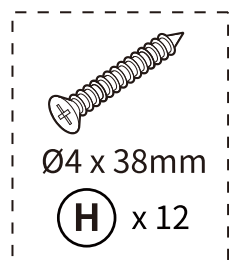



3x

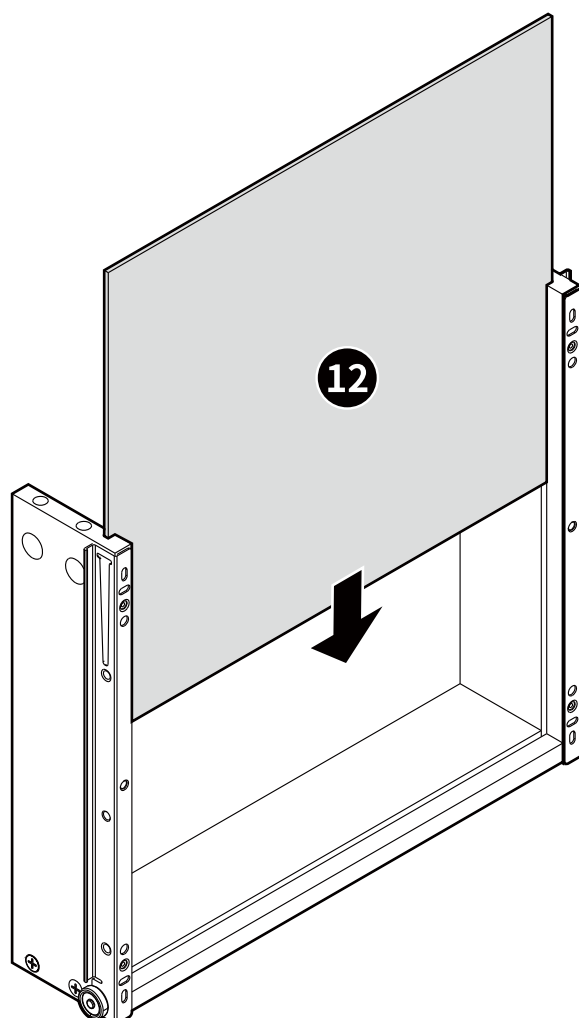



3x

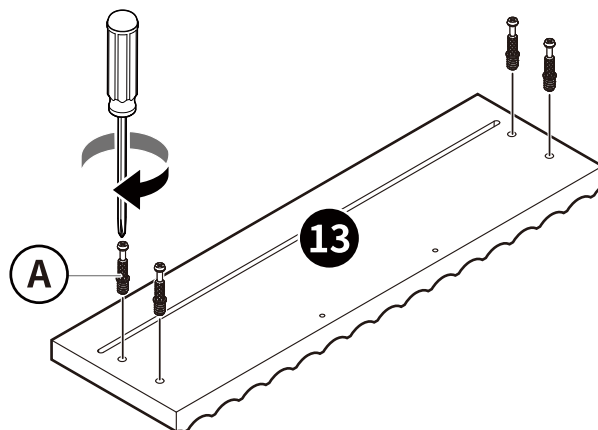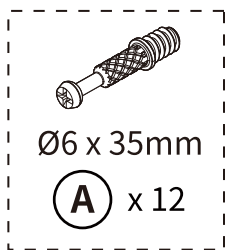

3x

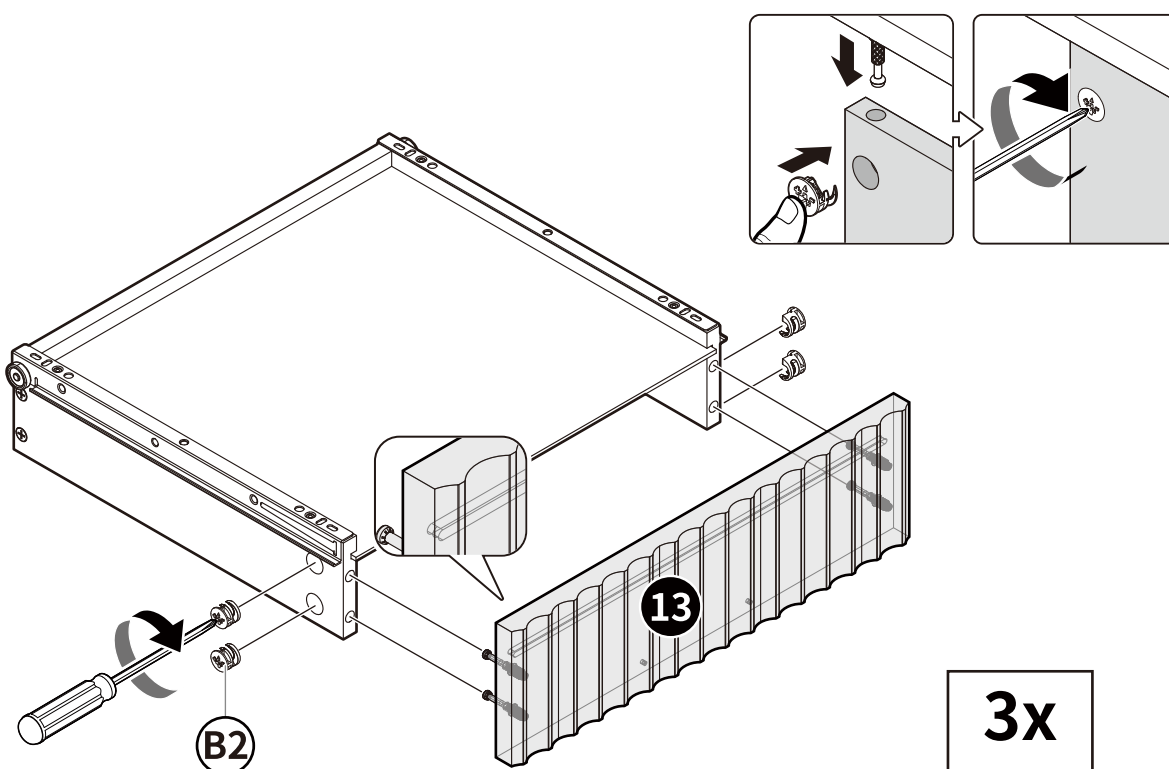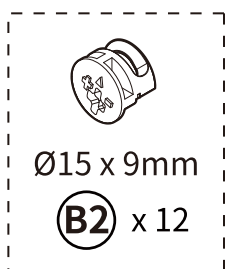


3x

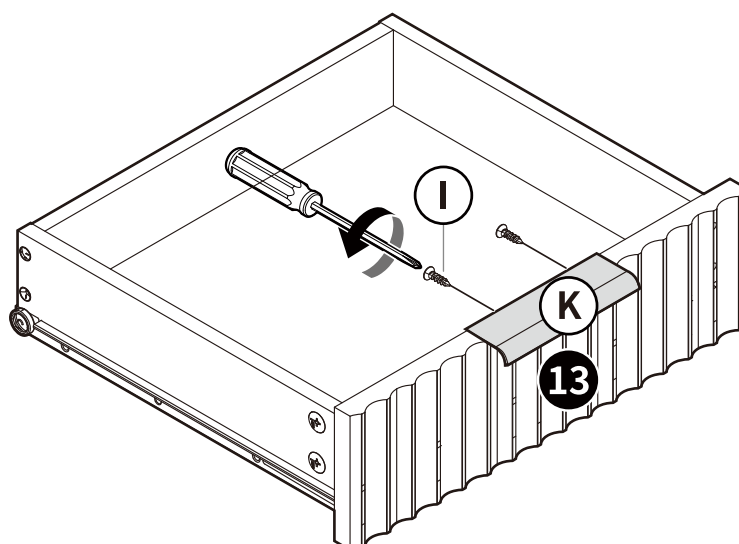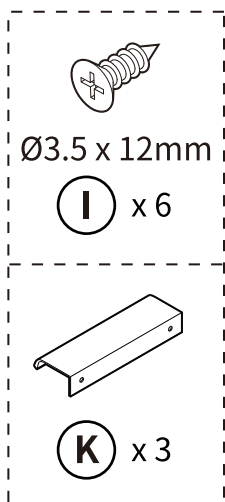

3x

3




$\textcircled{\text{H}}$ x 8



2x





2x





(H) x 4





2x

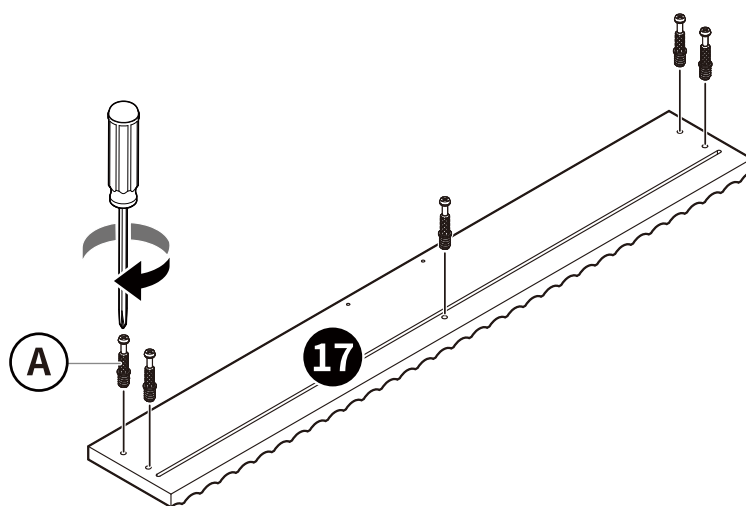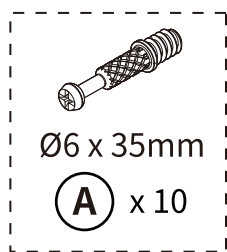

2x

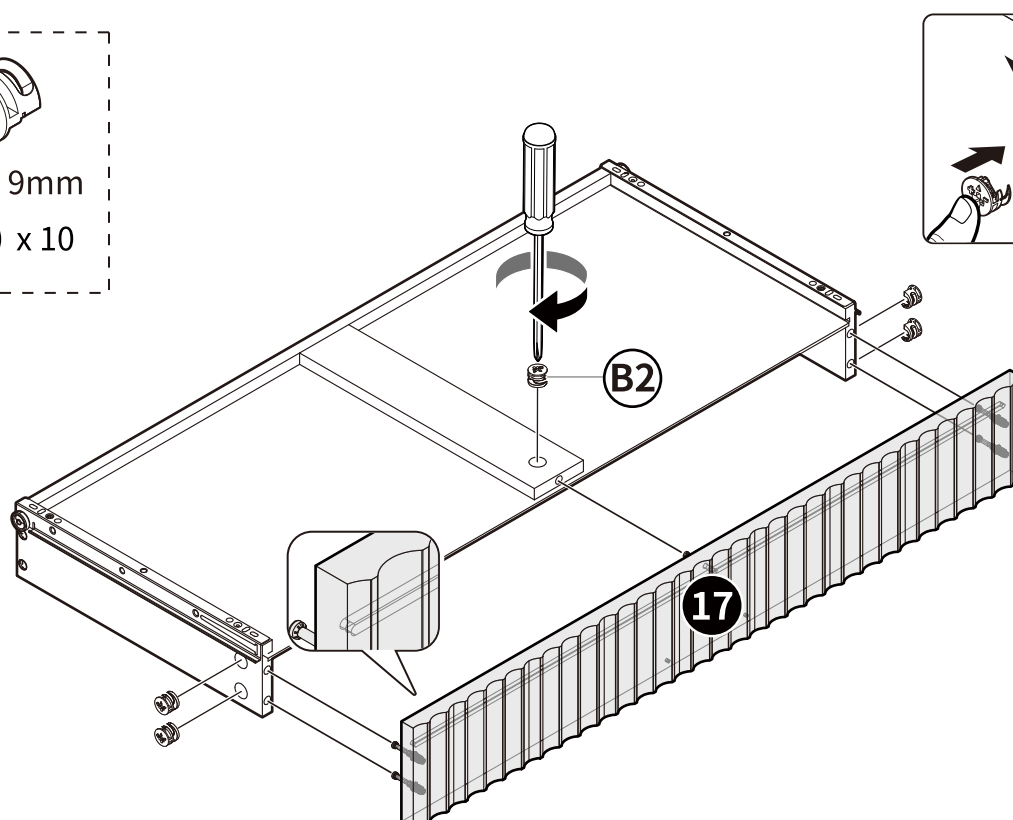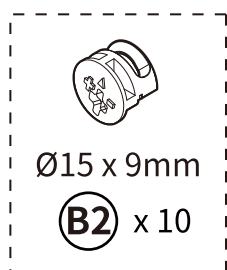


2x

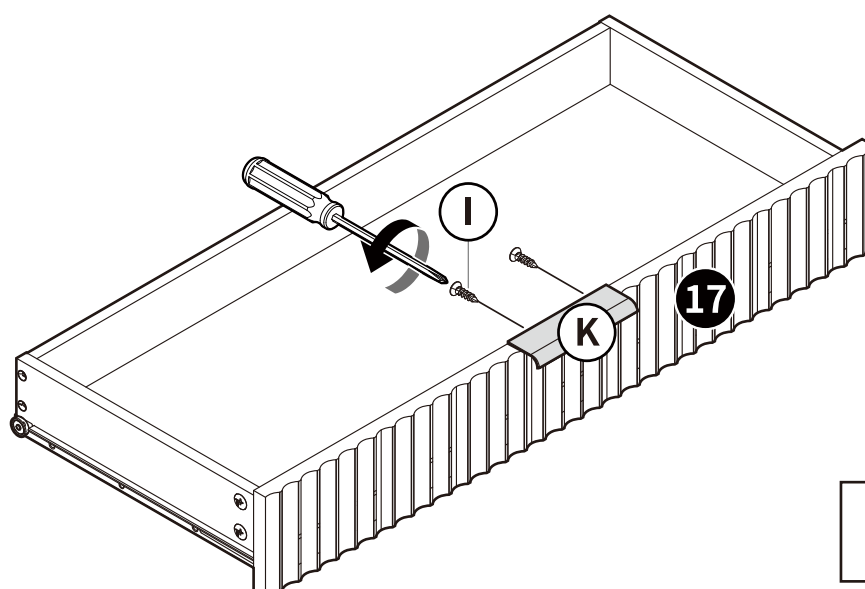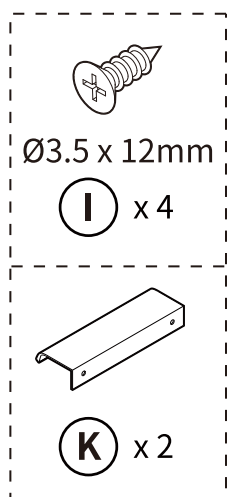


2x

4

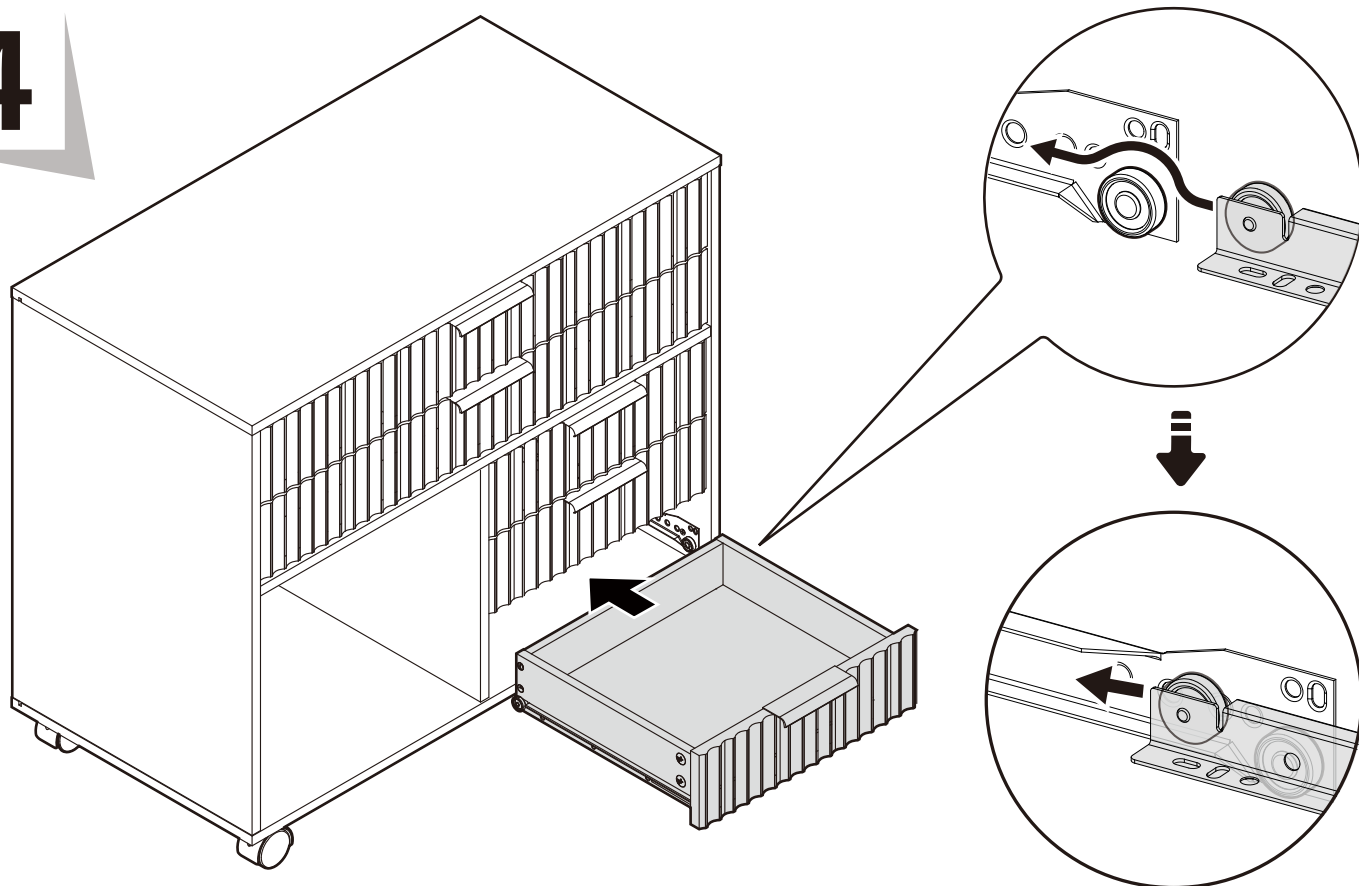

Drawer Silde Under Cabinet Slide

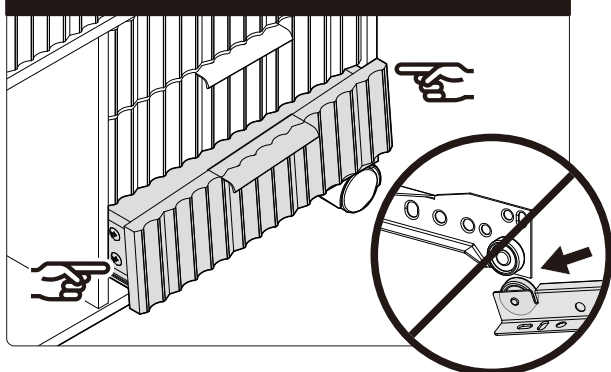

Drawer Slide Not Aligned



5

